# **Quad-4 Hall Effect Pickup**

### Installation and Technical Data Guide

Rev 06/17

### **Description:**

The Quad-4 Hall Effect Pickup is a microprocessor-based sensors for use with the JV-80/-90KL series of positive displacement flow meters. The Quad-4 sensor can detect both uni- and bi-directional flow. The sensors' mode of operation is determined by an output selection switch located inside the housing. The Quad-4 detects the rotation of the flow meter gears and emits a frequency signal proportional to flow. The output signal is a square wave pulse which has a duty cycle of approximately 50%.

Quad-4 signal outputs are protected with a self-resetting fuse. This fuse has a 50mA nominal trip point. When a trip occurs, turn off power to the sensor and remove output load to reset fuse. The sensor has two different output configurations: sinking output when jumpers JP1 & JP2 are removed and sourcing when jumpers JP1 & JP2 are shorting pins.

The Quad-4 sensor circuit board is equipped with a red and green LED. The red LED is a status LED which, when the sensor is operating properly, will flash once every 4 seconds, a fast flash will indicate a failure of one or more of the pick-ups. The green LED indicates the pulse of the input signal. Note that signals above 20Hz will look as solid green.

#### Installation:

- Ensure that the flowmeter sensor cavity is free of debris prior to installing pickup
- Install flow meter and sensor CYCLE POWER or sensor will not function properly!!
- Sensor is equipped with an output test feature for readouts before initial running of your system

### TEST FEATURE: Note: Power must be cycled for new setting to take effect

- Switch setting 8 will cause the pick-up to output a 10 Hz (+/- 20%) Phase = +90 deg pulse output, simulating low flow conditions without flow through the meter
- For sinking outputs remove shorting block from JP1 & JP2
  For sourcing outputs place shorting block across JP1 & JP2 (factory default)
- Switch setting 9 will cause the pick-up to output a 250 Hz (+/- 20%) Phase = -90 deg pulse output, simulating medium flow conditions without flow through the meter


### NOTE: WIRING SHOULD BE INSTALLED BY A QUALIFIED INSTRUMENTATION TECHNICIAN


### **Electrical Connection for Pin Connector**

Pin Number	<u>Function</u>
1	NC
2	Output 2
3	NC
4	Output 1
5	Ground
6	Supply

Pinout looking at male connector on sensor

Top view of circuit board with view of LED's and switch

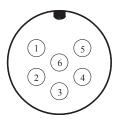

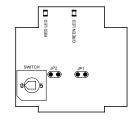

### **AW Company Wiring Color Code**

	Pin Number	Wire Color
Signal 2:	2	Green
Signal 1:	4	White
Ground:	5	Black
Supply Voltage:	6	Red

### **Quad-4 Operating Modes**

<u>Switch</u>	Output 1	Output 2	
0	Flow Direction	Signal 2	
1	1x frequency +90 deg phase		
2	Flow Direction	2x frequency	
3	2x frequency +90 deg phase		
4	Flow Direction	4x frequency	
5	Both outputs 4x frequency in phase		
6	Reserved		
7	Forward pulses (2	2x) Reverse pulses (2x)	
8	Test: S1 & S2 == 10 Hz (+/- 20%) Phase = +90 deg.		
9	Test: S1 & S2 == 25	60 Hz (+/- 20%) Phase = -90 deg.	


Note: Power must be cycled for new setting to take effect



## **Quad-4 Dual Hall Effect Pickup**

### Installation and Technical Data Guide

Rev 06/17

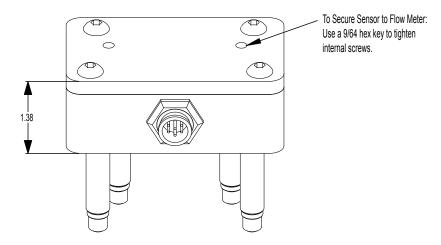

### **Technical Data:**

Supply Voltage: +10 to 28 Volt DC Supply Current: 75 mA @ 24 VDC

Duty Signal: 50% ± 15% Minimum Signal: 0.5 Hz

Maximum Signal: 1,000 Hz


Frequency Output: Flow dependent, up to 2,000 Hz

Driving Capacity: 50 mA Max resistive load

Output Impedance: ~ 40 Ohm - analog switch and self-resetting fuse


Temperature Range: -40° F to 185° F (-40° C to 85° C)

#### **Sinking Output Circuit**

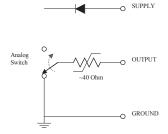

- Output selection jumper off: remove shorting block from JP1 & JP2
- User may need to add external components to interface to displays or other instruments
- · User must limit output voltage to Supply -1V
- · Max current sinking capability: 50mA

#### Sourcing Output Circuit - Default from Factory

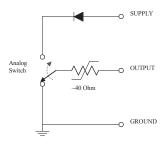

- Output selection jumper on: place shorting block across JP1 & JP2
- Signal output square wave :
   V<sub>high</sub> = Supply -1V @ no output load
   V<sub>low</sub> = 0.1V
- Max sourced output voltage: Supply -0.5V
  Max current sourcing capabilities: 50mA

