


# User's Guide

**EXTECH**  
INSTRUMENTS

## True RMS Multimeter

### Extech 411

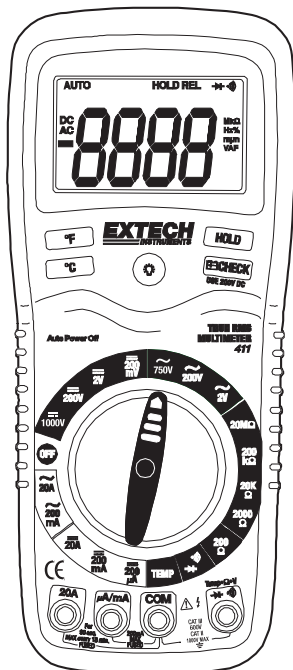

## Introduction

---

Congratulations on your purchase of the Extech 411 (part number EX411) True RMS Multimeter. This meter measures AC/DC Voltage, AC/DC Current, Resistance, Diode Test, and Continuity plus Thermocouple Temperature. Proper use and care of this meter will provide many years of reliable service.

## Safety

---




This symbol adjacent to another symbol, terminal or operating device indicates that the operator must refer to an explanation in the Operating Instructions to avoid personal injury or damage to the meter.

**WARNING**

This **WARNING** symbol indicates a potentially hazardous situation, which if not avoided, could result in death or serious injury.

**CAUTION**

This **CAUTION** symbol indicates a potentially hazardous situation, which if not avoided, may result damage to the product.

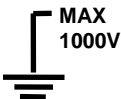

This symbol advises the user that the terminal(s) so marked must not be connected to a circuit point at which the voltage with respect to earth ground exceeds (in this case) 1000 VAC or VDC.



This symbol adjacent to one or more terminals identifies them as being associated with ranges that may, in normal use, be subjected to particularly hazardous voltages. For maximum safety, the meter and its test leads should not be handled when these terminals are energized.



This symbol indicates that a device is protected throughout by double insulation or reinforced insulation.

### OVERVOLTAGE CATEGORY III

This meter meets the IEC 610-1-95 standard for OVERVOLTAGE CATEGORY III. Cat III meters are protected against overvoltage transients in fixed installation at the distribution level. Examples include switches in the fixed installation and some equipment for industrial use with permanent connection to the fixed installation.

### SAFETY INSTRUCTIONS

This meter has been designed for safe use, but must be operated with caution. The rules listed below must be carefully followed for safe operation.


1. **NEVER** apply voltage or current to the meter that exceeds the specified maximum:

Input Protection Limits	
Function	Maximum Input
VAC	750V DC/AC
V DC or V AC	1000V DC/AC, 200Vrms on 200mV range
mA DC	200mA 250V fast acting fuse
A DC	20A 250V fast acting fuse(30 seconds max every 15 minutes)
Ohms, Continuity	250Vrms for 15sec max

2. **USE EXTREME CAUTION** when working with high voltages.
3. **DO NOT** measure voltage if the voltage on the "COM" input jack exceeds 1000V above earth ground.
4. **NEVER** connect the meter leads across a voltage source while the function switch is in the current, resistance, or diode mode. Doing so can damage the meter.
5. **ALWAYS** discharge filter capacitors in power supplies and disconnect the power when making resistance or diode tests.
6. **ALWAYS** turn off the power and disconnect the test leads before opening the covers to replace the fuse or battery.
7. **NEVER** operate the meter unless the back cover and the battery cover is in place and fastened securely.

## Controls and Jacks


1. Rubber holster
2. 2000 count LCD display
3. Degrees F button
4. Degrees C button
5. Function switch
6. mA, uA and A input jacks
7. COM input jack
8. Positive input jack
9. Battery check button
10. Hold button
11. Backlight button

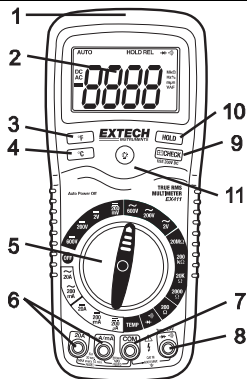

**Note:** Tilt stand and battery compartment are on rear of unit.

## Symbols and Annunciators

•)))	Continuity
▶	Diode test
⎓	Battery status
✖	Test lead connection error
μ	micro ( $10^{-6}$ ) (amps)
m	milli ( $10^{-3}$ ) (volts, amps)
k	kilo ( $10^3$ ) (ohms)
M	mega ( $10^6$ ) (ohms)
A	Amps
AC	Alternating current
DC	Direct current
°F	Degrees Fahrenheit

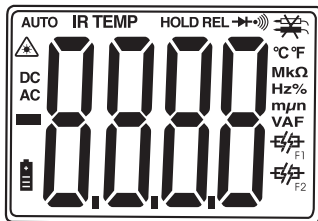

Ω	Ohms
V	Volts
AUTO	Autoranging
HOLD	Display hold
°C	Degrees Centigrade

## Specifications

Function	Range	Resolution	Accuracy	
DC Voltage (V DC)	200mV	0.1mV	$\pm(0.3\% \text{ reading} + 2 \text{ digits})$	
	2V	0.001V	$\pm(0.5\% \text{ reading} + 2 \text{ digits})$	
	200V	0.1V		
	1000V	1V	$\pm(0.8\% \text{ reading} + 2 \text{ digits})$	
AC Voltage (V AC) (True rms)			50 to 400Hz	400Hz to 1kHz
	2V	0.001V	$\pm(1.0\% \text{ reading} + 6 \text{ digits})$	$\pm(2.0\% \text{ reading} + 8 \text{ digits})$
	200V	0.1V	$\pm(1.5\% \text{ reading} + 6 \text{ digits})$	$\pm(2.5\% \text{ reading} + 8 \text{ digits})$
	750V	1V	$\pm(2.0\% \text{ reading} + 6 \text{ digits})$	$\pm(3.0\% \text{ reading} + 8 \text{ digits})$
DC Current (A DC)	200 $\mu$ A	0.1 $\mu$ A	$\pm(1.5\% \text{ reading} + 3 \text{ digits})$	
	200mA	0.1mA		
	20A	0.01A	$\pm(2.5\% \text{ reading} + 3 \text{ digits})$	
AC Current (A AC) (True rms)			50 to 400Hz	400Hz to 1kHz
	200mA	0.1mA	$\pm(1.8\% \text{ reading} + 8 \text{ digits})$	$\pm(2.5\% \text{ reading} + 10 \text{ digits})$
	20A	0.01A	$\pm(3.0\% \text{ reading} + 8 \text{ digits})$	$\pm(3.5\% \text{ reading} + 10 \text{ digits})$
Resistance	200 $\Omega$	0.1 $\Omega$	$\pm(0.8\% \text{ reading} + 4 \text{ digits})$	
	2000 $\Omega$	1 $\Omega$	$\pm(0.8\% \text{ reading} + 2 \text{ digits})$	
	20k $\Omega$	0.01k $\Omega$	$\pm(1.0\% \text{ reading} + 2 \text{ digits})$	
	200k $\Omega$	0.1k $\Omega$		
	20M $\Omega$	0.01M $\Omega$	$\pm(2.0\% \text{ reading} + 5 \text{ digits})$	
Temperature	-4 to 1382 $^{\circ}$ F	1 $^{\circ}$ F	$\pm(3.0\% \text{ reading} + 3 \text{ digits})$ (meter only, probe accuracy not included)	
	-20 to 750 $^{\circ}$ C	1 $^{\circ}$ C		


**NOTE:** Accuracy specifications consist of two elements:

- (% reading) – This is the accuracy of the measurement circuit.
- (+ digits) – This is the accuracy of the analog to digital converter.

**NOTE:** Accuracy is stated at 65 $^{\circ}$ F to 83 $^{\circ}$ F (18 $^{\circ}$ C to 28 $^{\circ}$ C) and less than 75% RH.

## ***Specifications***

---

<b>Diode Test</b>	Test current of 1mA maximum, open circuit voltage 2.8V DC typical
<b>Continuity Check</b>	Audible signal will sound if the resistance is less than approximately 150Ω
<b>Input Impedance</b>	10MΩ
<b>AC Response</b>	True rms
<b>ACV Bandwidth</b>	50Hz to 1kHz
<b>DCA voltage drop</b>	200mV
<b>Display</b>	3 ½ digit, 2000 count LCD, 0.9" digits
<b>Auto-Power Off</b>	15 minutes (approximately)
<b>Overrange indication</b>	"1" is displayed
<b>Polarity</b>	Automatic (no indication for positive polarity); Minus (-) sign for negative polarity.
<b>Measurement Rate</b>	2 times per second, nominal
<b>Low Battery Indication</b>	"  " is displayed if battery voltage drops below operating voltage
<b>Battery</b>	One 9 volt (NEDA 1604) battery
<b>Fuses</b>	mA, μA ranges; 0.2A/250V fast blow A range; 20A/250V ceramic fast blow
<b>Operating Temperature</b>	41°F to 104°F (5°C to 40°C)
<b>Storage Temperature</b>	-4°F to 140°F (-20°C to 60°C)
<b>Operating Humidity</b>	Max 80% up to 87°F (31°C) decreasing linearly to 50% at 104°F(40°C)
<b>Storage Humidity</b>	<80%
<b>Operating Altitude</b>	7000ft. (2000meters) maximum.
<b>Weight</b>	0.753lb (342g) (includes holster).
<b>Size</b>	7.36" x 3.2" x 2.0" (187 x 81 x 50mm) (includes holster)
<b>Safety</b>	For indoor use and in accordance with the requirements for double insulation to IEC1010-1 (1995): EN61010-1 (1995) Overvoltage Category III 600V and Category II 1000V, Pollution Degree 2.

## Operating Instructions

**WARNING:** Risk of electrocution. High-voltage circuits, both AC and DC, are very dangerous and should be measured with great care.


1. ALWAYS turn the function switch to the OFF position when the meter is not in use.
2. If “1 ” appears in the display during a measurement, the value exceeds the range you have selected. Change to a higher range.

**NOTE:** On some low AC and DC voltage ranges, with the test leads not connected to a device, the display may show a random, changing reading. This is normal and is caused by the high-input sensitivity. The reading will stabilize and give a proper measurement when connected to a circuit.

### DC VOLTAGE MEASUREMENTS

**CAUTION:** Do not measure DC voltages if a motor on the circuit is being switched ON or OFF. Large voltage surges may occur that can damage the meter.

1. Set the function switch to the highest V DC (---) position.
2. Insert the black test lead banana plug into the negative **COM** jack. Insert the red test lead banana plug into the positive **V** jack.
3. Touch the black test probe tip to the negative side of the circuit. Touch the red test probe tip to the positive side of the circuit.
4. Read the voltage in the display. Reset the function switch to successively lower V DC positions to obtain a higher resolution reading. If the polarity is reversed, the display will show (-) minus before the value.

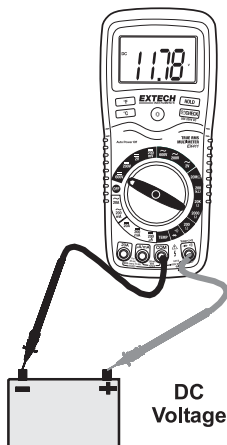


## AC VOLTAGE MEASUREMENTS

**WARNING:** Risk of Electrocution. The probe tips may not be long enough to contact the live parts inside some 240V outlets for appliances because the contacts are recessed deep in the outlets. As a result, the reading may show 0 volts when the outlet actually has voltage on it. Make sure the probe tips are touching the metal contacts inside the outlet before assuming that no voltage is present.

**CAUTION:** Do not measure AC voltages if a motor on the circuit is being switched ON or OFF. Large voltage surges may occur that can damage the meter.


1. Set the function switch to the highest V AC ( $\sim$ ) position.
2. Insert the black test lead banana plug into the negative **COM** jack. Insert red test lead banana plug into the positive **V** jack.
3. Touch the black test probe tip to the neutral side of the circuit. Touch the red test probe tip to the "hot" side of the circuit.
4. Read the voltage in the display. Reset the function switch to successively lower V AC positions to obtain a higher resolution reading.

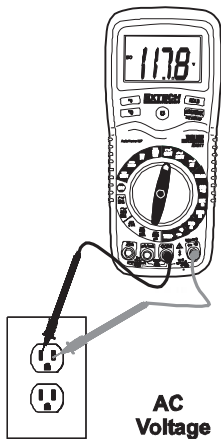




## DC CURRENT MEASUREMENTS

 **CAUTION:** Do not make current measurements on the 20A scale for longer than 30 seconds. Exceeding 30 seconds may cause damage to the meter and/or the test leads.


1. Insert the black test lead banana plug into the negative **COM** jack.
2. For current measurements up to 200 $\mu$ A DC, set the function switch to the 200 $\mu$ A DC (  ) position and insert the red test lead banana plug into the **uA/mA** jack.
3. For current measurements up to 200mA DC, set the function switch to the 200mA DC position and insert the red test lead banana plug into the **uA/(mA)** jack.
4. For current measurements up to 20A DC, set the function switch to the 20A DC range and insert the red test lead banana plug into the **20A** jack.
5. Remove power from the circuit under test, then open up the circuit at the point where you wish to measure current.
6. Touch the black test probe tip to the negative side of the circuit.  
Touch the red test probe tip to the positive side of the circuit.
7. Apply power to the circuit.
8. Read the current in the display.

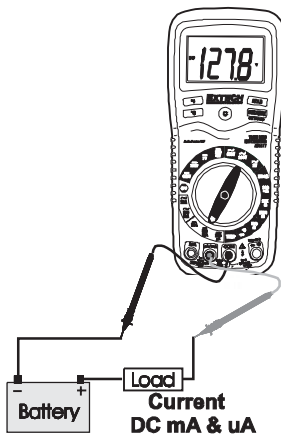

## AC CURRENT MEASUREMENTS

**CAUTION:** Do not make current measurements on the 20A scale for longer than 30 seconds. Exceeding 30 seconds may cause damage to the meter and/or the test leads.


1. Insert the black test lead banana plug into the negative **COM** jack.
2. For current measurements up to 200mA AC, set the function switch to the highest 200mA AC (  $\sim$  ) position and insert the red test lead banana plug into the **mA** jack.
3. For current measurements up to 20A AC, set the function switch to the 20A AC range and insert the red test lead banana plug into the **20A** jack.
4. Remove power from the circuit under test, then open up the circuit at the point where you wish to measure current.
5. Touch the black test probe tip to the neutral side of the circuit. Touch the red test probe tip to the "hot" side of the circuit.
6. Apply power to the circuit.
7. Read the current in the display.

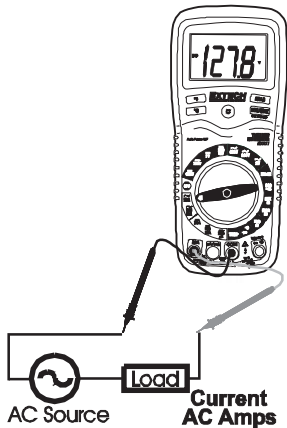

## RESISTANCE MEASUREMENTS

**WARNING:** To avoid electric shock, disconnect power to the unit under test and discharge all capacitors before taking any resistance measurements. Remove the battery and unplug the line cords.

1. Set the function switch to the highest  $\Omega$  position.
2. Insert the black test lead banana plug into the negative **COM** jack. Insert the red test lead banana plug into the positive  $\Omega$  jack.
3. Touch the test probe tips across the circuit or part under test. It is best to disconnect one side of the part under test so the rest of the circuit will not interfere with the resistance reading.
4. Read the resistance in the display and then set the function switch to the lowest  $\Omega$  position that is greater than the actual or any anticipated resistance.

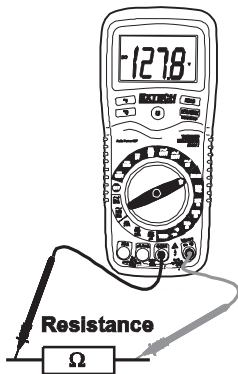



## CONTINUITY CHECK

**WARNING:** To avoid electric shock, never measure continuity on circuits or wires that have voltage on them.

1. Set the function switch to the  $\rightarrow \text{diode}$  position.
2. Insert the black lead banana plug into the negative **COM** jack. Insert the red test lead banana plug into the positive  $\Omega$  jack.
3. Touch the test probe tips to the circuit or wire you wish to check.
4. If the resistance is less than approximately  $150\Omega$ , the audible signal will sound. If the circuit is open, the display will indicate "1".

## DIODE TEST


1. Insert the black test lead banana plug into the negative **COM** jack and the red test lead banana plug into the positive **diode** jack.
2. Turn the rotary switch to the  $\rightarrow \text{diode}$  position.
3. Touch the test probes to the diode under test. Forward bias will typically indicate 400 to 1000. Reverse bias will indicate "1". Shorted devices will indicate near 0 and the continuity beeper will sound. An open device will indicate "1" in both polarities.

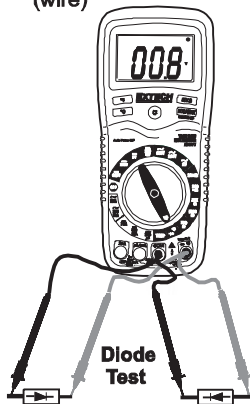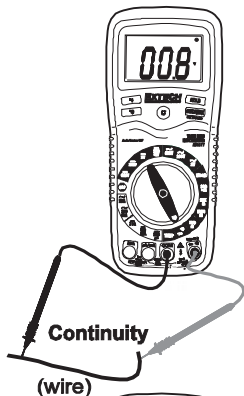


## TEMPERATURE MEASUREMENTS

1. Set the function switch to the TEMP position.
2. Insert the Temperature Probe into the Temperature Socket, making sure to observe the correct polarity.
3. Press the °F or °C button for the desired units.
4. Touch the Temperature Probe head to the part whose temperature you wish to measure. Keep the probe touching the part under test until the reading stabilizes.
5. Read the temperature in the display.


Note: The temperature probe is fitted with a type K mini connector. A mini connector to banana connector adaptor is supplied for connection to the input banana jacks.

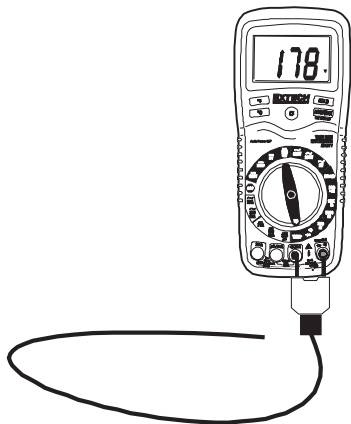

## DISPLAY BACKLIGHT

Press and hold the  button to turn on the display backlight function. The backlight will automatically turn off after 15 seconds.

## BATTERY CHECK

The  CHECK function tests the condition of the 9V battery. Set the function switch to the 200VDC range and press the CHECK button. If the reading is less than 8.5, battery replacement is recommended.


## HOLD

The hold function freezes the reading in the display. Press the HOLD key momentarily to activate or to exit the hold function.


## AUTO POWER OFF

The auto off feature will turn the meter off after 15 minutes.

## LOW BATTERY INDICATION

If the  icon appears in the display, the battery voltage is low and the battery should be replaced.

## WRONG CONNECTION INDICATION

The  icon will appear in the upper right corner of the display and the buzzer will sound whenever the positive test lead is inserted into the 20A or  $\mu$ A/mA input jack and a non-current (green) function is selected. If this occurs, turn the meter off and reinsert the test lead into the proper input jack for the function selected.

## ***Maintenance***

---

**WARNING:** To avoid electric shock, disconnect the test leads from any source of voltage before removing the back cover or the battery cover.


**WARNING:** To avoid electric shock, do not operate your meter until the battery and fuse covers are in place and fastened securely.

This MultiMeter is designed to provide years of dependable service, if the following care instructions are performed:


1. **KEEP THE METER DRY.** If it gets wet, wipe it off.
2. **USE AND STORE THE METER IN NORMAL TEMPERATURES.** Temperature extremes can shorten the life of the electronic parts and distort or melt plastic parts.
3. **HANDLE THE METER GENTLY AND CAREFULLY.** Dropping it can damage the electronic parts or the case.
4. **KEEP THE METER CLEAN.** Wipe the case occasionally with a damp cloth. DO NOT use chemicals, cleaning solvents, or detergents.
5. **USE ONLY FRESH BATTERY OF THE RECOMMENDED SIZE AND TYPE.** Remove old or weak battery so they do not leak and damage the unit.
6. **IF THE METER IS TO BE STORED FOR A LONG PERIOD OF TIME,** the battery should be removed to prevent damage to the unit.

## REPLACING THE BATTERY

**WARNING:** To avoid electric shock, disconnect the test leads from any source of voltage before removing the battery cover.

1. When the battery becomes exhausted or drops below the operating voltage, The  symbol will appear in the LCD display when the battery check button is pressed. The battery should be replaced.
2. Remove the two screws "B" securing the rear battery cover, lift the cover off and replace the battery.
3. Replace and secure the battery cover.
4. Properly dispose of the old battery.

**WARNING:** To avoid electric shock, do not operate your meter until the battery cover is in place and fastened securely.

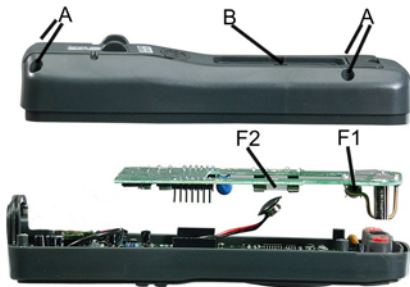



## REPLACING THE FUSES

**WARNING:** To avoid electric shock, disconnect the test leads from any source of voltage before removing the fuse cover.

1. Disconnect the test leads from the meter.
2. Remove the protective rubber holster.
3. Remove the battery cover (two "B" screws) and the battery.
4. Remove the four "A" screws securing the rear cover.
5. Lift the center circuit board straight up from the connectors to gain access to the fuse holders.
6. Gently remove the old fuse and install the new fuse into the holder.
7. Always use a fuse of the proper size and value (0.2A/250V fast blow for the 200mA range, 20A/250V fast blow for the 20A range).
8. Align the center board with the connectors and gently press into place.
9. Replace and secure the rear cover, battery and battery cover.

**WARNING:** To avoid electric shock, do not operate your meter until the fuse cover is in place and fastened securely.

### UL LISTED

The UL mark does not indicate that this product has been evaluated for the accuracy of its readings.

## **Warranty**

---

EXTECH INSTRUMENTS CORPORATION warrants this instrument to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies on sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department at (781) 890-7440 ext. 210 for authorization or visit our website at [www.extech.com](http://www.extech.com) (click on 'Contact Extech' and go to 'Service Department' to request an RA number). A Return Authorization (RA) number must be issued before any product is returned to Extech. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. Extech specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. Extech's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

### **Calibration and Repair Services**

Extech offers complete repair and calibration services for the products we sell. For periodic calibration, NIST certification or repair of an Extech product, call customer service for details on services available for that product. Extech recommends that calibration be performed on an annual basis to ensure calibration integrity.



#### **Support Hotline (781) 890-7440**

Tech support: Ext. 200; Email: [support@extech.com](mailto:support@extech.com)

Repair>Returns: Ext. 210; Email: [repair@extech.com](mailto:repair@extech.com)

Website: [www.extech.com](http://www.extech.com)

**Copyright © 2003 Extech Instruments Corporation.  
All rights reserved including the right of reproduction  
in whole or in part in any form.**