

# illumiNova<sup>®</sup> Menu Navigation Quick Start

POWER button



654321  
RPM

START  
SCREEN

**KEY**

- Menu/Enter for navigation and to save setting changes
- Indicates current setting
- RETURN or EXIT button
- Down/Up navigation button
- Up/Down to change number values
- Left/Right to select digits to change



KEYPAD



X2 / ÷2



BRITE



Low, High, Med,  
dial or up/dwn to define choice (to SET) (to return to menu settings)

WIDTH



DEG/PCNT displayed, TIME displayed  
dial or up/dwn and <> to change values, then to set

MODE



Int, Ext, ON (to SET)  
ON = Lamp for ON Off, reset Mode to Int or Ext to disable lamp mode

JOG



NONE, PHASE, TIME, dial or up/dwn> to change modes  
   
input input  
number number dial or up/dwn and <> to change values, then to set

MEMRY



RM (1-10) or ► for SM (1-10)  
Load current flash setting into SM (1-10)  
dial or up/dwn to change memory locations overwrites any preset #s  
 (to return to menu settings)  
Recall setting RM (1-10) to set flash rate  
dial or up/dwn to locate memory setting, then to use as current flash rate  
 (to return to menu settings)

MISC



Subset of miscellaneous option settings

DECPT none, 1, 2, 3 (to SET)  
 dial or up/dwn to define choice (to SET) (to return to menu settings)

SCALE use on-screen touch screen to input values and on-screen to set  
 scale values 'flashing', use dial to select (ft/s, ft/m, i/sec, i/m, ... h--)  
 (to return to menu settings)

STANDBY Enabled (Enb), Disabled (dIS) dial or up/dwn to define choice (to SET)  
 (to return to menu settings)

DUTY DEG or Percent (PErCnt %) dial or up/dwn to select (to SET)  
 (to return to menu settings)

PRESCALE dial or up/dwn and <> to change values, then to set

UNITS dial or up/dwn to define choice RPS, RPM, FPS, FPM (to SET)

INPUT POS, nEG, (to SET)

OUTP POS, nEG, SEr (to SET)

BKLIT ON, OFF (to SET)