

RT-Ex10 Meter Mounted Flow Monitor



Technical Specifications:


- Portable, meter mounted flow monitor
- · 6 digit LCD display
- 4-20 mA loop power output
- Flow rate, total, real time clock

- Gate time function
- Sleep Mode for battery conservation
- · All functions can be magnetically operated
- · Battery life indicator, estimated 4 year life

What is a RT-Ex10 meter mounted flow monitor?

The RT-Ex10 is a portable, meter mounted flow monitor that is compatible with AW Company's JV and HPM series of positive displacement meters and TRG and TA turbine meters. The RT-Ex10 is used in a wide variety of applications where ease of operation and flexibility is required. A NEMA 4x enclosure houses a large 6 digit LCD display screen where either flow rate or total is continuously displayed in the customers selected & programmed engineering units. The selection of rate, total, reset of the total, programmable sleep mode and the real time clock can be done via a magnet – without opening the enclosure. A long life field replaceable battery provides power for a period of 4 years – depending on RT-Ex10 options enabled.

AW FLOW METERS RT-Ex10 Meter Mounted Flow Monitor

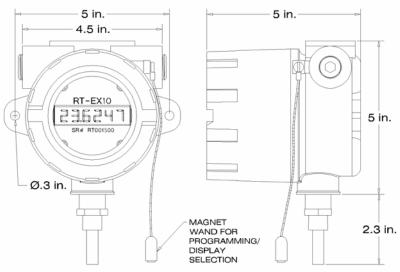

RT-Ex10 is not compatible with the JVHS, JV-01, JV-10 & JV-12

Monitor Technical Data

Flow Meter Compatability: Positive Displacement: JV & HPM Series Turbine: TR, TRG & TA Series (linear flow range may vary)

Power:

Internal 3.6V "C" Cell Battery - field replaceable 4 Year Battery Power - estimated average life (depending on RT-Ex10 options enabled)

Sensor/Monitor Frequency Range: 3,000 Hz max.

Temperature Rating:

-20° to 60°C (-4° to 140° F) Ambient 80° C (175° F) Maximum Fluid Temperature

- Output Options:
 - 4-20 mA, loop powered
 - Pulse output scaleable to 100 Hz.

Enclosure Certifications:

Class I, Groups A, B, C, D Class II, Groups E, F, G Class III Atex: EExd IIC, IP68 NEMA 4X FM Class No. 3615 CSA Ex'd' approval pending

Part #	Standard Nose	Fiber Optic Input*	Hub Nose	TR Nose	Battery Power	4-20 mA Loop	Fiber Optic Output**
RT-Ex10A	Х				Х		
RT-Ex10C	Х				Х	Х	
RT-Ex10H	Х				Х		Х
RT-Ex10D		Х			Х		
RT-Ex10F		Х			Х	Х	
RT-Ex10L		Х			Х		Х
RT-Ex10J			Х		Х		
RT-Ex10N			Х		Х	Х	
RT-Ex10P			Х		Х		Х
RT-Ex10R				X	Х		
RT-Ex10T				X	Х	Х	
RT-Ex10U				X	Х		X

RT-Ex10 Options available

* All fiber optic input RT-Ex10's require the FOP Pick-up

** All fiber optic output RT-Ex10's require the OPTV converter

Products may be subject to change without notice - Contact factory for current information

8809 Industrial Drive, Franksville, WI 53126Phone: (262) 884-9800Fax: (262) 884-9810Email: awinfo@aw-lake.comwww.awflowmeters.com