


Brainchild PR Series Recorder

Resetting to Factory Default Programming (Front-Panel Reset Button)

WARNING: LOSS OF DATA AND PROGRAMMING

This procedure permanently erases all channel configuration, alarm settings, calibration data, communication setup, and every other stored programming parameter, returning the recorder to its factory default state. Back up your configuration file before starting if it may be needed again.

Locating the Reset Button (PR20 shown)

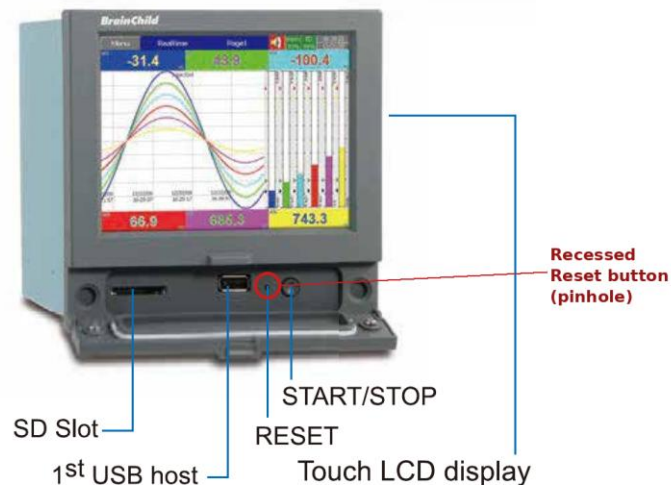

Steps

1. Power OFF the recorder.
2. Press and hold the recessed Reset Button on the front panel (use a small pin or paperclip).
3. While still holding the Reset Button, power ON the recorder.
4. Release the Reset Button once the Format / Upgrade screen appears.
5. Press and hold Format for at least 3 seconds to return the recorder to factory settings.
6. When prompted, perform screen calibration: touch the moving '+' symbol repeatedly until calibration finishes.
7. Touch the middle of the screen to exit. The recorder reboots and returns to normal operation at factory default settings and must be reprogrammed.

Reset Procedure - Visual Overview

