

TX800-Series

Seametrics

FLOW SENSOR INSTRUCTIONS

- TX810
- TX820



TX800-SERIES FLOW SENSOR INSTRUCTIONS

ISO 9001:2008
CERTIFIED COMPANY

TABLE OF CONTENTS

General Information

Specifications, FeaturesPage 1

Installation

Distorted Flows, Fitting Installation, Meter Installation, Positioning the MeterPage 2

Straight Pipe RecommendationsPage 3

Full Pipe Recommendations.....Page 4

Electrical Connections

FT415/FT420, Connecting to PLC's.....Page 5

Operation

Modularity, Output, Fittings, Minimum Flow, Flow Range Table,
Calibration ("K-Factor").....Page 6

Maintenance

Rotor Replacement, Signal Troubleshooting, Sensor ReplacementPage 7

Parts Explosion

Parts List.....Page 8

Troubleshooting

Problem, Probable CausePage 9

TABLES AND DIAGRAMS

Specifications, FeaturesPage 1

Distorted Flows, Positioning the Meter.....Page 2

Straight Pipe RecommendationsPage 3

Full Pipe Recommendations.....Page 4

Connections DiagramPage 5

Flow Range TablePage 6

Rotor ReplacementPage 7

Parts Explosion, Parts List.....Page 8

Troubleshooting.....Page 9

GENERAL INFORMATION, SPECIFICATIONS, FEATURES

GENERAL INFORMATION

The TX800-Series are insertion turbine meters designed for use in 1-1/2" to 8" pipe. High-quality jewel bearings and precision shafts ensure long life and low friction. Available in 316 stainless steel, brass and PVC, sensor bodies are machined from solid rod for maximum low-flow performance. The TX800-Series use special fittings that ensure ease of installation and correct depth setting in the pipe.

The rotation of the turbine is detected by a non-drag Hall-effect sensor. Output is a pulse-type square wave, which can be sent long distances (up to 2,000 feet) without a transmitter. This

signal can be connected directly to Seametrics controls and displays, as well as PLC's, counters, and computer cards.

Seametrics TX800 meters are ideal for chemical proportioning applications. If no display is required, a simple divider such as the PD10 provides adjustable pump pacing. For rate and total display, as well as pump pacing, the FT420 flow indicator can be mounted directly on the TX800-Series, or remotely on a wall or panel. The FT415 offers a battery-operated rate/totalizer where power is not available.

SPECIFICATIONS*

Power Source		Standard	Micropowered (-04 Option)	
Supply Voltage/Current		6-40 Vdc/< 2 mA	3.5-16 Vdc/60 µA @ 3.5 Vdc	
Sensor		Hall Effect sensor, 12 Vdc current sinking pulse		
Materials	Sensor Body	PVC, brass or stainless steel		
	Rotor	PVDF (Kynar)		
	Shaft	Nickel-bound tungsten carbide		
	Bearings	Ruby jewel		
	O-Ring	EPDM (Viton optional)		
Rotor Pickup		GMR (Giant Magnetoresistive) Sensor		
Maximum		Brass	316 SS	PVC (See Pressure vs. Temp. Chart)
	Pressure	200 psi (14 bar)	200 psi (14 bar)	175 psi (12 bar) at 75°
	High Pressure	Not Available	400 psi (28 bar)	Not Available
	Temperature	200° F (93° C)	200° F (93° C)	130° F (55° C)
Flow Range		0.5 to 30 ft./sec. (0.15 - 9.14 meter/sec)		
Calibrated Accuracy		+/- 2.5% of full scale		
Signal		Current sinking pulse, 20 mA max, 30 Vdc max (Micropower option: Pulse output swings between supply voltage and 0 Vdc)		
Power		6-30 Vdc @ 8 mA (Micropower option: 3.5-16 Vdc @ 0.3 mA max)		
Cable		22 AWG, 3 Con, 18'; 2000' max run		
Regulatory		C E (Stainless Steel, Brass and Standard Power Only)		


*Specifications subject to change. Please consult our website for the most current data (www.seametrics.com).

**High pressure option requires an appropriate fitting.

FEATURES




Caution: U-clip must be installed before use.

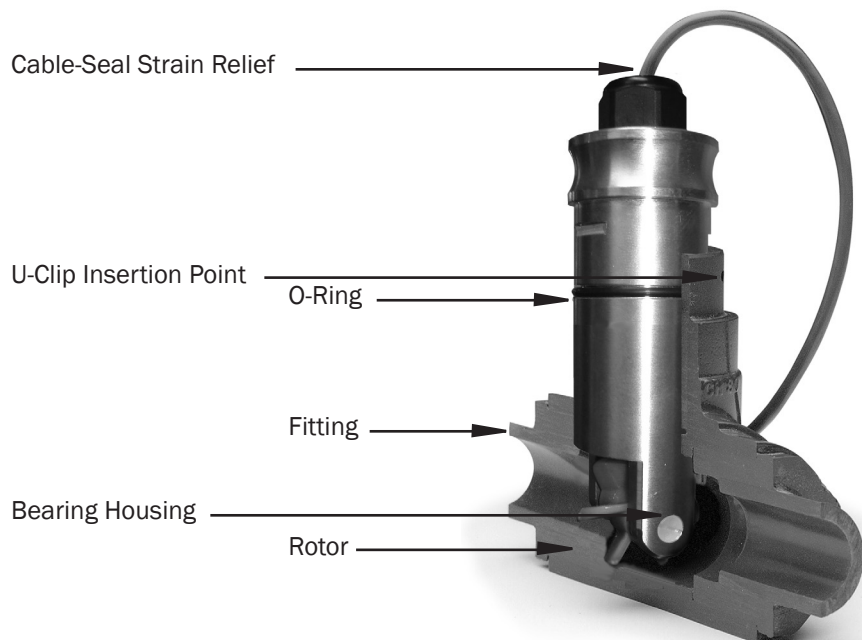

INSTALLATION

DISTORTED FLOWS

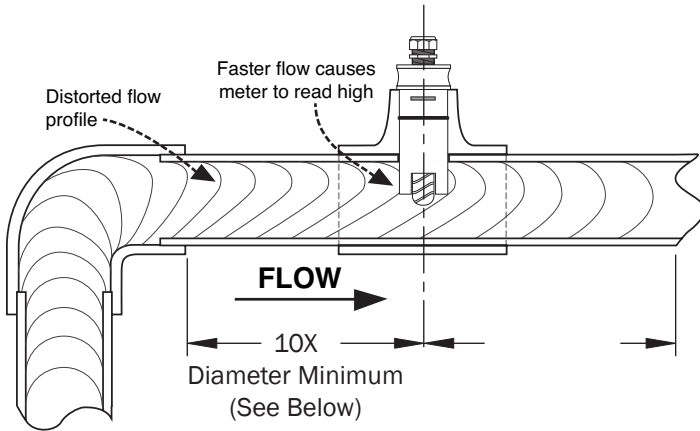

Fitting Installation. TX800-Series meters require special fittings. The meter fitting must first be installed in the pipeline. Straight pipe of at least ten times the diameter upstream of the meter and five diameters downstream is strongly recommended in order to achieve proper accuracy. These are minimum values. As the diagrams on the next page will show, you may need more straight run under specific adverse circumstances.

If you can't provide enough run to smooth out the turbulence caused by valves, fittings, and changes in direction, some decrease in accuracy may result. This does not mean that the flow meter's reading is meaningless, however. In some applications (for instance, where the flow meter is part of a control system, operating a valve or controlling chemical addition), a repeatable reading may be more important than a highly accurate one.


TX800-Series PVC meter tees are supplied with some upstream straight pipe. The length provided may be less than ten diameters upstream and five downstream. It is not advisable to connect directly to the end of these fittings with a flow-disturbing device such as a valve or elbow. If possible, straight pipe should be added to the upstream end of these fittings.

A PVC fitting is usually installed by solvent welding. The stainless steel and brass meter fittings have female pipe threads, requiring the appropriate male threaded fittings. Saddle fit-

tings (size 3" and above) require a hole to be cut in the pipe. The recommended hole size is 1-3/4".

Meter Installation. After the meter fitting is installed in the pipeline, the meter can be installed in the fitting. Press the meter into the fitting as far as it will go. Retain the meter in place by inserting the u-pin. The pin can be installed from either side. It may be necessary to rotate the probe back and forth slightly to start the pin into the slots on the probe. Slide the pin in as far as it will go.

POSITIONING THE METER

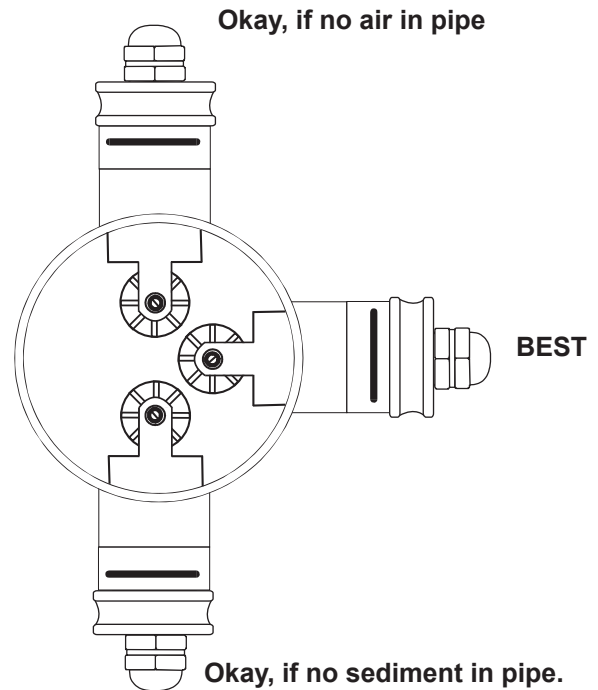


Caution: Never remove the u-clip retainer when the pipe is under pressure. Always remove pressure from the pipe before you attempt to remove the meter. Removal under pressure may result in damage or serious injury.


INSTALLATION

STRAIGHT PIPE RECOMMENDATIONS


(X = diameter)

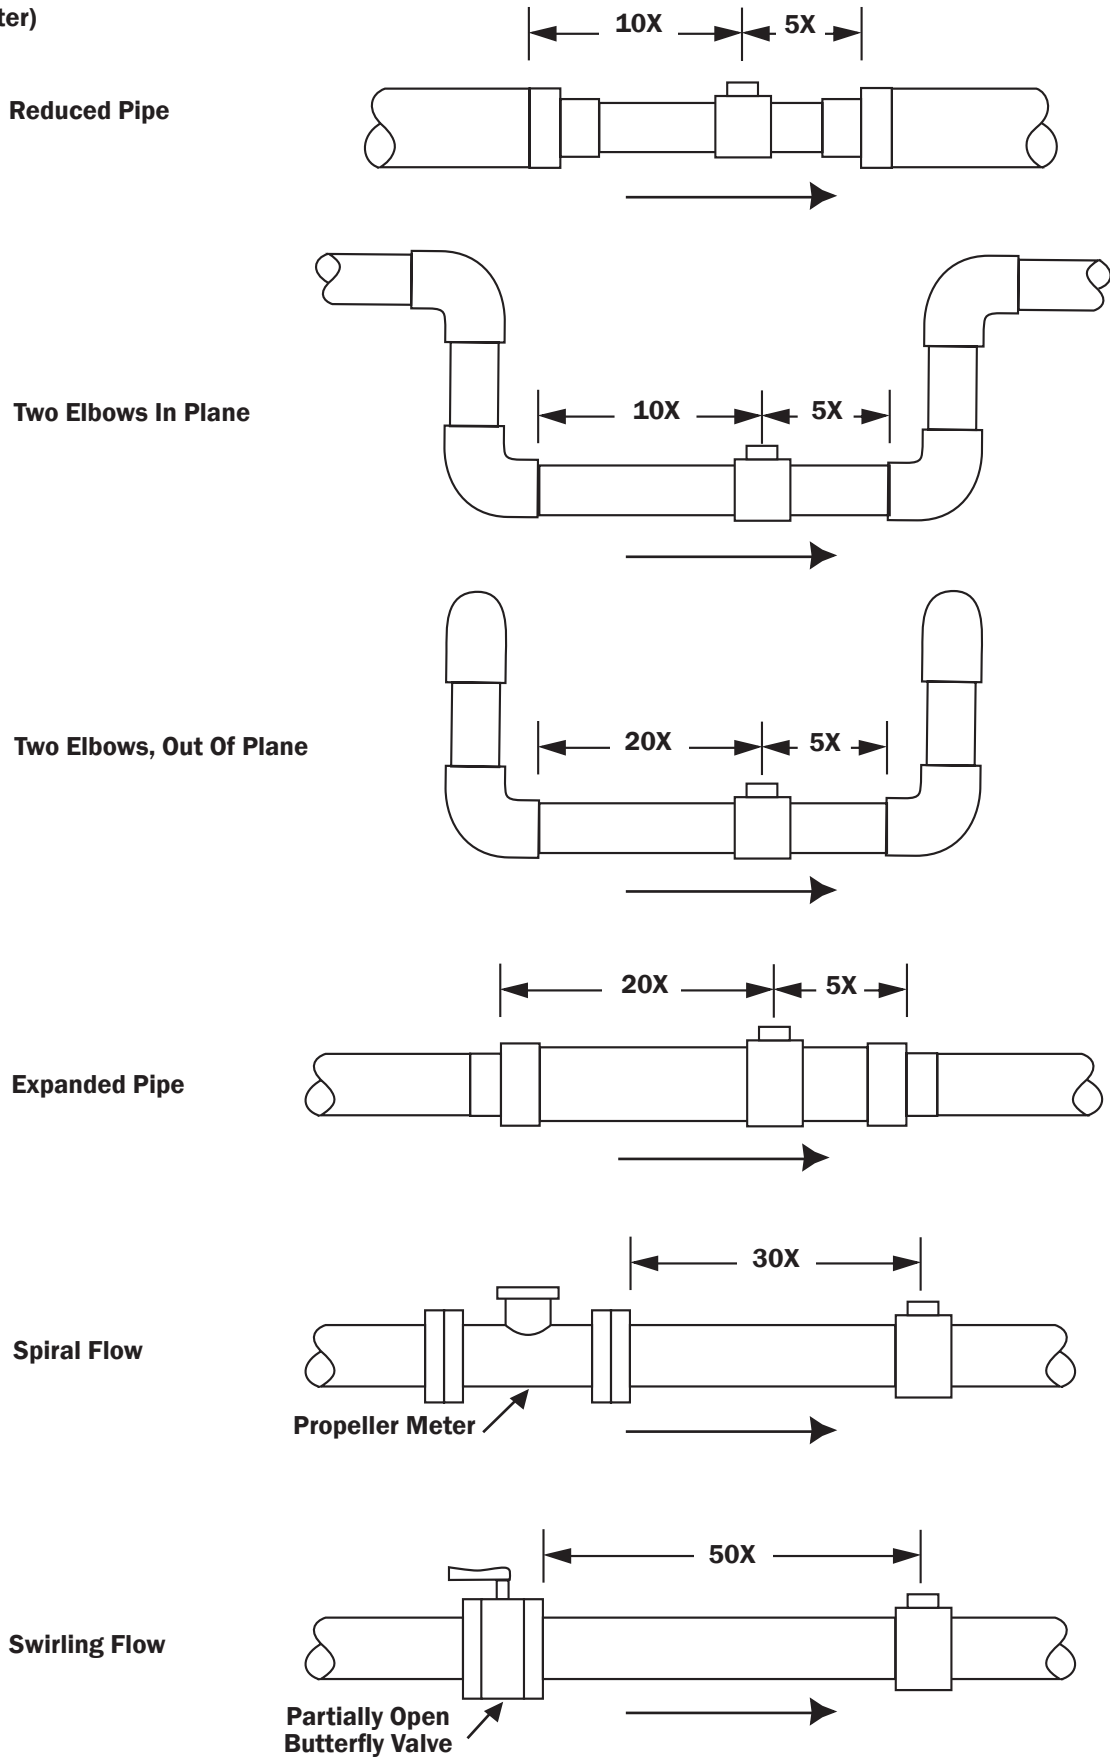


FULL PIPE RECOMMENDATIONS

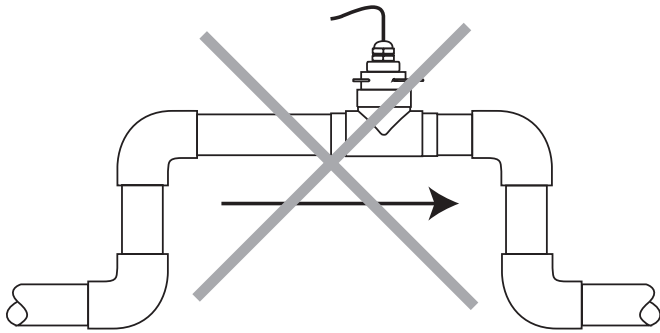


Possible Problem:
Allows air pockets to form at sensor

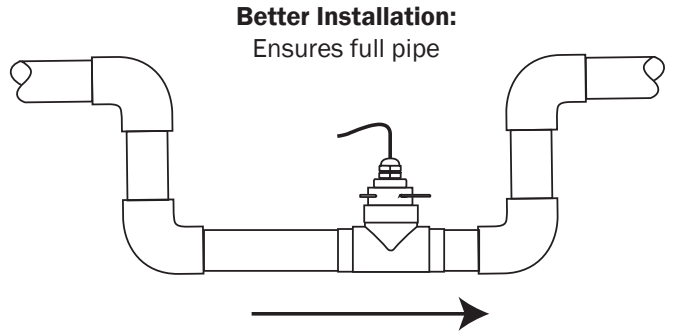


Better Installation:
Ensures full pipe

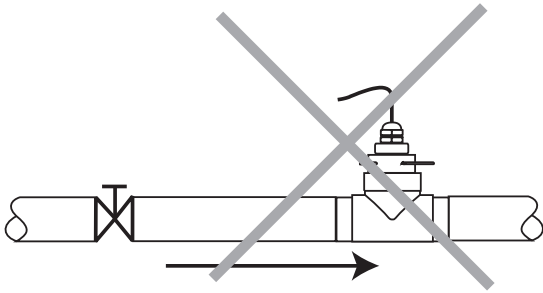


Possible Problem:
Post-valve cavitation can create air pocket

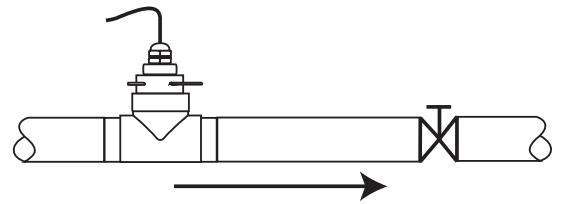

Better Installation:
Keeps pipe full at sensor

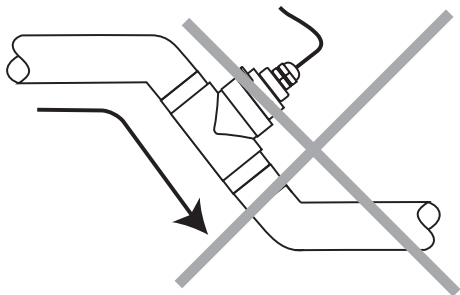

Possible Problem:
Air can be trapped

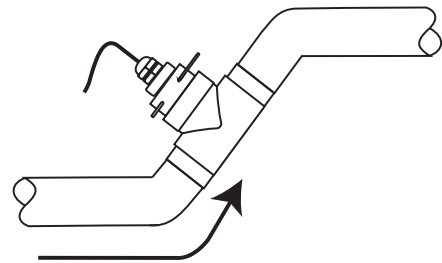

Better Installation:
Allows air to bleed off




Caution: These flow sensors are not recommended for installation downstream of the boiler feedwater pump where installation fault may expose the flow sensor to boiler pressure and temperature. Maximum recommended temperature is 130°F (Plastic), 200°F (Metal).


CONNECTIONS DIAGRAMS

FT415 Standard Connections

Caution: Do not apply external power to the FT415.

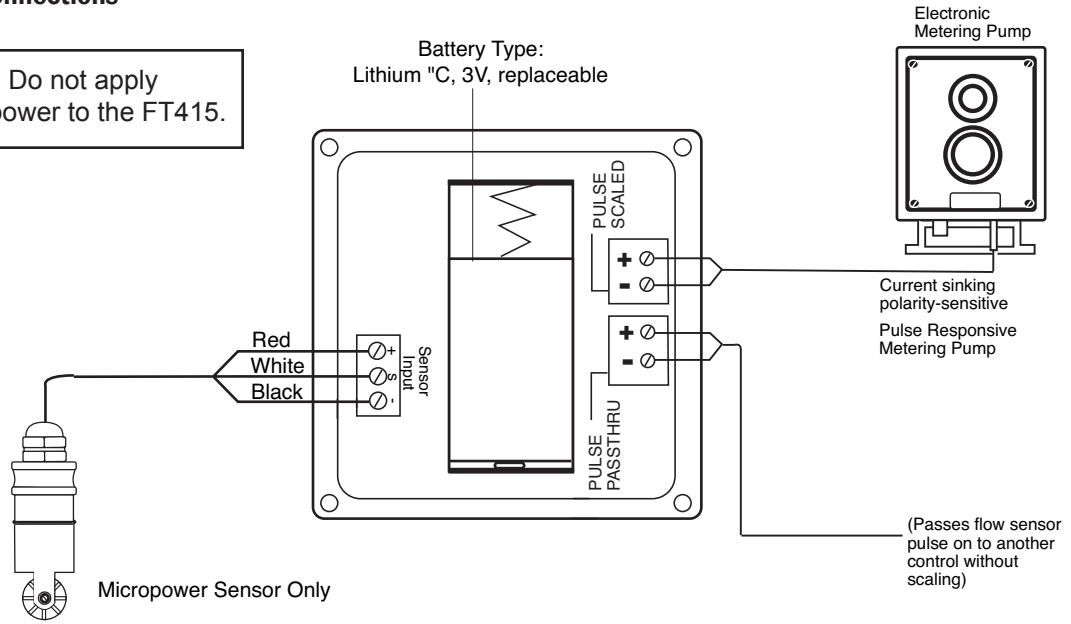


Connections for FT420/3-Wire Mechanical Meter

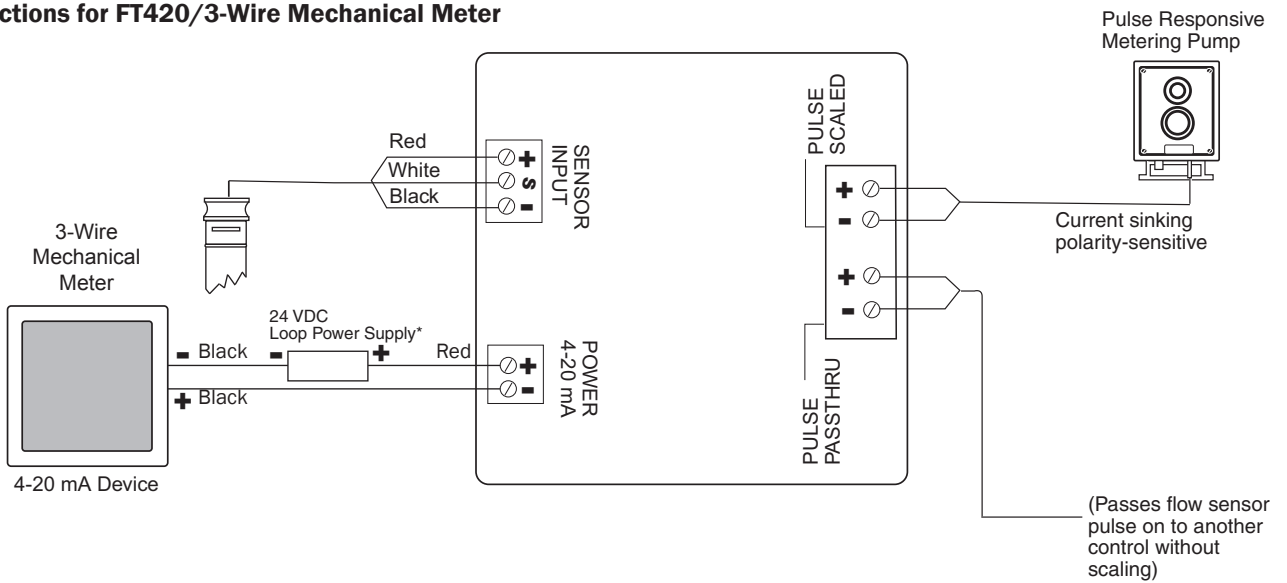


Connecting to PLC's and other non SeaMetric Controls

Input Designed for Current Sinking (NPN) Devices

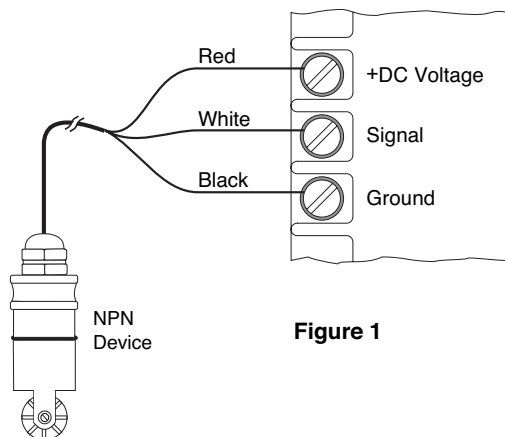

Input Designed for Current Sourcing (PNP) Devices

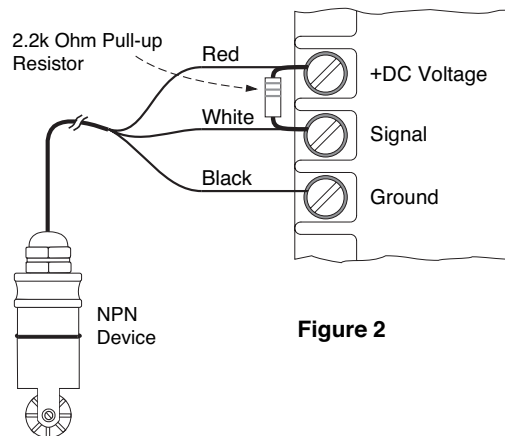

OPERATION

Modularity. Any of the TX800-Series flow sensors can have electronic modules mounted directly to them, either at the time of order or by adding an adaptor kit in the field (part number 102632). Alternatively, the flow sensor and indicator or transmitter can be installed remote from each other. The FT420 is an indicating transmitter (rate, total, 4-20 mA output), and the A055 is a blind 4-20 mA transmitter. For data logging, add the DL76. The FT520, which provides batching and other functions, is suitable for remote installation.

Output. The output is a current-sinking pulse (square wave) compatible with many controls in addition to the Seametrics indicators and transmitters. The most common of these are water treatment controllers and programmable logic controllers (PLC's). For these units, it is sometimes necessary to provide a pull-up resistor if the controller does not provide for a current-sinking output. (See the section on "Connecting to PLC's and other controllers" before connecting to a non-Seametrics control.)

Fittings. Since the TX800-Series sensors are not adjustable, they must be purchased with fittings appropriate to the application. The TX810 is sized for fittings of 1 1/2" to 3". The TX820 is for fittings of 4" and 8". Each fitting insures that the flow sensor is installed at the correct point. Every flow sensor and every tee fitting is wet calibrated. Saddle fittings are normally not wet calibrated, because they are field-installed on a pipe. In PVC however it is possible to order a saddle pre-installed on a standard length of pipe, in which case the entire assembly is wet-calibrated. For all other saddles, the K-factor (pulses per gallon) is established through testing with various standard schedules of pipe and provided with the saddle.

Minimum Flow. As with any other flow sensor, there is a rate below which the TX800-Series sensor cannot read. Check the flow rate table below for the minimum flow rate detectable by the sensor for a given pipe size.


Flow Range (Gallons per Minute)

	1½"	2"	3"	4"	6"	8"
Min	1.1	2.1	4.6	7.9	18	31
Max	190	314	691	1190	2700	4680


Flow Range (Liters per Minute)

	1½"	2"	3"	4"	6"	8"
Min	4.16	7.95	17.41	29.90	68.14	117.35
Max	719.23	1188.62	2615.72	4504.64	10220.61	17715.73

Calibration ("K-factor"). The K-factor represents the actual number of pulses per gallon the meter produces during a flow test. This number can be entered into your electronic control to make it read properly. If the TX800-Series meter is ordered with a **tee fitting**, it is factory-calibrated in the fitting and the K-factor is indicated on the side of the fitting. For saddle and weldolet K-factors, see the **K-factor calculator** located at the bottom of the **www.seametrics.com** home page.

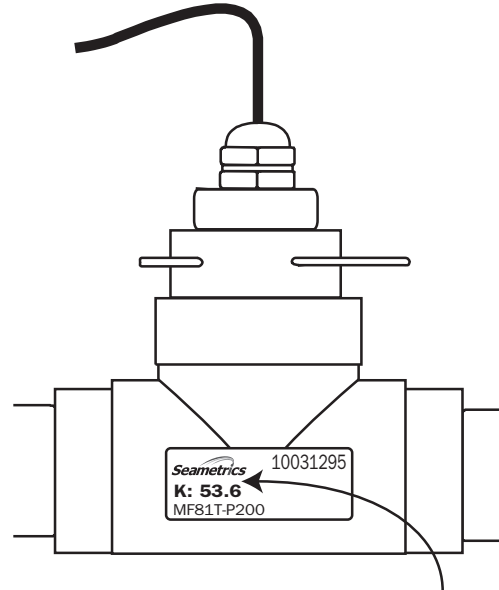

Find Your K-Factor Here

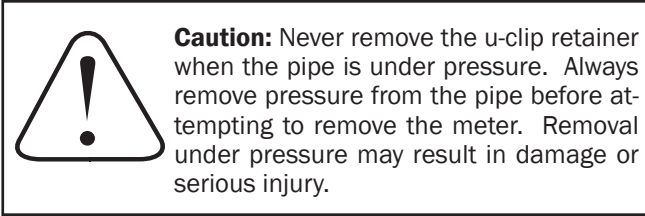

Rotor Replacement. It is unusual for a rotor to require replacement due to damage sustained in normal service. More commonly, the meter is dropped while it is out of the pipe. Another reason for rotor replacement is shaft wear after long service. Rotors are easily field-replaced.

To install a rotor, follow these steps:


1. Unscrew the threaded bearing housings to expose the shaft ends. If bearings are being replaced, back them completely out.
2. Remove the rotor. Put the new rotor in its place.
3. Thread in one bearing housing part way, then the other. Take care to start the end of the shaft into the bearing hole before tightening further.
4. Screw in bearing housings until they bottom.
Note: Do not use excessive force.
5. Check for free spin. Blowing lightly on the rotor should result in it spinning rapidly and coasting to a smooth stop.


Signal Troubleshooting. The flow sensor has only one moving part, the rotor. If this is turning properly and there is no signal, the magnetic sensor is not operating properly. To check the signal, apply 12 Vdc regulated* power to the red (+) and black (-) leads. Set a multimeter to voltage reading. Put the positive multimeter lead on the red wire and the negative lead on the white wire. Slowly turn the rotor. Voltage reading should swing between +12 Volts and 0 Volts as the rotor turns. If it does not, the solid-state magnetic sensor is not working properly. Checking for continuity is not a useful test of these sensors.

***NOTE:** An unregulated power supply can exceed max voltage of micro powered sensor (gray cable) and damage sensor.

Sensor Replacement. It is very unusual for a sensor to require replacement in normal use. The primary cause of sensor failure is overvoltage (inadvertent connection of line voltage, for example) or incorrect polarity on hookup. The sensor is replaced by removing the strain relief, then threading out the sensor retainer plug. Remove the entire sensor capsule by pulling on the cable. The new sensor capsule can then be installed, orientation is not critical. Replace the retainer plug, and then replace and tighten the strain relief.

Rotor Replacement

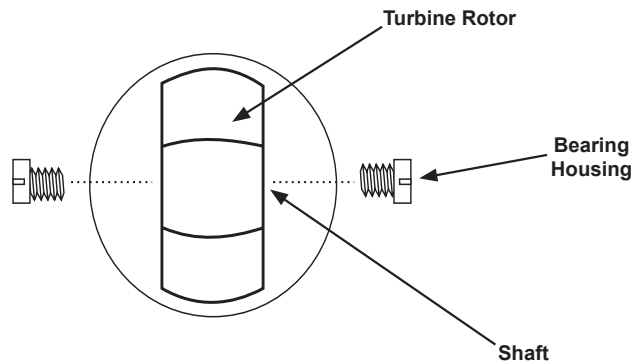

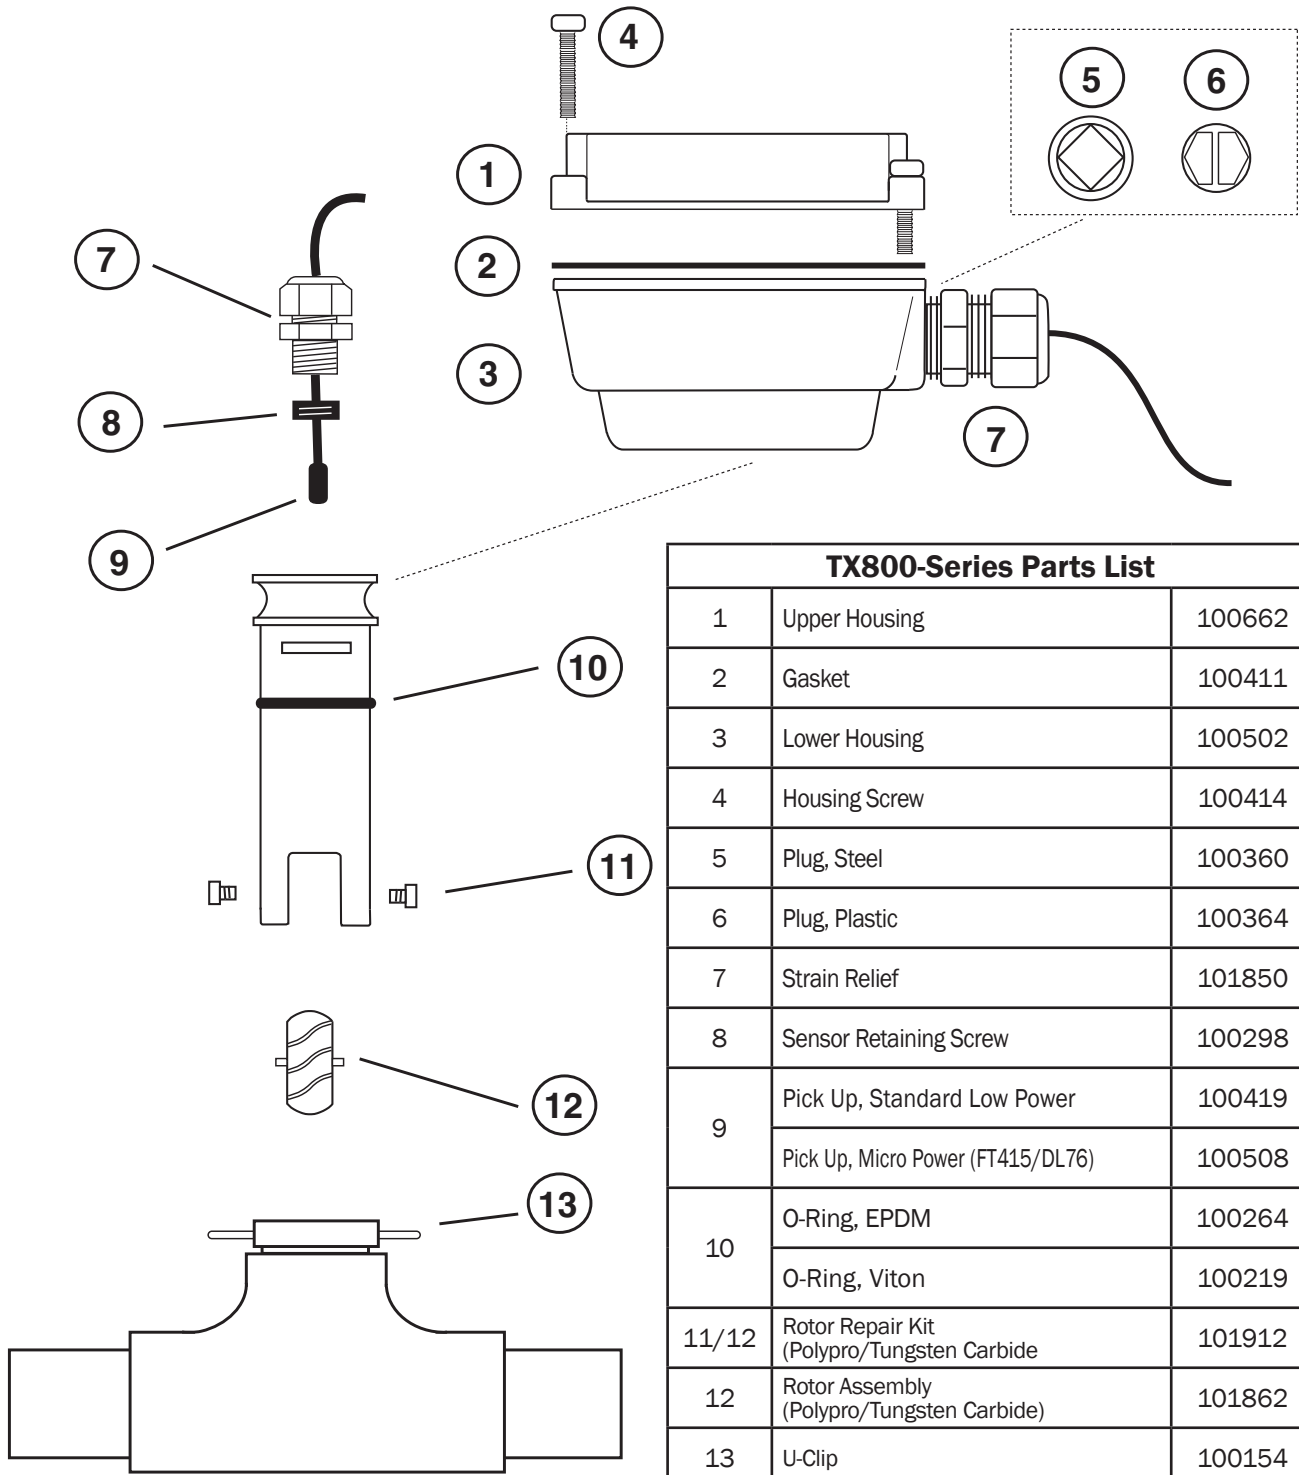

TX800-Series Parts List		
1	Upper Housing	100662
2	Gasket	100411
3	Lower Housing	100502
4	Housing Screw	100414
5	Plug, Steel	100360
6	Plug, Plastic	100364
7	Strain Relief	101850
8	Sensor Retaining Screw	100298
9	Pick Up, Standard Low Power	100419
	Pick Up, Micro Power (FT415/DL76)	100508
10	O-Ring, EPDM	100264
	O-Ring, Viton	100219
11/12	Rotor Repair Kit (Polypro/Tungsten Carbide)	101912
12	Rotor Assembly (Polypro/Tungsten Carbide)	101862
13	U-Clip	100154

TROUBLESHOOTING

Problem	Probable Cause	Try...
No signal after installation	<p data-bbox="610 279 784 306">Insufficient flow</p> <p data-bbox="610 384 907 443">Bad connections to control electronics</p> <p data-bbox="610 485 837 512">Incompatible control</p> <p data-bbox="610 657 899 684">Damaged or missing rotor</p> <p data-bbox="610 762 870 789">Failed magnetic sensor</p>	<p data-bbox="1084 279 1495 338">Reduce pipe size if possible, use different type of sensor</p> <p data-bbox="1084 384 1349 411">Reconnect if necessary</p> <p data-bbox="1084 485 1435 543">Use different power supply Add pull up resistor, (See pg. 5)</p> <p data-bbox="1084 657 1411 716">Obtain new rotor and replace (See pg. 7)</p> <p data-bbox="1084 762 1370 789">Replace magnetic sensor</p>
Inaccurate metering	<p data-bbox="610 936 995 995">Not enough straight pipe between meter and severe flow disturbance</p> <p data-bbox="610 1037 873 1064">Wrong K-Factor entered</p> <p data-bbox="610 1106 987 1165">Magnetic sensor failing to pick up each blade</p>	<p data-bbox="1084 936 1406 995">Move meter away from flow disturbance or field calibrate</p>



Seametrics Incorporated • 19026 72nd Avenue South • Kent, Washington 98032 • USA

(P) 253.872.0284 • (F) 253.872.0285 • 1.800.975.8153 • www.seametrics.com

LT-65200048-043015
4/30/2015