

# Fluorescein Calibration

For this procedure, you'll need Pyxis Lab® 50, 250, & 500 ppb Fluorescein Cal Solutions. To start select 'Calib' on Measurement Menu, and then Select 'Fluorescein'.




Rinse (3x) and Insert DI Water, then select 'Zero'



Rinse (3x) and Insert, 250 ppb Solution, then select 'Slope'



Rinse (3x) and Insert 50 ppb Solution, then select 'Slope'

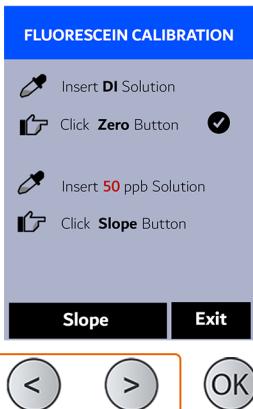

Rinse (3x) and Insert, 500 ppb Solution, then select 'Slope' & 'Exit'



# Support


Scan the QR Code to Learn How to  
Replace & Pair the Wireless pH/ORP Module



Scan the QR Code to Learn How to  
Conduct a Cleanliness Check & Clean Properly



Need **Tech Support?**  
Scan the QR Code to Request Tech Support

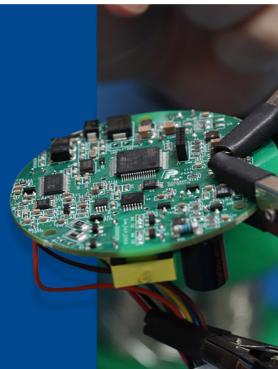

**Pyxis®**  
**SP-710B Handheld Multimeter**

Quick-Start Guide



**MAINTAIN 2ml of Storage Solution in pH/ORP Cell when not in use to keep electrodes hydrated.**

Scan QR Code for  
User Manual

[www.pyxis-lab.com](http://www.pyxis-lab.com)

+1 (866) 203 - 8397

1729 Majestic Dr. (Suite 05)

Lafayette, CO 80026 USA




# pH Calibration


Power on the pH/ORP Sensor by opening the lid. A blinking light will indicate the sensor is on.




## Select pH Calibration

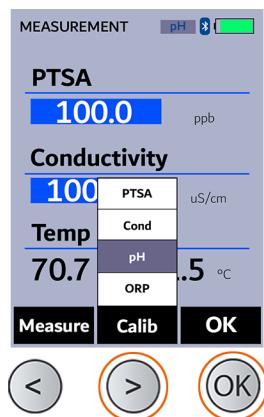


Rinse (3x) and Insert pH7 buffer, wait for lock icon then select 'pH7'

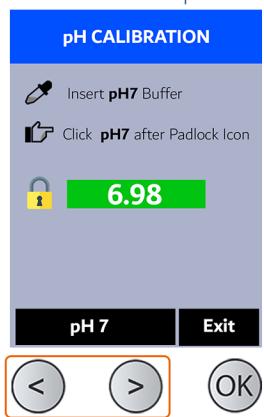

Rinse (3x) and Insert pH4 buffer, wait for lock icon then select 'Calib'

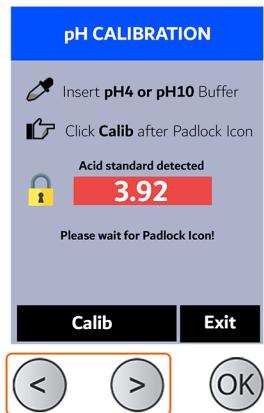

Rinse (3x) and Insert pH10 buffer, wait for lock icon then select 'Calib'

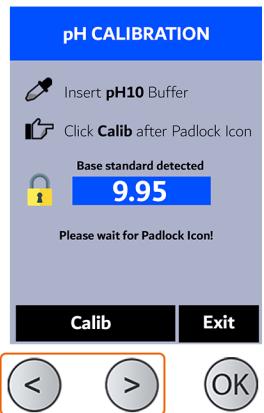


# Combined Calibration


For this procedure you will need Pyxis Lab® Combined Calibration Solution (1000 $\mu$ S Conductivity, 100ppb PTSA).




## Select 'Cond' Calibration

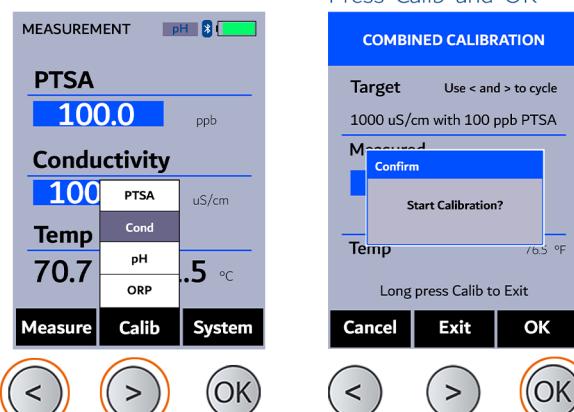

Rinse (3x) and Insert Combined Cal Solution. Press 'Calib' and 'OK'

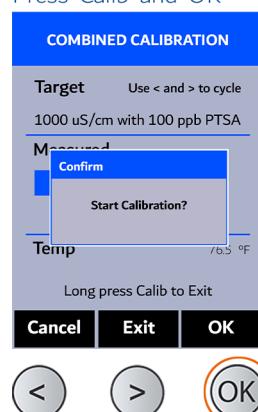

Your unit is now calibrated for PTSA & Conductivity.

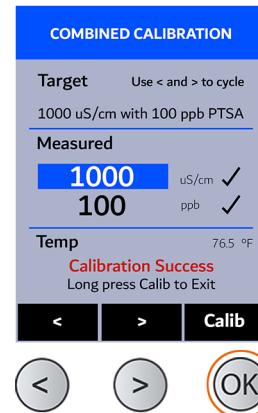

# Necessary Solutions



Pyxis Lab®  
**pH Calibration Combo Pack**  
pH 4.0, 7.0, and 10.0 Calibration Solutions



Pyxis Lab®  
**ORP Calibration Standard**  
+ 200 mV Solution



Pyxis Lab®  
**Combined Calibration Standard**  
100 ppb PTSA and 1000  $\mu$ S Conductivity



Pyxis Lab®  
**Fluorescein Calibration Standards**  
10 ppb, 50 ppb, 250 ppb, & 500 ppb Cal Solutions



Scan QR Code to  
**Shop for Cal & Cleaning Solutions**