

EI WISER 3x

TRIAxIAL ACCELEROMETER

PRODUCT DETAILS

Thank you for purchasing the WISER 3x!
For optimum operation and safety, please read this manual carefully to have the best results.



Step 1 POWER ON/OFF


Press the button and the blue light will turn on after 2 seconds.
The device is active and ready to be paired.



To turn the sensor off press and hold the button for 3 seconds and then release.
The blue light will turn off.

NOTE: If the WISER 3x cannot find a device to pair within 2 minutes, it will automatically shut down.

Step 2 WISER 3x APP CONFIGURATION

1. Download the app on the App Store 
Keywords: **Wiser Vibe** or **Erbesd Instruments**

2. Start the app and tap on 
Go to the menu  and tap on settings icon 

3. Select 4 Channels and Wifi connection.

Channels: 4
Connection: Wifi

Step 3 PAIRING WISER 3x WITH iPhone / iPad


4. Turn on the WISER 3x within the transmission range of 10m / 32ft.




5. Tap on the plug icon 


A pop-up window will be displayed, select **JOIN**


Step 4 READY TO RECORD

6. The Plug icon is replaced by the Record icon 

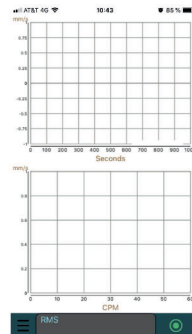

Step 5 LET'S ANALYZE!

7. Now use your WISER 3x pressing 
or just click the button of the sensor to start recording.

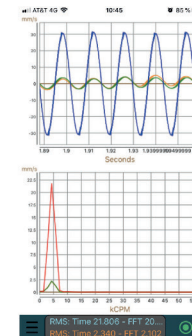

ERBESSD INSTRUMENTS®

WORLDWIDE toll-free:
+1-877-223-4606

ENGLISH:
Sales, Service & Support Engineer
+1-518-874-2700
info@erbesdreliability.com

SPANISH & FRENCH:
Sales, Service & Support Engineer
+52 (55) 6280-7654 / +52 (999) 469-1603
info@erbesd-instruments.com

BUY ONLINE
www.erbesd-instruments.com

ALL THE IMAGES ARE FOR ILLUSTRATIVE PURPOSES ONLY. THE FINAL PRODUCT MAY VARY DEPENDING ON THE VERSION AND/OR THE CHANGES OR UPGRADES MADE TO THE PARTS AND COMPONENTS OF THE DEVICES
© 2018 ERBESSD INSTRUMENTS

W3-052018.1011.09