



PT0E-2510

**04 Series
Calibration Station
SDM-04 Series
Operating Manual**

RIKEN KEIKI Co., Ltd.

2-7-6 Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan

Phone : +81-3-3966-1113

Fax : +81-3-3558-9110

E-mail : intdept@rikenkeiki.co.jp

Web site : <https://www.rikenkeiki.co.jp/english/>

Contents

1 Product Overview	3
1-1. Introduction	3
1-2. Intended use	3
1-3. DANGER, WARNING, CAUTION, and NOTE	4
2 Important Safety Information.....	5
2-1. Danger information	5
2-2. Warning information	5
2-3. Precautions.....	5
3 Product Configuration.....	6
3-1. Main unit and accessories.....	6
Main unit.....	6
Accessories	6
3-2. Part names and functions.....	7
4 Usage Instructions.....	9
4-1. Usage note	9
4-2. Startup preparations	9
4-2-1. Required equipment/materials	9
4-2-2. Interconnection (optional).....	13
4-2-3. Attaching the wall mounting fixture (sold separately).....	16
4-2-4. Connecting the AC adapter	18
4-2-5. Attaching the cylindrical filter (dust filter).....	19
4-2-6. Mounting the gas monitor (sold separately).....	20
4-2-7. Connecting the gas.....	23
4-2-8. Installing the PC Controller Program (sold separately).....	29
4-3. Startup	33
4-3-1. Turning on the power.....	33
4-3-2. LCD screen display	35
4-3-3. LED display list	36
4-4. Settings.....	38
4-4-1. Setting list	42
4-4-2. Cylinder settings	45
4-5. Operations using the product operation buttons.....	49
4-5-1. Bump test and gas adjustment procedure	49
4-5-2. Copying test/adjustment results to a USB flash drive (sold separately).....	54
4-5-3. Downloading gas monitor (sold separately) logger data.....	57
4-5-4. Updating firmware	60
4-6. Operations using the PC Controller Program (sold separately)	63
4-6-1. Bump test and gas adjustment procedure	63
4-6-2. Creating a calibration certificate	72
4-7. Turning off the power	74
5 Maintenance	75
5-1. Maintenance intervals and maintenance items	75
Maintenance service	75
5-2. Cleaning instructions	76
5-3. Parts replacement	76
5-3-1. Periodic replacement parts.....	76
5-3-2. Replacing the cylindrical filter (dust filter)	77
5-4. Portable gas monitor maintenance	77
6 Storage and Disposal	78
6-1. Procedures for storage or when not in use for extended periods.....	78
6-2. Product disposal	78
6-3. Disposing of gas cylinders.....	78
7 Troubleshooting	79
8 Product Specifications	82
8-1. Specifications list.....	82
8-2. Accessory list.....	83

Product Overview

1-1. Introduction

Thank you for your purchase of the SDM-04 SERIES Bump Tester for the 04 Series Portable Gas Monitor ("the product" hereinafter). Please confirm that the model number of the product you purchased matches the model number of the product covered by this manual.

The product should be used only by fully-trained personnel.

The maintenance procedures described in this manual also should be performed only by appropriately-trained personnel. Any maintenance procedure not described in this manual must be performed by RIKEN KEIKI or our certified service engineers. Please contact RIKEN KEIKI.

This manual describes how to use the product and provides product specifications. Make sure you have read and fully understood the contents of this manual before using the product. This applies both to first-time users and those who have previously used the product.

Keep this manual in a handy place so that you can refer to it at any time.

The contents of this manual are subject to change without notice to allow product improvements. Any duplication or reproduction of this manual without permission is prohibited, whether in whole or in part.

In addition to this manual, manuals are provided for optional products. Refer to the following manuals along with this manual when using optional products:

04 Series Portable Gas Monitor Operating Manual (PT0E-189)

Regardless of the warranty period, RIKEN KEIKI does not accept any liability for accidents or damage resulting from use of the product. Be sure to read the warranty policy set forth on the warranty.

1-2. Intended use

The product is a dedicated bump tester designed for use with the 04 Series Portable Gas Monitor (sold separately). It allows bump tests, gas adjustment, and alarm checks for the 04 Series except SC-04(CL2).

The product can be operated either using the buttons on the unit, or by connecting to a computer (PC) using the dedicated SW-SDM-PC3(EX) PC Controller Program (sold separately).

Note that this document refers to the 04 Series Portable Gas Monitor (sold separately) simply as "gas monitor (sold separately)".

The number of solenoid valves (one to three, specified at the time of purchase) and the number of gas types that can be connected simultaneously, and the model of gas monitor that can be used depend on the product specifications. Check the specifications before use to ensure correct specification for the intended purpose.

Model	Effective AIR / GAS inlet				Compatible gas monitor
	AIR	GAS1	GAS2	GAS3	
SDM-04(C1)	○	○	×	×	
SDM-04(C2)	○	○	○	×	
SDM-04(C3)	○	○	○	○	OX-04G, OX-04, CO-04, CO-04(C-), CX-04, HS-04
SDM-04(C4)	○	○	×	○	OX-04G, OX-04, CO-04, CO-04(C-), CX-04, HS-04, SC-04(SO ₂), SC-04(NO ₂), SC-04(HCN), SC-04(PH ₃), SC-04(NH ₃) *
SDM-04(C5)	○	×	×	○	SC-04(PH ₃), SC-04(NH ₃) *

*When SO₂, NO₂, HCN, PH₃, or NH₃ is used for the bump test and calibration, gas must be aspirated from the gas inlet GAS3.

Therefore, gas monitors SC-04 (SO₂), SC-04 (NO₂), SC-04 (HCN), SC-04 (PH₃), and SC-04 (NH₃) cannot be used with SDM-04(C1) and SDM-04(C2). Be sure to use SDM-04(C3), SDM-04(C4) or SDM-04(C5) with GAS3 enabled.

1-3. DANGER, WARNING, CAUTION, and NOTE

This manual uses the following headings to ensure safe and effective work:

 DANGER	This indicates situations in which improper handling may result in fatal or serious injury to persons or serious damage to property.
 WARNING	This indicates situations in which improper handling may result in serious injury to persons or serious damage to property.
 CAUTION	This indicates situations in which improper handling may result in minor injury to persons or minor damage to property.
NOTE	This indicates handling tips.

Important Safety Information

2-1. Danger information



DANGER

Usage

- The product is a non-explosion-proof device. Never use it in hazardous areas.
- Do not attempt to disassemble or modify the product.

2-2. Warning information



WARNING

Usage

Power source

- Before turning on the power for the product, be sure to confirm that the power source meets the specified voltage requirements.
Avoid using unstable power sources; doing so may lead to malfunctions.

External connections

- Avoid applying excessive pressure to the gas and air inlets.
Applying excessive pressure to the product's sampling pipe openings (GAS IN, GAS OUT) is hazardous. Doing so may cause the detection target gas to leak from the product.
- Discharge the gas exhausted after use to a location determined to be safe by connecting an exhaust pipe to the detection target gas outlet (GAS OUT) located on the bottom of the main unit.

Sensor handling

Zero adjustment in surrounding atmosphere (fresh air adjustment)

- Before using the product, confirm that the surrounding atmosphere is filled with fresh air.
Correct adjustment will not be possible in the presence of miscellaneous gases. The presence of interference gases is also extremely dangerous because the product may not detect actual gas leaks correctly.

2-3. Precautions



CAUTION

Usage

Product installation

- Install the product on a flat work table.

External connections

- Be careful not to damage the USB flash drive storing test results and maintenance history due to contact.

3

Product Configuration


3-1. Main unit and accessories

Open the box and packaging and inspect the product and accessories.
If anything is missing, contact RIKEN KEIKI.

Main unit

For detailed information on the names and functions of product parts and the LCD display, refer to '3-2. Part names and functions.'

The product consists of the SDM-04(U) on which the gas monitor (sold separately) is mounted and the SDM-BASE to which the gas is connected.

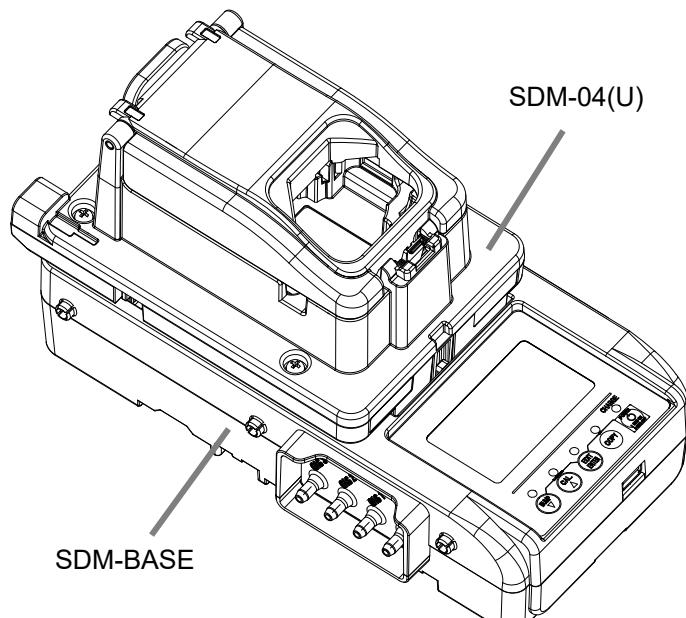


SDM-04 Series

Accessories

- Cylindrical filter (×1)
- Tube (approx. 40 mm long, 5 to 7 mm diameter) (×1)
- AC adapter (×1)
- Connecting fixture (set of 2)

3-2. Part names and functions

This section describes the names and functions of the various parts of the main unit.

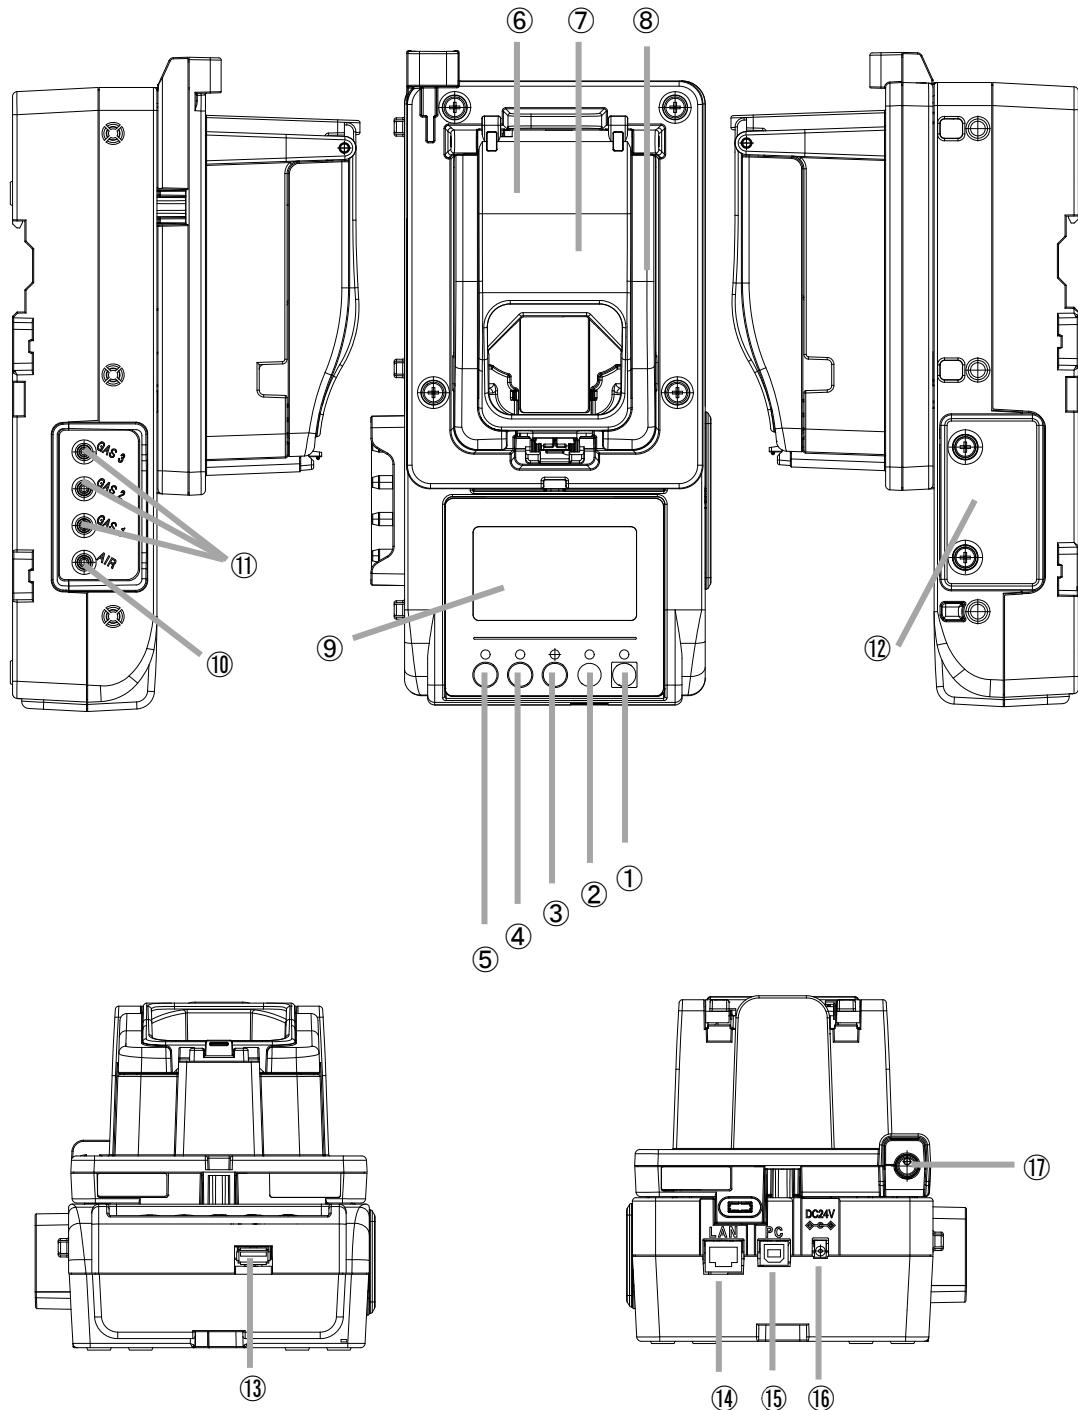

No.	Name	Function
①	POWER button	<ul style="list-style-type: none"> Turns the product power on and off. <p>(Pressing this button and the EDIT/ENTER button simultaneously turns off the gas monitor (sold separately).)</p>
②	COPY button	<ul style="list-style-type: none"> Copies bump test, gas adjustment, and alarm check records to a USB flash drive (sold separately). <p>(Pressing this button and the CAL/▲ button simultaneously clears the memory in the main unit.)</p>
③	EDIT/ENTER button	<ul style="list-style-type: none"> Displays various setting menus. <p>(Pressing this button and the BUMP/▼ button simultaneously starts the alarm check.)</p> <p>(Pressing this button and the POWER button simultaneously turns off the gas monitor (sold separately).)</p>
④	CAL/▲ button	<ul style="list-style-type: none"> Starts/cancels gas adjustment. Moves the cursor up on the screen. <p>(Pressing this button and the COPY button simultaneously clears the memory in the main unit.)</p>
⑤	BUMP/▼ button	<ul style="list-style-type: none"> Starts/cancels the bump test. Moves the cursor down on the screen. <p>(Pressing this button and the EDIT/ENTER button simultaneously starts/cancels the alarm check.)</p>
⑥	Gas monitor retaining tab	Tab for retaining the gas monitor (sold separately) on the product
⑦	Gas monitor dock	Position for mounting the gas monitor (sold separately) on the product
⑧	Gas monitor cover	Cover for securing the gas monitor (sold separately) in place on the product
⑨	LCD display	Displays the status and settings.
⑩	Air inlet	Aspirates air.
⑪	Gas inlets	Draw in gas. Marked GAS 3/GAS 2/GAS 1 from top to bottom
⑫	Side cover	Remove when multiple units of the product are interconnected (optional).
⑬	USB port	Used to save text files to a USB flash drive (sold separately)
⑭	LAN cable connector	You can connect the product to a network within the building using a LAN cable (sold separately). Use a separately sold or shielded LAN cable to prevent malfunctions due to noise.
⑮	PC connection cable connector	You can connect the product to a PC using a USB cable (Type-A male - Type-B male) (sold separately).
⑯	Power jack	Insert the power supply AC adapter plug.
⑰	Gas outlet	Discharges drawn gas.

Usage Instructions

4-1. Usage note

The operating precautions apply to both first-time users and those who have previously used the product.

Ignoring these precautions may damage the product and result in inaccurate gas detection.



DANGER

Usage

- The product is a non-explosion-proof device. Never use it in hazardous areas.
- Do not attempt to disassemble or modify the product.



WARNING

Usage

Before turning on the power for the product, be sure to confirm that the power source meets the specified voltage requirements. Avoid using unstable power supplies; doing so may lead to malfunctions.

4-2. Startup preparations

NOTE

- The product is compatible with the 04 Series Portable Gas Monitor (sold separately).

4-2-1. Required equipment/materials

The following equipment and materials are required in addition to the product:

- 04 Series Portable Gas Monitor
- Calibration gas for bump test/gas adjustment
- Gas sampling bag for exhaust gas (where necessary)
- Exhaust tube (where necessary)

<When using a gas mixture cylinder >

- Demand flow valve
- Tube (no longer than 1 m; recommended internal diameter: 5 mm)

<When collecting gas in a gas sampling bag>

- Gas sampling bag

<Recommended calibration gas concentrations for bump test/gas adjustment and gas aspiration time>

Detection target gas	Model	Gas	Gas concentration	Gas aspiration time
Oxygen (O ₂)	OX-04G OX-04	N ₂	99.9 % or more	60 sec.
Hydrogen sulfide (H ₂ S)	HS-04	Hydrogen sulfide (H ₂ S)	16.0 ppm	60 sec.
Carbon monoxide (CO)	CO-04	Carbon monoxide (CO)	80 ppm	60 sec.
Carbon monoxide (CO)	CO-04(C-) (with hydrogen interference correction function)	Carbon monoxide (CO)	80 ppm	60 sec.
		Hydrogen (H ₂) Air diluted	500 ppm	60 sec.
Carbon monoxide (CO)	CX-04	Carbon monoxide (CO) N ₂ diluterd	80 ppm	60 sec.
Oxygen (O ₂)	CX-04	N ₂	99.9% or more	60 sec.
Sulfer dioxide (SO ₂)	SC-04(SO ₂)	Sulfer dioxide (SO ₂) N ₂ diluterd	8 ppm	60 sec.
Nitrogen dioxide (NO ₂)	SC-04(NO ₂)	Nitrogen dioxide (NO ₂) Air diluted	4.8 ppm	60 sec.
Hydrogen cyanide (HCN)	SC-04(HCN)	Hydrogen cyanide (HCN) Air diluted	8 ppm	120 sec.
		Phosphine (PH ₃) N ₂ diluterd, substitute gas	0.5 ppm (PH ₃ concentration x conversoin factor = HCN concentration)	60 sec.
Phosphine (PH ₃)	SC-04(PH ₃)	Phosphine (PH ₃) N ₂ diluterd	0.50 ppm	60 sec.
Ammonia (NH ₃)	SC-04(NH ₃)	Ammonia (NH ₃) N ₂ diluterd	40 ppm	120 sec.

* The specified adjustment temperature range for H₂ (air diluted) is 10 °C to 30 °C.

* For PH₃ (N₂-based, substitute gas), calibrate within the range from 10 °C to 30 °C with the filter removed.

* The specified adjustment temperature range for SO₂, NO₂, NH₃ is 10 °C to 40 °C.

- * SDM-04 Series is not compatible with SC-04(CL2); for SC-04(CL2), use a dedicated unit.
For details, please contact Riken Keiki.



WARNING

Calibration gas for bump test/gas adjustment

The calibration gas for bump test/gas adjustment may be hazardous (combustible or toxic gas) or may cause oxygen deficiency. Handle the gas and related jigs and tools with due care.

Gas sampling bag

Use different gas sampling bags for each gas type and concentration to ensure accurate adjustment.

Gas introduction

Connecting a high-pressure gas cylinder directly may damage the product pump.

Use a gas sampling bag or other method to avoid connecting high-pressure gas.

Bump test and gas adjustment location

- Do not perform bump tests or gas adjustment in confined spaces.
- Do not perform bump tests or gas adjustment in an atmosphere where silicone or organic solvents are present.
- Perform adjustment indoors at normal temperatures with no significant fluctuations (within ± 5 °C).

Carbon monoxide sensor (ESR-A1CP) gas adjustment

- The carbon monoxide sensor with hydrogen interference correction function (ESR-A1CP) must be adjusted separately for carbon monoxide and hydrogen.
- The carbon monoxide and hydrogen used for adjustment must each be a single gas. Adjustment can be performed using a gas mixture, but it will result in poor sensitivity adjustment and inaccurate concentration readings.
- If hydrogen sensitivity is not adjusted, carbon monoxide readings may be slightly higher or lower than the actual concentrations when measured in environments where hydrogen is also present.

Zero adjustment in surrounding atmosphere (fresh air adjustment)

- Before using the product, confirm that the surrounding atmosphere is filled with fresh air.
- Correct adjustment will not be possible in the presence of miscellaneous gases. The presence of interference gases is also dangerous because the product may not detect actual gas leaks correctly.



CAUTION

Gas discharge

- When feeding gas, it should either be discharged to a safe location with the gas outlet open to the atmosphere or collected using a gas sampling bag.
- When using the product with multiple units interconnected, discharge exhaust gas from each unit separately.

Carbon monoxide sensor (ESR-A1CP) gas adjustment

- Hydrogen span adjustment may become impossible if the product is used or stored for extended periods in dry environments. If [FAIL SENSOR] is displayed during hydrogen span adjustment, allow the main unit to stand overnight in a sufficiently humid environment before repeating the gas adjustment. If CO span adjustment is no longer possible, contact RIKEN KEIKI to request sensor replacement.

Demand flow valve

- Demand flow valves have a limit on the maximum flow rate they can draw in. When using a demand flow valve, the product should not be used with multiple units interconnected.
- Check the specifications of the demand flow valve to confirm its maximum flow rate.

When using the product with multiple units interconnected

- When gas is introduced for the first time to the product, particularly when 10 units are interconnected, it may take some time for the air in the piping to be replaced by the gas. If a bump test results in FAIL, execute the bump test again and check.

Restriction by specific gases

- When SO₂, NO₂, NH₃, PH₃, or HCN is used as a bump test or gas adjustment gas, the gas should be drawn from GAS3.
- O₂, H₂S, and CO can be introduced from GAS1, GAS2, or GAS3.
- When using SO₂, NO₂, NH₃, PH₃, or HCN as a bump test or gas adjustment gas, please do not use this unit with multiple units interconnected. When using these units interconnected, install a target gas monitor (sold separately) only on the unit connected to the leftmost unit.
- When using SO₂, NO₂, NH₃, PH₃, or HCN as a bump test or gas for gas adjustment, make sure that the suction port display on the LCD is set to C3. For information on how to change the cylinder setting, refer to "4-4-2. Cylinder settings".

4-2-2. Interconnection (optional)

The product can be used with up to 10 units interconnected.




CAUTION

- When using SO₂, NO₂, NH₃, PH₃, or HCN as a bump test or gas adjustment gas, please do not use this unit with multiple units interconnected. When using these units interconnected, install a target gas monitor (sold separately) only on the unit connected to the leftmost unit.
- Do not connect more than 10 units together. Exceeding this number may result in inadequate flow rates due to piping resistance.
- When these units are connected together, the buzzer sound of the gas monitor set in the adjacent unit may be detected incorrectly depending on the timing of the alarm check. In addition, the buzzer sound of the gas monitor may not be detected correctly due to ambient noise.
When using this unit in conjunction with other units, or when using this unit in an environment where loud noises may be generated, the use of a noise reduction cover (sold separately) is recommended.

NOTE


- Only the piping is connected; the units are not connected electrically.

- 1 Confirm that the product is not connected to the power supply.**
- 2 Follow steps 3 to 5 below for all SDM-04 units except for the rightmost unit.**

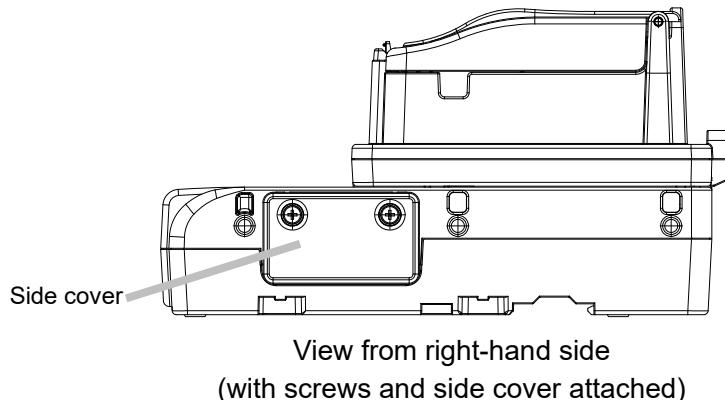

- 3 Remove the two screws (M4×8 double SEMS) securing the side cover on the right-hand side of the product.**

Keep the screws, taking care not to lose them.

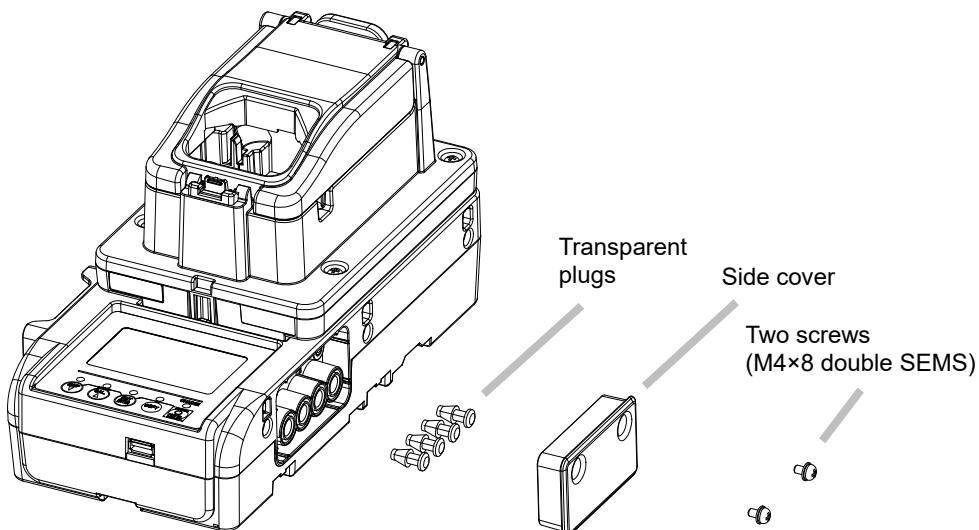

- 4 Remove the side cover.**

Keep the side cover, taking care not to lose it.

- 5 Remove the transparent plugs attached to the four sample connectors.**


Keep the transparent plugs, taking care not to lose them.

- 6 Align the sample connectors on the two leftmost product units, then push in until the two product units are in contact with each other.**

- 7 Add a product unit in the same way as in step 6.**

Leave the right-hand side cover and transparent plugs attached to the last unit connected.


- 8 Use the connecting fixtures and screws (sold separately) to secure the two product units together at the two connecting points on the base of each unit.**

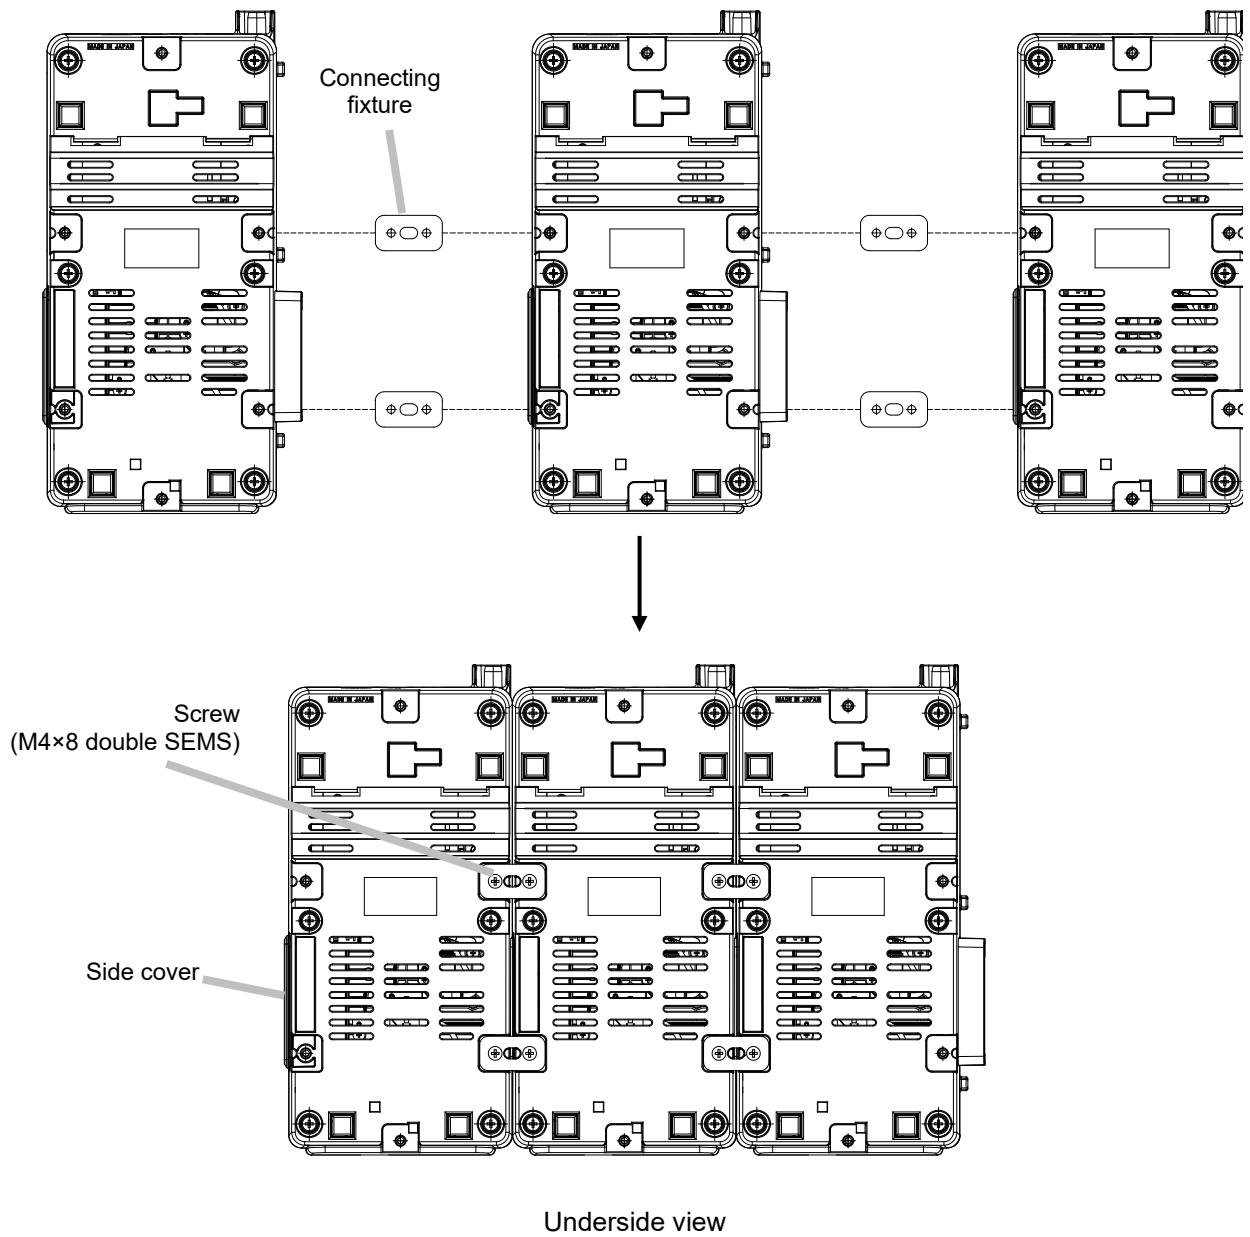


Underside view

4-2-3. Attaching the wall mounting fixture (sold separately)

- 1 Use the screws provided (M4×8) to secure the wall mounting fixture (sold separately) to the product.

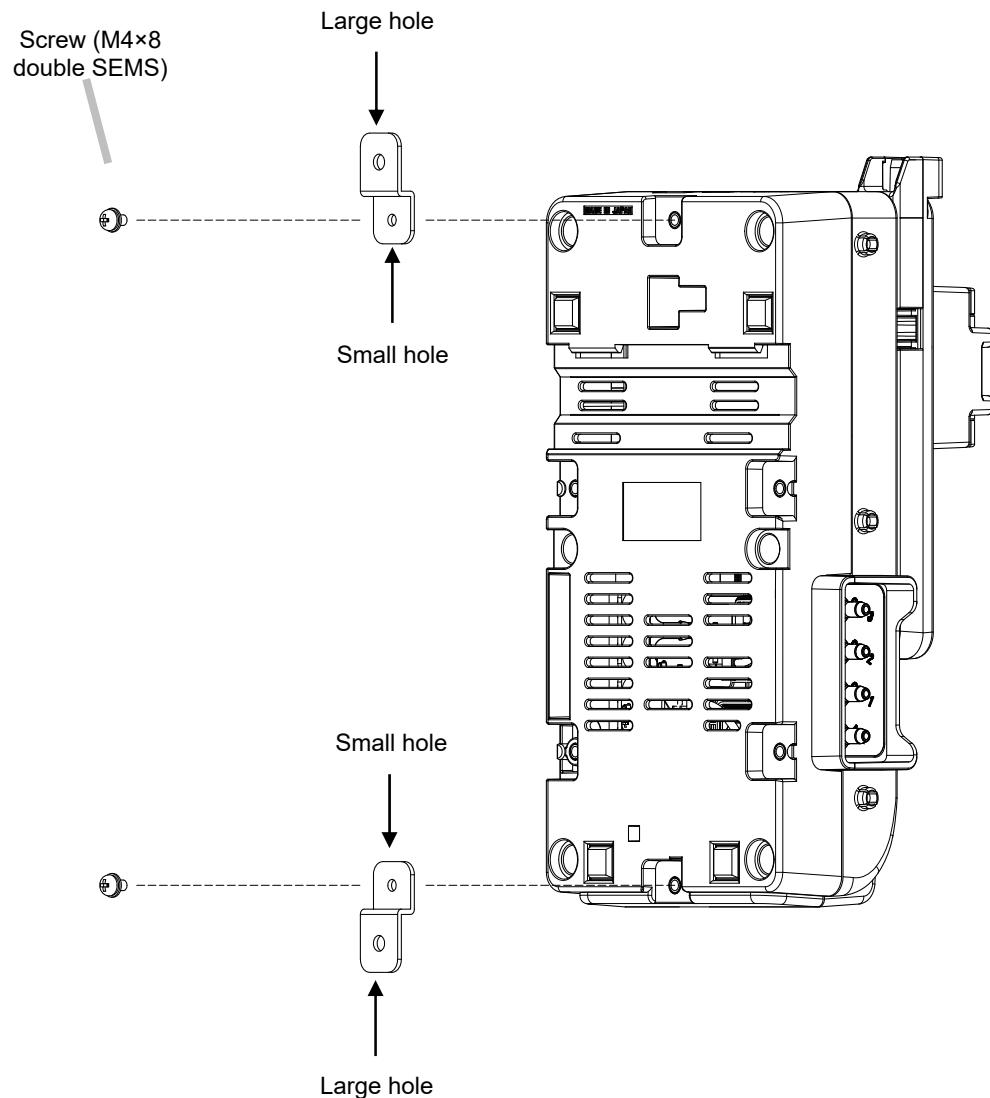


2 Use the screws to secure the wall mounting fixture to the wall.

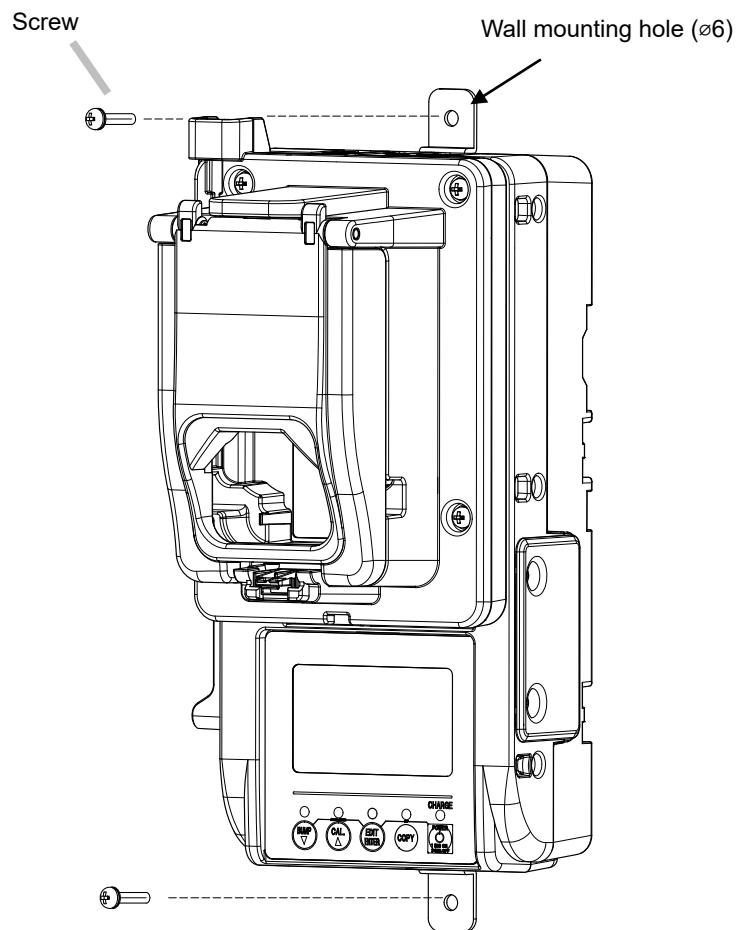


4-2-4. Connecting the AC adapter

- 1 Insert the plug of the AC adapter fully into the power jack at the rear of the product.**

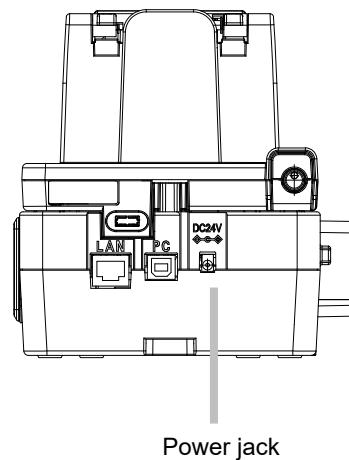

- 2 Plug the AC adapter into the mains outlet.**

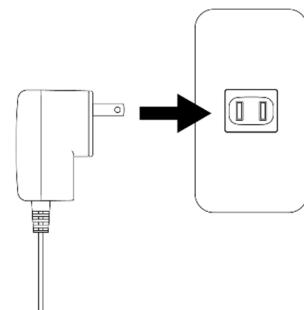


NOTE

- When using the product with multiple units interconnected, each unit must be connected to a separate power supply.

4-2-5. Attaching the cylindrical filter (dust filter)

- 1 **Attach the cylindrical filter provided, aligning the direction of the arrow engraved on it with the AIR inlet on the side of the product.**

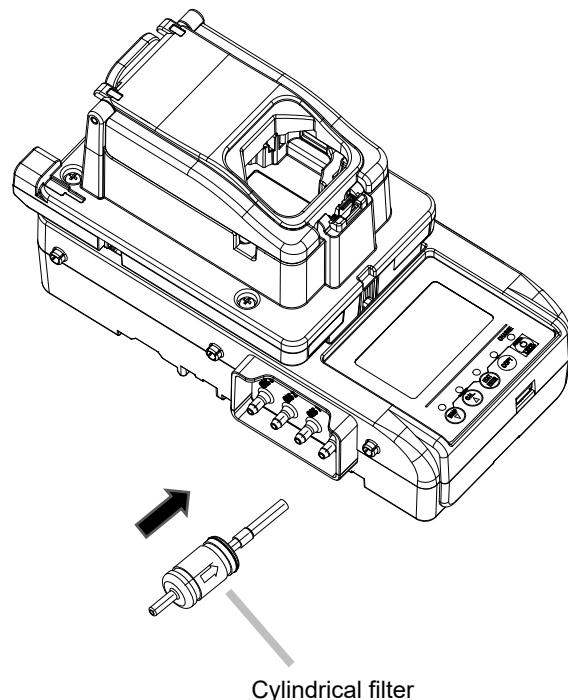


4-2-6. Mounting the gas monitor (sold separately)




CAUTION

- When closing the gas monitor cover, do not push it forcibly if the gas monitor is tilted at an extreme angle or mounted facing the wrong way. Doing so may damage the product.
- Remove any leather case, heat-resistant case, or arm band (belt) from the gas monitor (sold separately) before mounting.
- It can be mounted on the product with the rear clip attached. Do not close the gas monitor cover with the alligator clip in the open position.

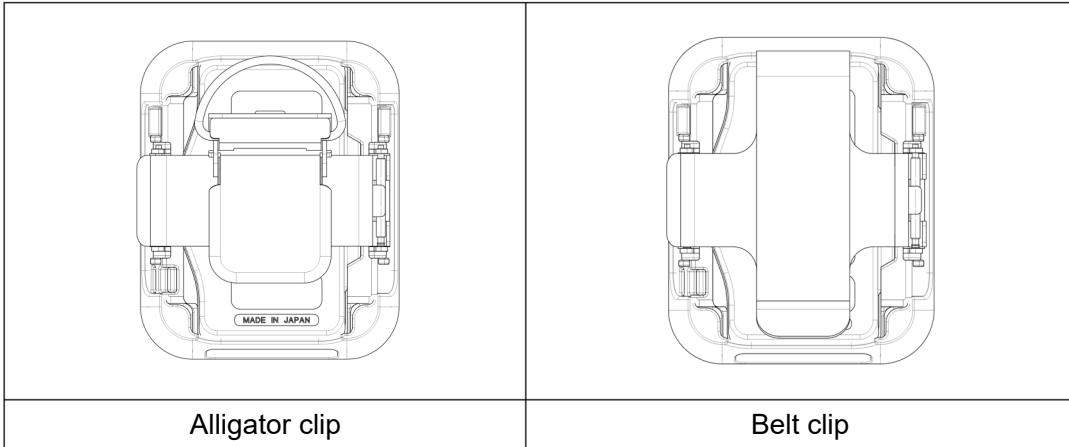


- When mounting on the product with the hand strap attached, be careful to avoid catching the strap between the gas monitor (sold separately) and the cover. Correct gas adjustment may not be possible if mounted on the product with the hand strap caught.

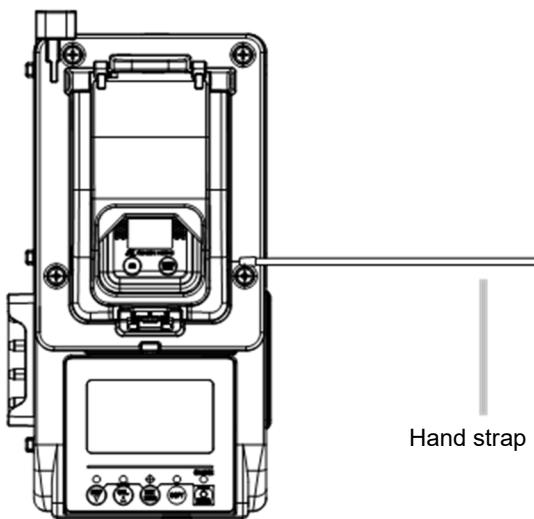


<Mounting the gas monitor (sold separately)>

- 1 Push the locking lever on the gas monitor cover in the direction of the arrow to open the cover.**

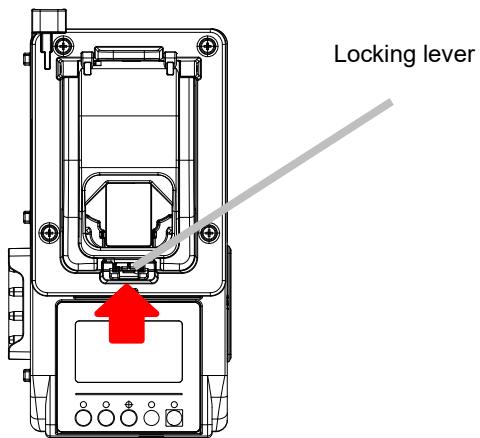


- 2 Turn on the power for the gas monitor (sold separately), then mount with the LCD display (gas sensor side) facing the product as shown in the figure.**

There is a tab to retain the gas monitor in place. When mounting the gas monitor, make sure that it engages with the tab.

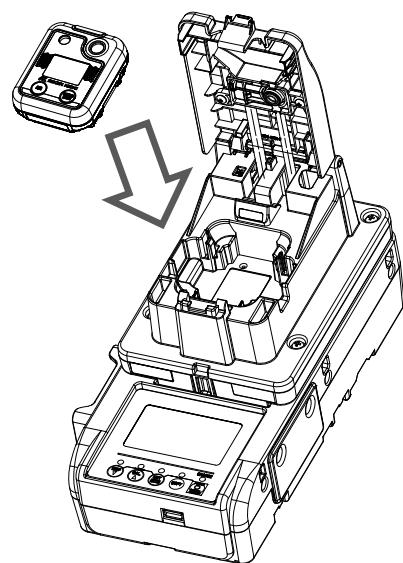


- 3 Close the gas monitor cover on the product.**

Press down on the part marked “PUSH” until the gas monitor cover clicks into place.

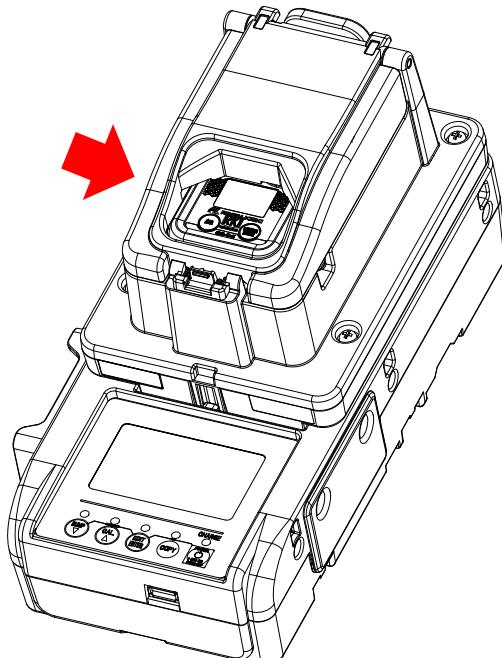


<Detaching the gas monitor (sold separately)>

- 1 Push the locking lever on the gas monitor cover in the direction of the arrow to open the cover.**


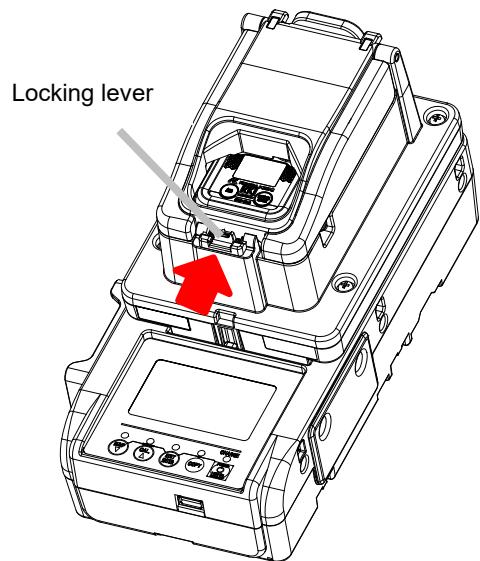


- 2 Remove the gas monitor (sold separately) from the product.**

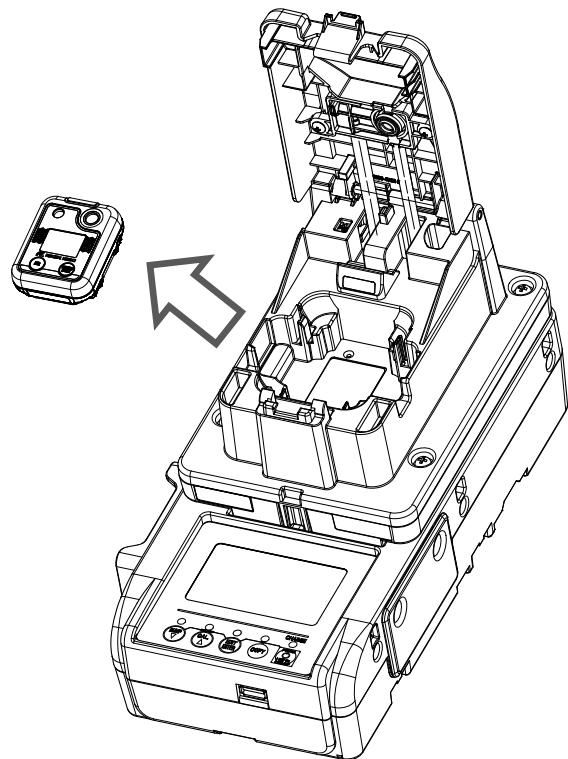

4-2-7. Connecting the gas

<Connection>

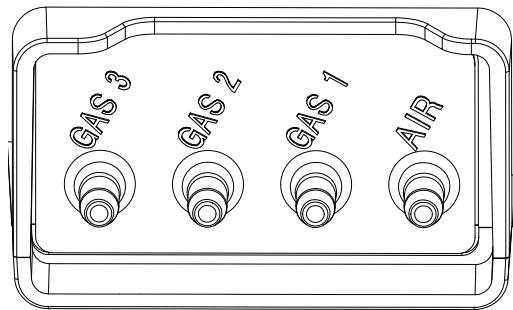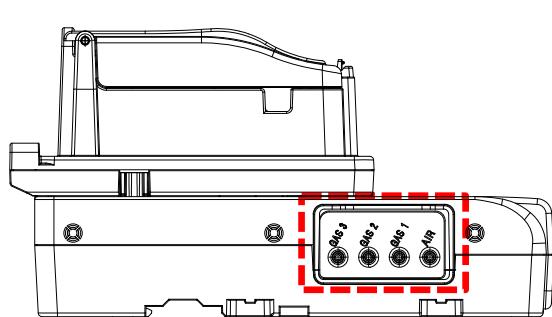


The gas inlets are located on the side of the product.

On products SDM-04(C1) (containing one solenoid valve), the gas inlet is GAS 1.

On products SDM-04(C2) (containing two solenoid valve), the gas inlets are GAS 1 and GAS 2.

On products SDM-04(C3) (containing three solenoid valve), the gas inlets are GAS 1, GAS 2, and GAS 3.

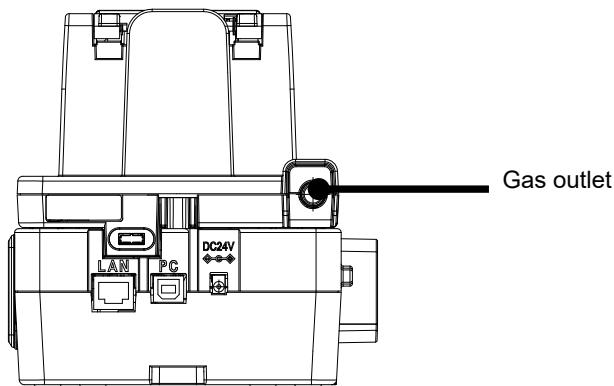

Connectors are located at the rear of the product for connecting to external devices.



WARNING

Calibration gas for bump test/gas adjustment

- The calibration gas for bump test/gas adjustment may be hazardous (combustible or toxic gas) or may cause oxygen deficiency. Handle the gas and related jigs and tools with due care.
- When adjusting SC-04(NO₂), NO₂ gas should be used within 30 minutes after preparation.
- When adjusting SC-04(HCN) with alternative gas (PH₃), remove the filter (CF-A13D-3).

Gas sampling bag

Use different gas sampling bags for each gas type and concentration to ensure accurate adjustment.

Gas introduction

Connecting a high-pressure gas cylinder directly may damage the product pump.

Use a gas sampling bag or other method to avoid connecting high-pressure gas.

Bump test and gas adjustment location

- Do not perform bump tests or gas adjustment in confined spaces.
- Do not perform bump tests or gas adjustment in an atmosphere where silicone or organic solvents are present.
- Perform adjustment indoors at normal temperatures with no significant fluctuations (within ±5 °C).

Gas discharge when multiple units are interconnected

When using the product with multiple units interconnected, discharge exhaust gas from each unit separately.

Do not combine the exhaust tubes into a single tube for gas discharge.



CAUTION

When feeding gas, it should either be discharged to a safe location with the gas outlet open to the atmosphere or collected using a gas sampling bag.

Restriction by specific gases


- When SO₂, NO₂, NH₃, PH₃, or HCN is used as a bump test or gas adjustment gas, the gas should be drawn from GAS3.
- O₂, H₂S, and CO can be introduced from GAS1, GAS2, or GAS3.
- When using SO₂, NO₂, NH₃, PH₃, or HCN as a bump test or gas adjustment gas, please do not use this unit with multiple units interconnected. When using these units interconnected, install a target gas monitor (sold separately) only on the unit connected to the leftmost unit.
- When using SO₂, NO₂, NH₃, PH₃, or HCN as a bump test or gas for gas adjustment, make sure that the suction port display on the LCD is set to C3. For information on how to change the cylinder setting, refer to "4-4-2. Cylinder settings".

<Piping>

SDM-04(C3): With three solenoid valves


Gas can be introduced via each of three gas inlets GAS 1 to GAS 3. Set what gas type is to be introduced via what gas inlet as described later in '4-4-2. Cylinder settings'.

If there are insufficient gas inlets for the number of gas types to be introduced, you can manually switch gas types on the GAS 2 or GAS 3 inlet.

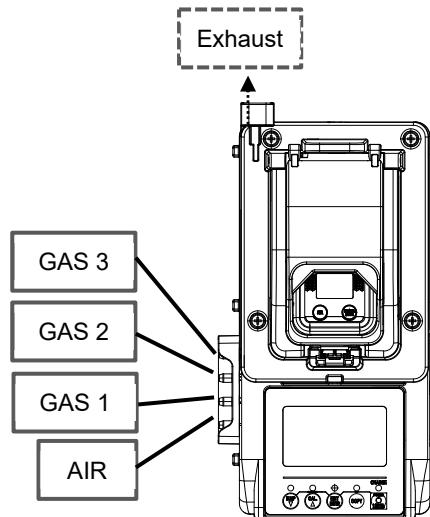

SDM-04 (C1): With one solenoid valve


Gas can be introduced via the GAS 1 inlet only. To introduce more than one type of gas into the product, the next gas must be connected manually after the first gas has been introduced.

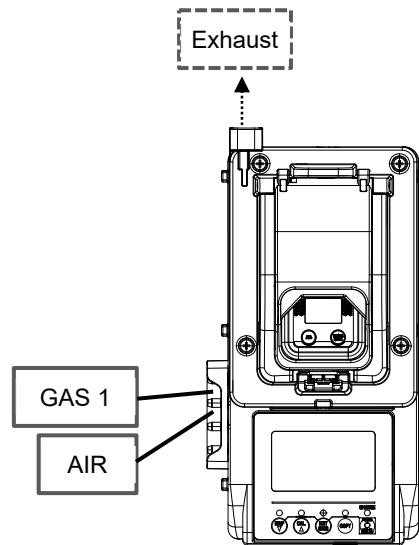

SDM-04(C2): With two solenoid valves

On products containing two solenoid valves, gas can be introduced via the GAS 1 and GAS 2 inlets.


If there are insufficient gas inlets for the number of gas types to be introduced, you can manually switch gas types on the GAS 2 inlet.

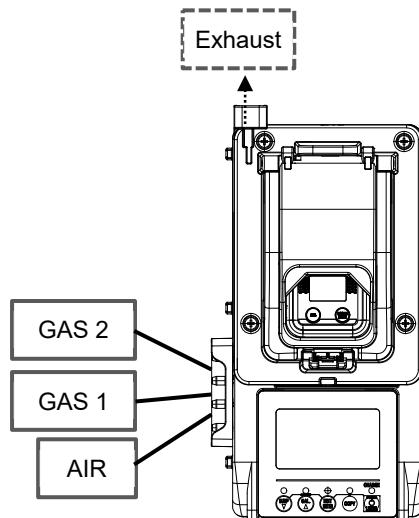

SDM-04 (C4): With Two solenoid valve


On products containing two solenoid valves, gas can be introduced via the GAS 1 and GAS 3 inlets.

If there are insufficient gas inlets for the number of gas types to be introduced, you can manually switch gas types on the GAS 3a inlet.

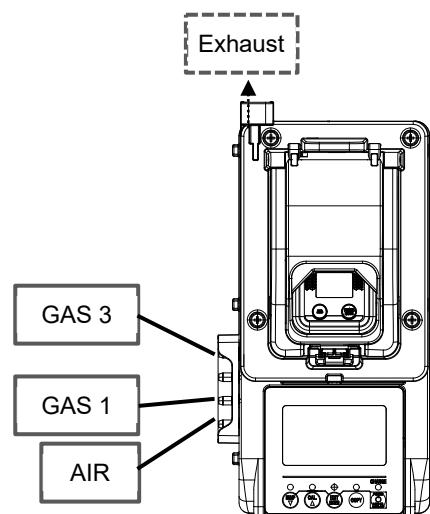

SDM-04(C5): With one solenoid valves

Gas can be introduced via the GAS 3 inlet only. To introduce more than one type of gas into the product, the next gas must be connected manually after the first gas has been introduced.

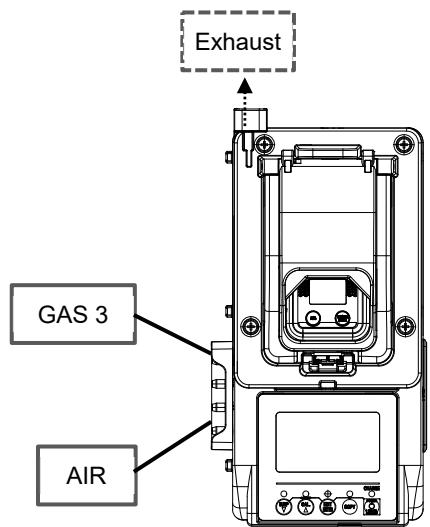


<Piping (using the PC Controller Program (sold separately))>

Mount the gas monitor (sold separately) on the product, then connect the PC.

SDM-04(C3): With three solenoid valves

Gas can be introduced via each of three gas inlets GAS 1 to GAS 3. Set what gas type is to be introduced via what gas inlet as described in '4-6. Operations using the PC Controller Program (sold separately)'.


Mount the gas monitor (sold separately) on the product, then connect the PC.

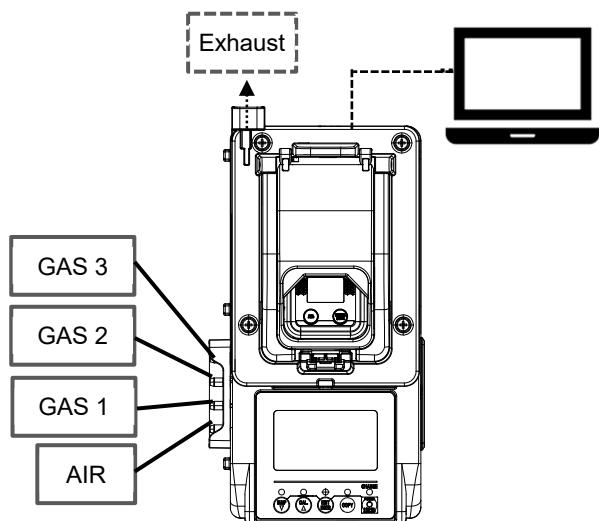

SDM-04(C1): With one solenoid valve

Gas can be introduced via the GAS 1 inlet only, in the same way as the piping arrangement when no PC is used.


If there are insufficient gas inlets for the number of gas types to be introduced, the PC Controller Program must be used to add gas types to be introduced.

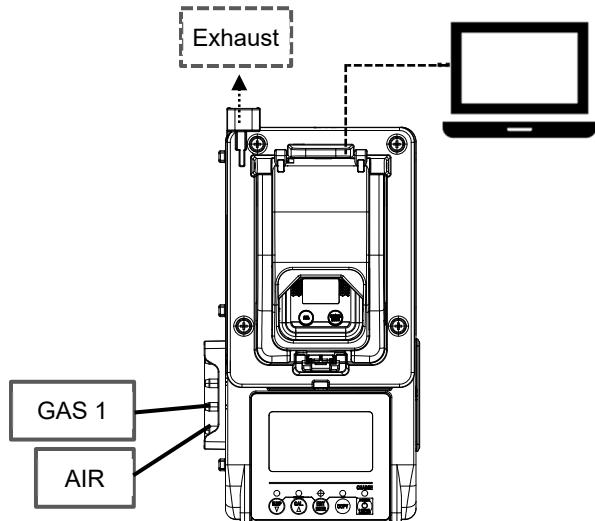

SDM-04(C2): With two solenoid valves

Gas can be introduced via the GAS 1 and GAS 2 inlets.


If there are insufficient gas inlets for the number of gas types to be introduced, the PC Controller Program must be used to add gas types to be introduced.

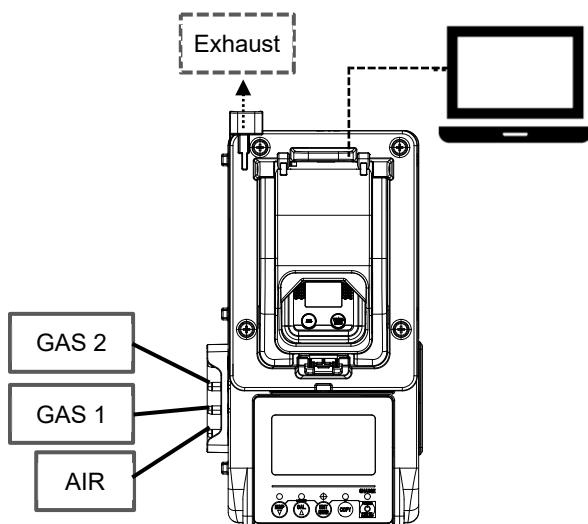

SDM-04(C4): With two solenoid valves

Gas can be introduced via the GAS 1 and GAS 3 inlets.


If there are insufficient gas inlets for the number of gas types to be introduced, the PC Controller Program must be used to add gas types to be introduced.

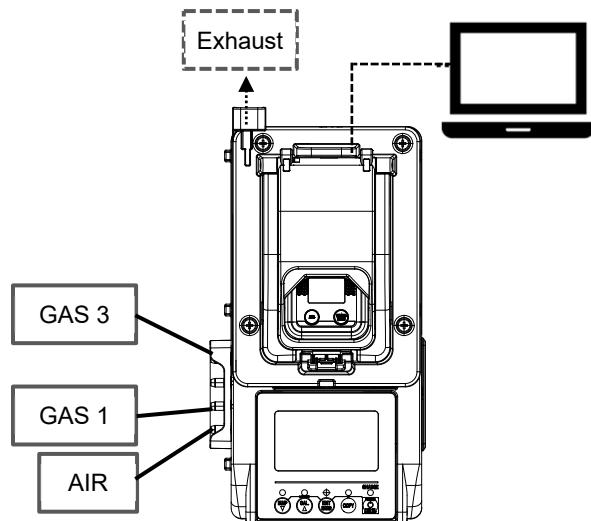

SDM-04(C5): With one solenoid valve

Gas can be introduced via the GAS 3 inlet only, in the same way as the piping arrangement when no PC is used.

If there are insufficient gas inlets for the number of gas types to be introduced, the PC Controller Program must be used to add gas types to be introduced.

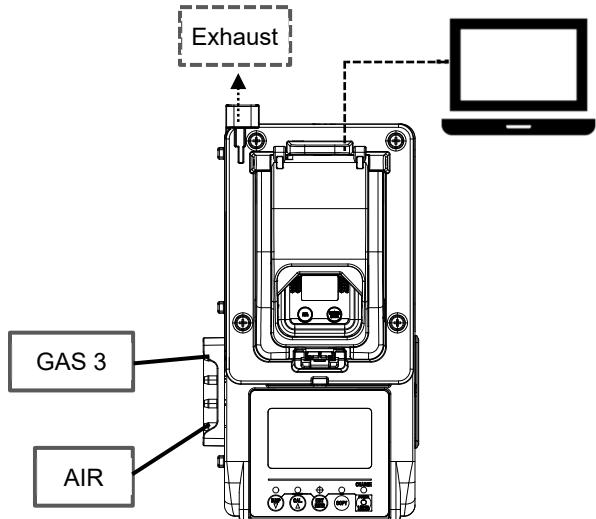

NOTE

- If the GAS 2 and GAS 3 inlets are not available due to the number of solenoid valves, the next gas must be connected manually after the first gas has been introduced.
- For information on how to alter the cylinder settings, refer to '4-4-2. Cylinder settings'.

4-2-8. Installing the PC Controller Program (sold separately)

Using the PC Controller Program (sold separately), you can control gas adjustment and other operations using the product from the PC.

The PC Controller Program (sold separately) must be installed before it can be used.

NOTE

- Use a USB cable (Type-A male - Type-B male) (sold separately) to connect the product to a PC.

<System requirements>

The PC must meet the following system requirements to use the PC Controller Program (sold separately):

- Operating system (OS): Windows® 10 or Windows® 11
- Processor: Pentium® 2 or equivalent processor operating on an IBM® compatible PC (minimum requirements)
- Memory: 32 MB RAM (minimum)
- Available hard disk space: 32 MB (minimum)
- An available USB port

<Installation>

- 1 Insert the installation CD containing the program into the CD-ROM drive of the PC. The installation screen will appear automatically after a short while.


Do the following if the PC does not support automatic CD-ROM startup:

1. Open the CD-ROM drive in Explorer.
2. Double-click on the "setup.exe" file.


Note: Install using a user account with administrator rights.




- 2 The installer preparation screen appears. Wait for a while.

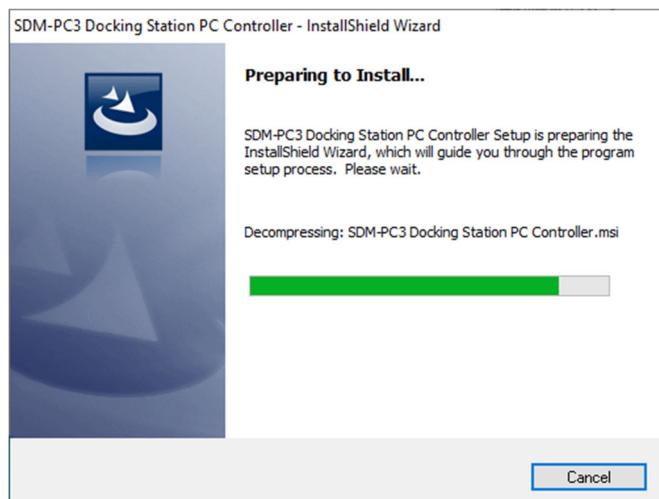


3 Click [Next] to proceed.

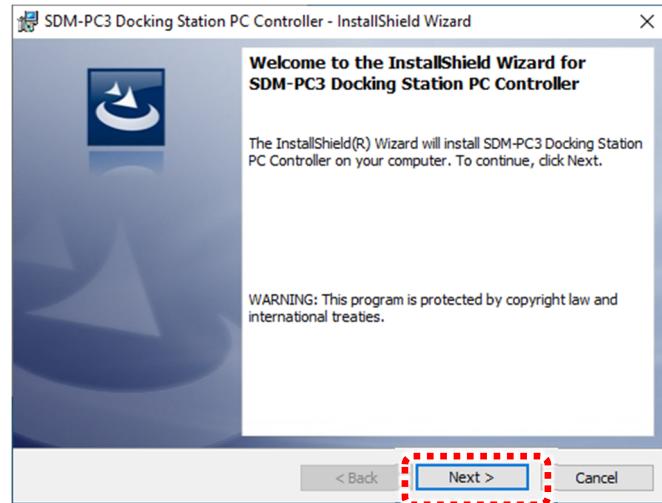


4 The license agreement screen appears.
By default, [I do not accept the terms in the license agreement] is selected.

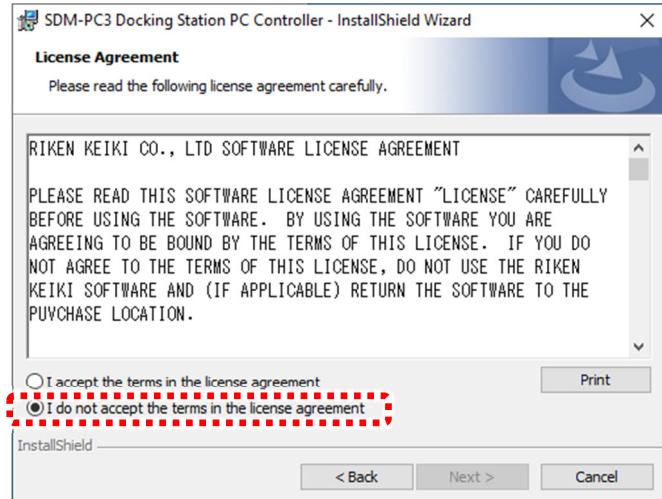


5 Read and confirm the details described thoroughly, select [I accept the terms in the license agreement], then click [Next].

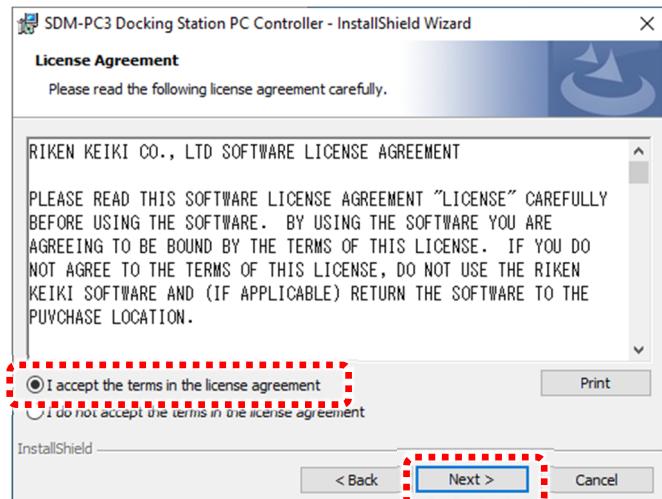


6 Enter the user name and organization, then click [Next].

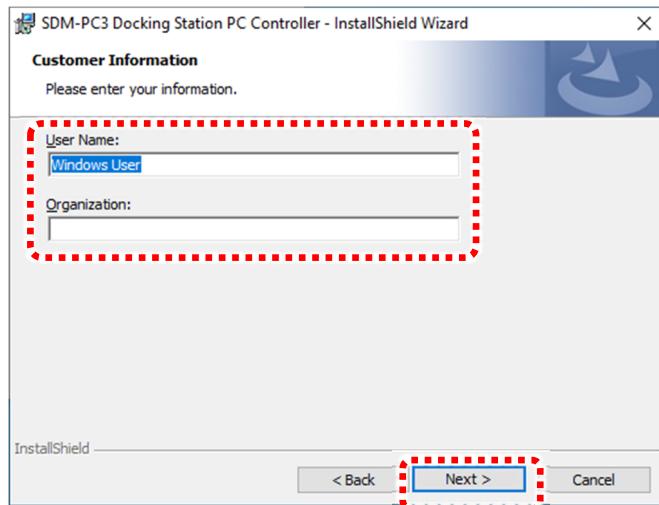


7 Select the destination folder for installing the software, then click [Next].

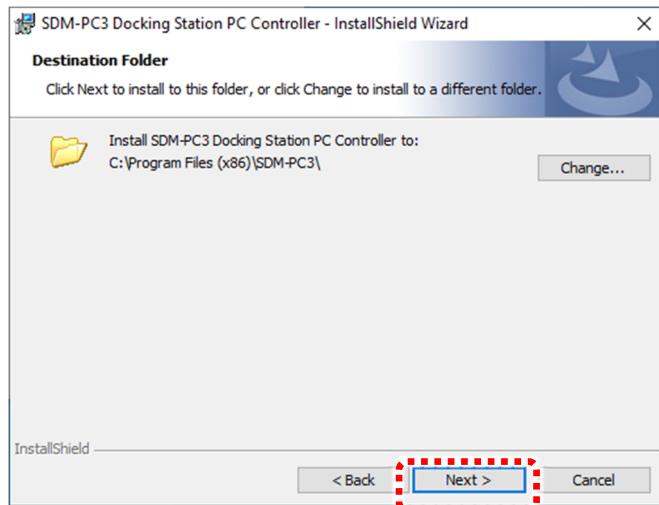


8 Check the setup type, destination folder, and user information, then click [Install].
To edit the settings or information, click [Back].
Click [Cancel] to exit the wizard.

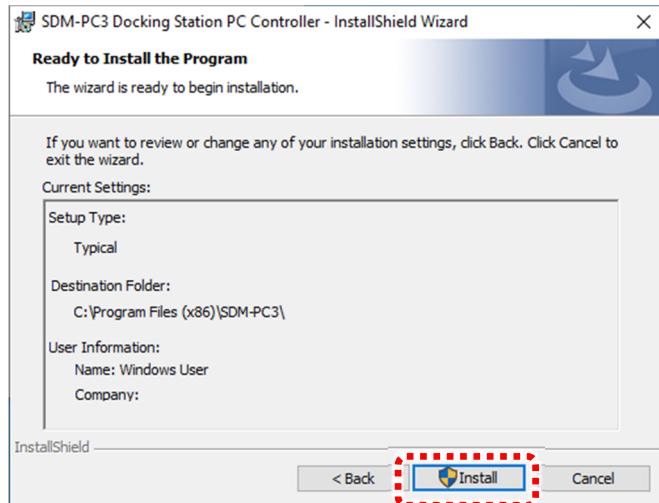

9 Program installation starts.

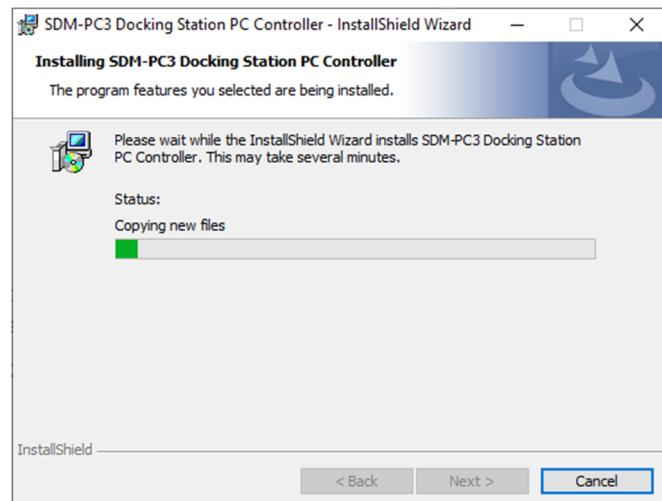

10 Click [Finish] to close the window once installation is complete.

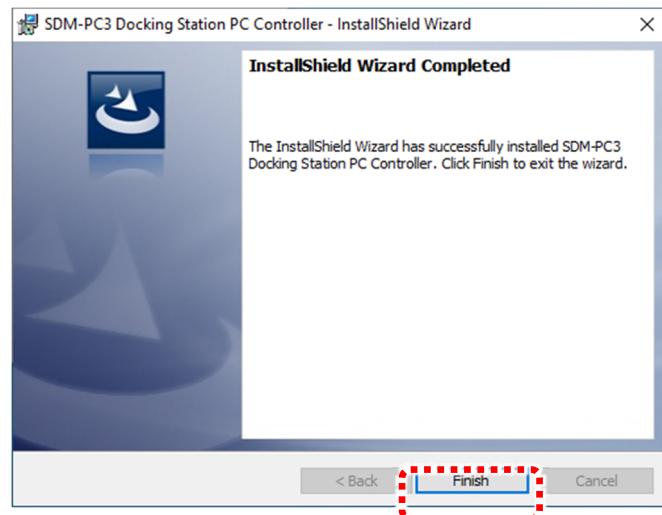

11 Check to confirm that the operation software has been installed on the PC desktop (as shown on the right).



4-3. Startup



4-3-1. Turning on the power

Product LED check locations


	
Lit steadily	Blinking

- 1 Hold down the POWER button on the product for at least one second to turn on the power.


Panel sheet

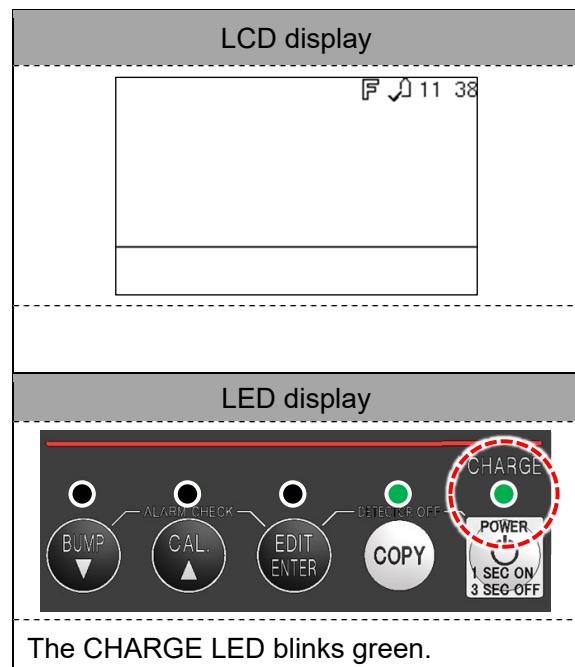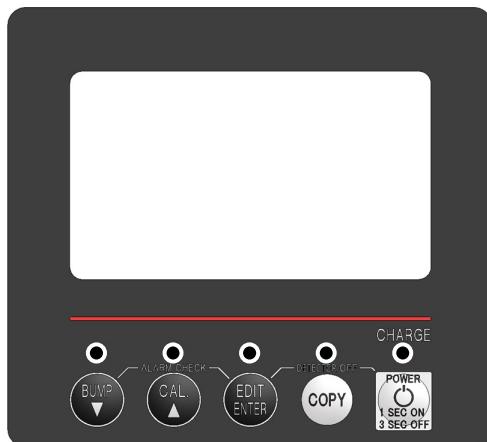

- 2 Communication starts when a gas monitor (sold separately) with its power turned on is mounted on the product.

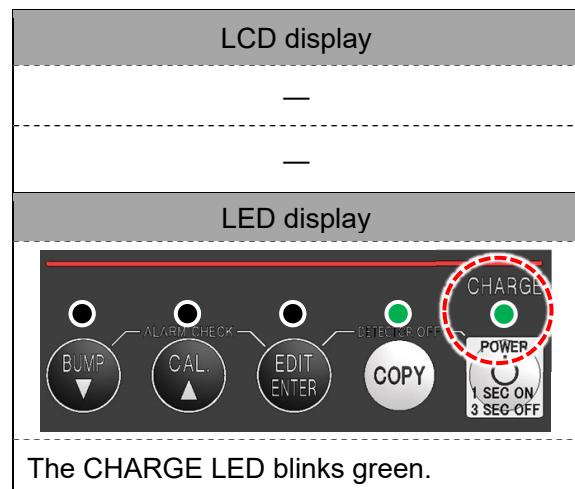

3 Once communication is established, the gas name and calibration gas concentration set on the gas monitor (sold separately) are displayed on the LCD.

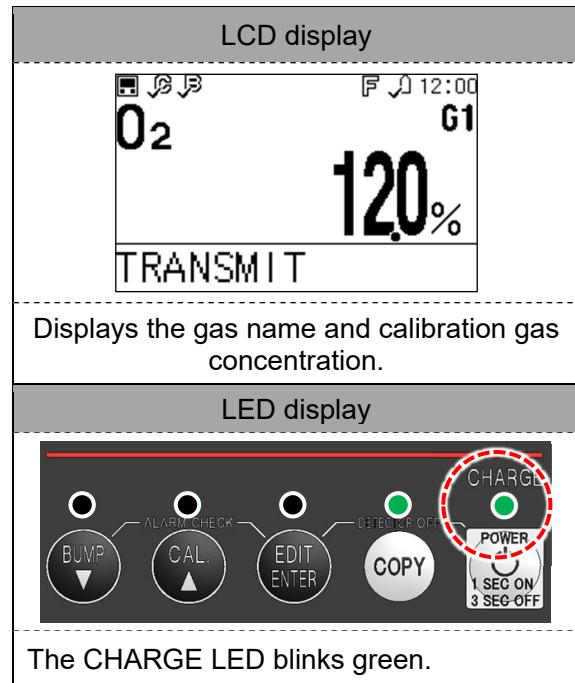


NOTE

- When communication is established, the gas monitor (sold separately) clock is automatically synchronized with the product clock.

4-3-2. LCD screen display

The meanings of the icons displayed on the product LCD screen are as follows:

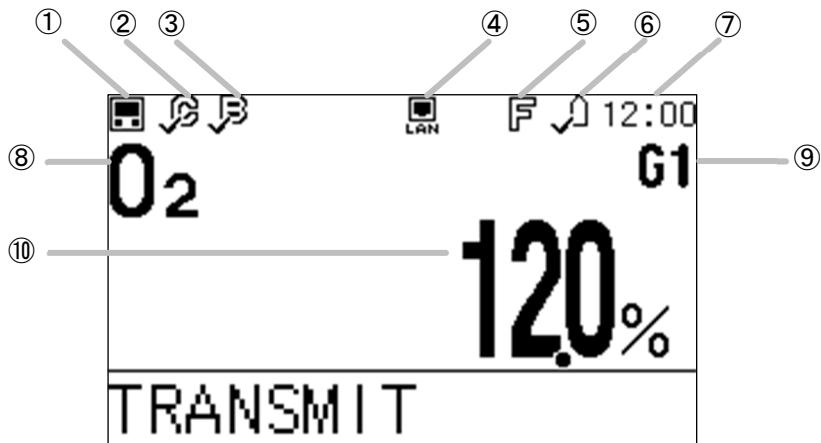

No.	Name	Function						
①	Gas monitor connection	Displayed when communication is established between the product and the gas monitor (sold separately). Pressing the POWER button does not turn off the product power when this icon is displayed.						
②	Gas adjustment expiration	Displayed when communication is established between the product and the gas monitor (sold separately). These icons indicate whether the gas monitor (sold separately) sensor has exceeded the gas adjustment expiration date. <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>Before gas adjustment expiration date</td> <td>Gas adjustment expiration warning</td> <td>Gas adjustment expired</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	Before gas adjustment expiration date	Gas adjustment expiration warning	Gas adjustment expired			
Before gas adjustment expiration date	Gas adjustment expiration warning	Gas adjustment expired						
③	Bump test expiration	Displayed when communication is established between the product and the gas monitor (sold separately). These icons indicate whether the gas monitor (sold separately) sensor has exceeded the bump test expiration date. <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>Before bump test expiration date</td> <td>Bump test expiration warning</td> <td>Bump test expired</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	Before bump test expiration date	Bump test expiration warning	Bump test expired			
Before bump test expiration date	Bump test expiration warning	Bump test expired						
④	LAN connection	Displayed when the product is connected to a hub or similar device via a LAN cable and communication is possible						
⑤	Fast bump test	Displayed when the fast bump test setting is enabled						
⑥	Cylinder expiration	These icons indicate whether the cylinder has exceeded the expiration date. <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>Before expiration date</td> <td>Expiration warning</td> <td>Expired</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	Before expiration date	Expiration warning	Expired			
Before expiration date	Expiration warning	Expired						
⑦	Clock	Displays the current time in hours and minutes.						
⑧	Sensor name	Gas monitor (sold separately) sensor name						
⑨	Inlet	[G1] GAS 1 inlet						
		[G2] GAS 2 inlet						
		[G3] GAS 3 inlet						
		[C3] Replace the GAS 3 inlet gas (the number will vary depending on the number of solenoid valves in the product).						
		[**] No assignment (cylinder information does not include a target gas)						
		[--] [OFF] in sensor settings						
⑩	Gas concentration	Calibration gas concentration for bump test/gas adjustment. The gas concentration for the cylinder being used, with the units matching the sensor's units.						

4-3-3. LED display list

The product LED indications are as follows:

<BUMP LED/CAL LED/ALARM LED>

Status	LED		
	BUMP	CAL	ALARM
Power on (for one second)	Orange	Orange	Orange
Button operation	Main screen	OFF	OFF
	Setting screen	OFF	OFF
Operation using the PC Controller Program (sold separately)	Download in progress	Blinking orange	Blinking orange
	Download complete	Orange	Orange
BUMP/CAL in progress	BUMP in progress	Blinking orange	OFF
	CAL in progress	OFF	Blinking orange
	CAL in progress after BUMP failed	Blinking orange	OFF
BUMP/CAL results (Normal)	BUMP all successful (CAL = OFF after failure)	Green	OFF
	BUMP failed	Red	OFF
	CAL all successful	OFF	Green
	CAL failed	OFF	Red
	BUMP all successful (CAL = ON after failure)	Green	OFF
	BUMP failed, CAL all successful	Red	Green
	BUMP failed, CAL failed	Red	Red
BUMP/CAL results (Error)	Zero adjustment failed (CAL = OFF after failure)	Blinking red	OFF
	Communication error (CAL = OFF after failure)	Red	OFF
	Low flow rate (CAL = OFF after failure)	Blinking green	OFF
	Zero adjustment failed (CAL)	OFF	Blinking red
	Communication error (CAL)	OFF	Red
	Low flow rate (CAL)	OFF	Blinking green
	Zero adjustment failed (CAL = ON after failure)	Blinking red	OFF
	Communication error (CAL = ON after failure, BUMP in progress)	Red	Red
	Low flow rate (CAL = ON after failure, BUMP in progress)	Blinking green	Blinking green
	Communication error (CAL = ON after failure, CAL in progress)	Red	Red
Alarm check in progress	Low flow rate (CAL = ON after failure, CAL in progress)	Blinking green	Blinking green
	Alarm check in progress	OFF	OFF
	Alarm check in progress (after BUMP)	Blinking orange	OFF
	Alarm check in progress (after BUMP)	Blinking orange	Blinking orange
Alarm check results	Alarm check successful	(BUMP/CAL results)	
	Alarm check failed	(BUMP/CAL results)	

* The BUMP and CAL LEDs blink rapidly for the fast bump test.

<COPY LED>

Status		LED
Power on (for one second)		Orange
No USB flash drive (sold separately)	No data	OFF
	Small data volumes (Under 80 %: 1 to 399)	Green
	Large data volumes (80 % or more: 400 to 499)	Orange
	Max data (100 %: 500)	Red
USB flash drive (sold separately) present	No data	OFF
	Small data volumes (Under 80 %: 1 to 399)	Blinking green
	Large data volumes (80 % or more: 400 to 499)	Blinking orange
	Max data (100 %: 500)	Blinking red
	Data copying in progress	Red
	Logger data download in progress	Blinking orange

<POWER LED>

Status		LED
Power on (for one second)		Orange
Self-diagnostic error		Red
Normal		Blinking green

4-4. Settings

Hold down the EDIT/ENTER button for at least three seconds with a gas monitor (sold separately) mounted on the product to display various setting menus.

[BUMP] (bump test settings)

[AIR FLUSH]	Duration for which air is aspirated
[GAS TIME]	Duration for which the bump test gas is drawn
[AIR PURGE]	Duration for air purging of the bump test gas
[TOLERANCE]	Threshold for determining pass/fail of a bump test
[AUTO CAL]	<p>Sets automatic gas adjustment to start if a bump test fails.</p> <p>The gas introduction time will be the difference from the gas adjustment setting. (Example: If the bump test gas introduction time setting is 25 seconds and the gas adjustment setting is 60 seconds, gas adjustment will be performed by drawing in gas for 35 seconds after FAIL.)</p> <p>If the gas adjustment setting is shorter, gas adjustment starts as soon as FAIL occurs.</p> <p>When testing multiple sensors using a single gas (gas mixture), even the sensors that passed (PASS) in addition to those that have failed (FAIL) will undergo gas adjustment.</p>
[FAST BUMP]	<p>Function that issues a PASS result as soon as the pass threshold for the bump test is reached, even before the gas introduction time has elapsed. This minimizes gas consumption if the sensor reacts normally.</p> <p>An assessment is made from 10 seconds after each gas drawing starts.</p> <p>When testing multiple sensors using a single gas (gas mixture), a PASS result is issued when all of the sensors under test reach the pass threshold at the same time.</p>
[ALARM CHECK]	Function for testing the alarm lamp and buzzer of the gas monitor (sold separately) when a bump test has ended. In the test, the lamp flashes for several seconds and the buzzer sounds, and the product assesses whether these are operating correctly.
[BUMP EXPIRED]	Sets so that the bump test starts automatically when a gas monitor (sold separately) for which the bump test has expired is connected.
[AUTO EXEC]	Sets so that the bump test starts automatically when a gas monitor (sold separately) is connected.

[CAL] (CALIBRATION) (gas adjustment settings)

[AIR FLUSH]	Duration for which air is aspirated
[GAS TIME]	Duration for which the calibration gas is drawn
[AIR PURGE]	Duration for air purging of the calibration gas
[ALARM CHECK]	Function for testing the alarm lamp and buzzer of the gas monitor (sold separately) when gas adjustment has ended. In the test, the lamp flashes for several seconds and the buzzer sounds, and the product assesses whether these are operating correctly.
[CAL EXPIRED]	Sets so that gas adjustment starts automatically when a gas monitor (sold separately) for which gas adjustment has expired is connected.
[AUTO EXEC]	Sets so that gas adjustment starts automatically when a gas monitor (sold separately) is connected.
[MANUAL CAL]	Sets so that gas adjustment can be performed by pressing the CAL button. If set to [OFF], gas adjustment will not be performed even when the CAL button is pressed. [AUTO CAL] in the [BUMP] settings will also be set to [OFF].
[CO2 ZERO CAL]	Not used with this product

[CYLINDER]

(CYLINDER NAME)	Name for identifying the cylinder Displayed when setting other items
(PART NUMBER)	Cylinder part number
(SERIAL NUMBER)	Cylinder serial number
[EXPIRY DATE]	The cylinder expiration icon appears on the LCD screen to notify this date has passed or is approaching. No changes will occur other than the icon notification.
[ACTIVE]	Cylinder enabled/disabled setting Cylinders set to [OFF] will not be used.
[ACTUAL GAS]	Not used with this product
[BUMP AIR FLUSH]	Bump test air flush when this cylinder is used
[BUMP AIR PURGE]	Bump test air purge when this cylinder is used
[CAL AIR FLUSH]	Gas adjustment air flush when this cylinder is used
[CAL AIR PURGE]	Gas adjustment air purge when this cylinder is used
[BUMP GAS TIME]	Duration for introducing gas in the bump test when this cylinder is used
[CAL GAS TIME]	Duration for introducing gas in gas adjustment when this cylinder is used
[IR GAS TIME]	Not used with this product
[IR WAIT TIME]	Not used with this product
[SH SENSOR]	Not used with this product
[SH BUMP UPPER]	Not used with this product
[SH BUMP LOWER]	Not used with this product
(GAS NAME)	Gas component(s) contained in the cylinder (up to six types)
[GAS VALUE]	Gas concentration
[BUMP TOLERANCE]	Bump tolerance for the bump test using this gas
[CLEAR EXEC]	Resets the cylinder.

[INLET]

[INLET GAS1]	Sets the cylinder connected to GAS 1.
[INLET GAS2]	Sets the cylinder connected to GAS 2. This setting will be ignored if GAS 2 gas cannot be introduced due to the internal solenoid valves.

[INLET GAS3]	Sets the cylinder connected to GAS 3. This setting will be ignored if GAS 3 gas cannot be introduced due to the internal solenoid valves.
[INLET BASE]	Not used with this product

[SENSOR]

[GAS01: {sensor name}]	Setting to [OFF] disables the bump test/gas adjustment for that sensor.
[GAS02: {sensor name}]	The default setting is [OFF] for the CO-04 (C-) H ₂ sensor only. When set to [OFF], the gas name and calibration gas concentration are not displayed on the LCD screen.
[GAS03: {sensor name}]	
[GAS04: {sensor name}]	

The sensor menu is not displayed when communication is not established with the gas monitor (sold separately).

The ON/OFF settings are stored in the product, and the same settings are used when a gas monitor (sold separately) with the same sensor combination is connected.

[DATE]

(DATE)	Displays the current date and sets the clock.
(TIME)	Displays the current time and sets the clock.
(DATE FORMAT)	Format for dates displayed on the product

[LANGUAGE]

-	Product display language
---	--------------------------

[SYSTEM]

[LCD]	[LCD CONTRAST]	Product LCD display contrast
[POWER SAVE]	[WAIT TIME]	Time until the gas monitor (sold separately) power and LCD backlight are turned off if no buttons are operated on the product
	[WAIT TIME(PASS)]	Time until the gas monitor (sold separately) power and LCD backlight are turned off if no buttons are operated on the product after the bump test, gas adjustment, and alarm check results are all successful
[DATA LOGGER]	[AUTO DOWNLOAD]	Automatically downloads the logger data and saves to a USB flash drive when a gas monitor (sold separately) is connected to the product.
	[INTERVAL]	Expiration interval for automatic download Logger data is downloaded only if a logger data file previously downloaded using the same gas monitor (sold separately) exists on the USB flash drive and the difference from the file time stamp exceeds this value.
	[MANUAL DOWNLOAD]	Sets whether logger data can be downloaded by holding down the COPY button.
[EXPIRE NOTICE]	[BUMP ICON]	Displays/hides the bump test expiration icon.
	[CAL ICON]	Displays/hides the gas adjustment expiration icon.
	[CYL ICON]	Displays/hides the cylinder expiration icon.
	[BUMP WARN DAYS]	Number of days before expiration for which the warning icon is displayed
	[CAL WARN DAYS]	Number of days before expiration for which the warning icon is displayed
	[CYL WARN DAYS]	Number of days before expiration for which the warning icon is displayed
[PASSWORD]	[ON]/[OFF]	Sets whether or not password entry is required to access the setting screen.
	[PASSWORD]	Four-digit password

[AUTOMATIC EXEC]	[TYPE]	This function automatically performs a bump test, gas adjustment, and alarm check at the specified time. The bump test and gas adjustment are not performed for sensors that require gas replacement.
	[EXEC TIME]	Time for automatic execution. The gas monitor (sold separately) power is turned on if it is off at the specified time.
	[SUN.] to [SAT.]	Specifies the days of the week for automatic execution. Automatic execution will not occur if all days are [OFF].
[NETWORK (CONFIG)]	[DHCP]	Function for connecting to the DHCP server to acquire the IP address, subnet mask, and default gateway
	[IP ADDR]	Product IP address. Used when [DHCP] is set to [OFF]
	[SUBNET M]	Product network range. Used when [DHCP] is set to [OFF]
	[DEF GW]	Gateway server IP address. Used when [DHCP] is set to [OFF]
[NETWORK (STATUS)]	[MAC ADDR]	Product MAC address
	[IP ADDR]	Current network values
	[SUBNET M]	The acquired values are displayed when [DHCP] is set to [ON] and acquisition from the DHCP server is successful.
	[DEF GW]	When [DHCP] is [OFF], the values set in [NETWORK (CONFIG)] are normally displayed. If the setting is changed, the values before the change will be displayed until the product restarts to reflect the change.
[SDM INFO]	[ROM/SUM]	Product version
	[INST NUMBER 1]	Base unit serial number
	[INST NUMBER 2]	Type specific unit serial number
[UPDATE]		Refer to '4-5-4. Updating firmware'.

4-4-1. Setting list

Menu	Item	Default value	Setting range
[BUMP]	[AIR FLUSH]	15 seconds	15 to 180 seconds
	[GAS TIME]	25 seconds	20 to 120 seconds
	[AIR PURGE]	15 seconds	5 to 180 seconds
	[TOLERANCE]	±50 %	±10 to 50 %
	[AUTO CAL]	[ON]	[ON] or [OFF]
	[FAST BUMP]	[ON]	[ON] or [OFF]
	[ALARM CHECK]	[ON]	[ON] or [OFF]
	[BUMP EXPIRED]	[OFF]	[ON] or [OFF]
[CAL]	[AUTO EXEC]	[OFF]	[ON] or [OFF]
	[AIR FLUSH]	15 seconds	15 to 180 seconds
	[GAS TIME]	60 seconds	20 to 120 seconds
	[AIR PURGE]	15 seconds	5 to 180 seconds
	[ALARM CHECK]	[ON]	[ON] or [OFF]
	[CAL EXPIRED]	[OFF]	[ON] or [OFF]
	[AUTO EXEC]	[OFF]	[ON] or [OFF]
	[MANUAL CAL]	[ON]	[ON] or [OFF]
[CYLINDER] [01] to [12] + Cylinder name	[CO2 ZERO CAL]	[N2]	[N2], [GAS1(CO2 0ppm)], [400ppm], or [USER FILTER]
	[BASIC INFO]	(CYLINDER NAME)	-
		(PART NUMBER)	-
		(SERIAL NUMBER)	-
		[EXPIRY DATE]	2099/12/31
	[DETAIL INFO]	[ACTIVE]	[ON] or [OFF]
		[ACTUAL GAS]	[ON] or [OFF]
		[BUMP AIR FLUSH]	[COMMON] or 15 to 180 seconds
		[BUMP AIR PURGE]	[COMMON] or 5 to 180 seconds
		[CAL AIR FLUSH]	[COMMON] or 15 to 180 seconds
		[CAL AIR PURGE]	[COMMON] or 5 to 180 seconds
		[BUMP GAS TIME]	[COMMON] or 20 to 120 seconds
		[CAL GAS TIME]	[COMMON] or 20 to 120 seconds
		[IR GAS TIME]	10 to 120 seconds
		[IR WAIT TIME]	10 to 120 seconds
	[GS1] to [GS6]	[SH SENSOR]	[ON] or [OFF]
		[SH BUMP UPPER]	-
		[SH BUMP LOWER]	-
		(GAS NAME)	-
		[GAS VALUE] (value)	0
	[CLEAR EXEC]	[GAS VALUE] (units)	Vol% %LEL, ppm, ppb, %, or vol%
		[BUMP TOLERANCE]	[COMMON] or 10 to 50 %
[INLET]	[INLET GAS1]	[CYLINDER1]	[OFF] or [CYLINDER1] to [CYLINDER12]
	[INLET GAS2]	[OFF]	[OFF] or [CYLINDER1] to [CYLINDER12]
	[INLET GAS3]	[OFF]	[OFF] or [CYLINDER1] to [CYLINDER12]
	[INLET BASE]	[OFF]	[OFF] or [CYLINDER1] to [CYLINDER12]
SENSOR	[01: {gas name}]	[ON]	[ON] or [OFF]
	[02: {gas name}]	[ON]	[ON] or [OFF]
	[03: {gas name}]	[ON]	[ON] or [OFF]
	[04: {gas name}]	[ON]	[ON] or [OFF]

[DATE]	(DATE)	-	-
	(TIME)	-	-
	(DATE FORMAT)	[YYYY/MM/DD]	[MM/DD/YYYY], [DD/MM/YYYY], or [YYYY/MM/DD]
[LANGUAGE]		[ENGLISH]	Up to 17 languages
[SYSTEM]	[LCD]	[LCD CONTRAST]	25
	[POWER SAVE]	[WAIT TIME]	10 minutes
		[WAIT TIME(PASS)]	15 seconds
	[DATA LOGGER]	[AUTO DOWNLOAD]	[OFF]
		[INTERVAL]	1 day
		[MANUAL DOWNLOAD]	[ON]
	[EXPIRE NOTICE]	[BUMP ICON]	[ON]
		[CAL ICON]	[ON]
		[CYL ICON]	[ON]
		[BUMP WARN DAYS]	10 days
		[CAL WARN DAYS]	0 to 180 days
		[CYL WARN DAYS]	0 to 180 days
	[PASSWORD]	[ON] or [OFF]	[ON] or [OFF]
		[PASSWORD]	0000
	[AUTOMATIC EXEC]	[TYPE]	[BUMP]
		[EXEC TIME]	00:00
		[SUN.] to [SAT.]	[OFF]
	[NETWORK]	[DHCP]	[ON]
		[IP ADDR]	0.0.0.0
		[SUBNET M]	255.255.255.0
		[DEF GW]	0.0.0.0
	[STATUS]	[MAC ADDR]	-
		[IP ADDR]	-
		[SUBNET M]	-
		[DEF GW]	-
	[SDM INFO]	[ROM/SUM]	-
		[INST NUMBER 1]	-
		[INST NUMBER 2]	-
	[UPDATE]		-

<[COMMON]>

If [COMMON] is set for the following items for which it is available, the values set for the bump test and gas adjustment will be used. If multiple cylinders are used for a single bump test or gas adjustment and the air flush or air purge time values do not match between the cylinders, the longest will be used.

- [BUMP AIR FLUSH]
- [BUMP AIR PURGE]
- [CAL AIR FLUSH]
- [CAL AIR PURGE]
- [BUMP GAS TIME]
- [CAL GAS TIME]
- [BUMP TOLERANCE]

NOTE

- Using the product together with the PC Controller Program (sold separately)
The ability to alter gas monitor (sold separately) and product settings using the PC Controller Program (sold separately) is outlined in the following table:

Setting item	Can gas monitor settings be altered?	Can product settings be altered?
Items that can be altered by right-clicking the display icon, then selecting [Edit] ^{*1} <ul style="list-style-type: none">▪ Cylinder settings▪ Calibration gas concentration for bump test/gas adjustment▪ Gas alarm setpoints, etc.	Y	Y
Items that can be altered by selecting [Config] ^{*2} displayed at the top right of the PC software screen <ul style="list-style-type: none">▪ Bump test settings▪ Gas adjustment settings, etc.	N	N

*1: Password entry is required to select [Edit]. Password (default): 1939

*2: Password entry is required to select [Config]. Password (default): ABCDE

4-4-2. Cylinder settings


Information on the cylinders used and the connection status of the cylinders and inlets is input to the product to perform the bump test and gas adjustment on the product.

* Up to 12 sets of cylinder settings can be stored.


《Example: OX-04(O2); SDM-04(C1): one solenoid valve》

- Cylinder A: O₂ (12.0 %)

- 1 Disable unused cylinder 01.

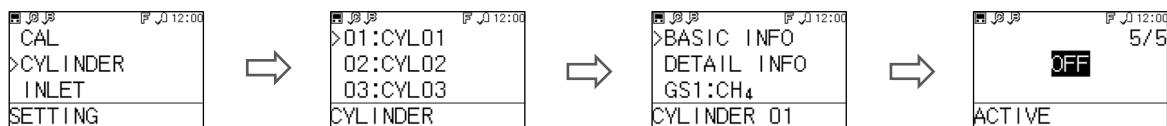


- 2 Enter the O₂ gas information for cylinder A assigned as cylinder 02 (default name [CYL02]).

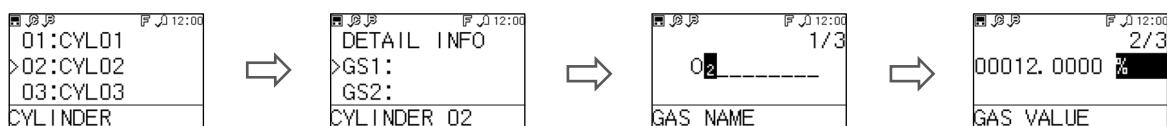


- 3 Connect cylinder A to GAS 1 on the product.

- 4 Set [CYL02] for [GAS1] in the inlet settings.

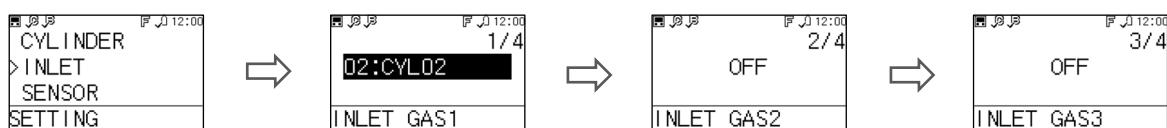


* The GAS 2 and GAS 3 inlets and the base unit will be disabled.

- 5 Exit the setting screen. The sensor's assignment results are displayed.

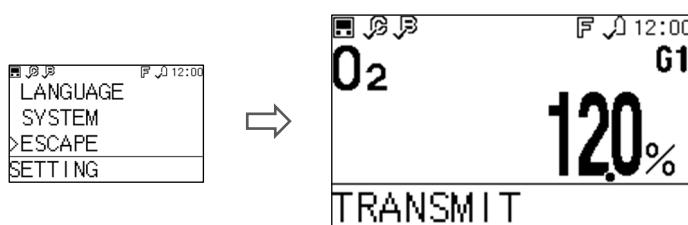

6 Starting the bump test/gas adjustment draws in gas from GAS 1 to perform the bump test/gas adjustment on the O₂ sensor and finish the process.

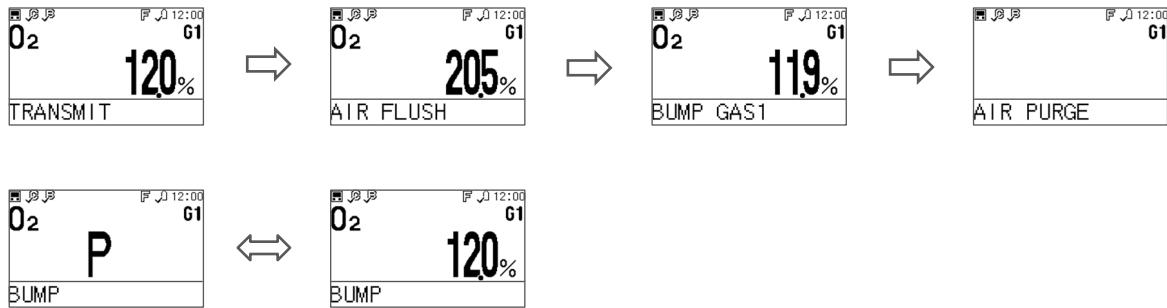


《Example 2: CX-04(CO,O₂); SDM-04(C2): two solenoid valves》

- Cylinder A: CO (50 ppm)
- Cylinder B: O₂ (12.0 %)


1 Disable unused cylinder 01.



2 Enter the CO gas information for cylinder A assigned as cylinder 02 (default name [CYL02]).

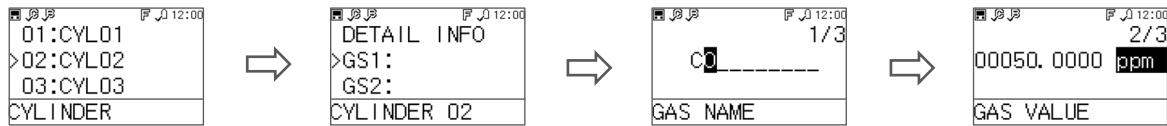


3 Enter the O₂ gas information for cylinder B assigned as cylinder 03 (default name [CYL03]).

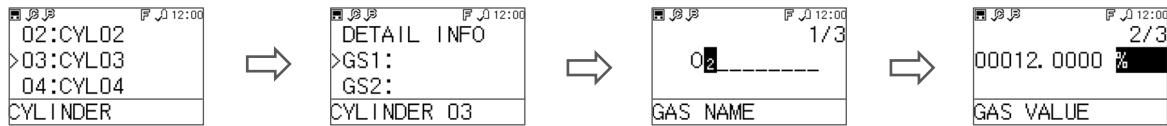


4 Connect cylinder A to GAS 1 and cylinder B to GAS 2 on the product.

5 Set [CYL02] for [GAS1] and [CYL03] for [GAS2] in the inlet settings.

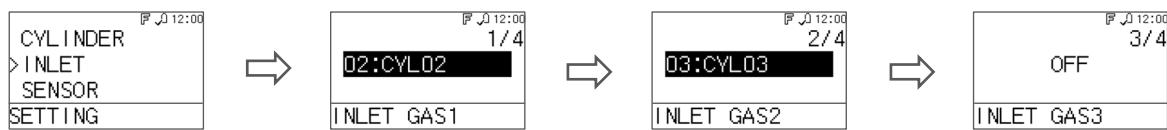


* The GAS 3 inlet and the base unit will be disabled.


6 Exit the setting screen. Each sensor's assignment results are displayed.

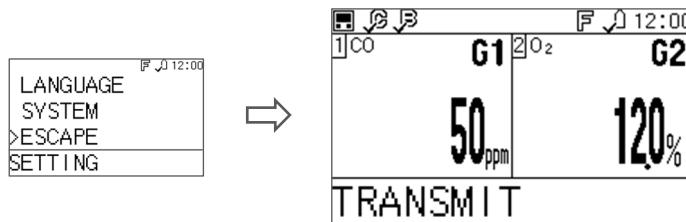

7 Starting the bump test/gas adjustment draws in gas from GAS 1 to perform the bump test/gas adjustment on the CO sensor.

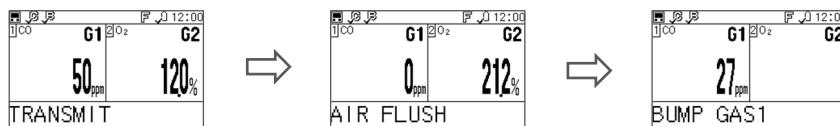

8 The product automatically switches to GAS 2 to draw in gas to perform the bump test/gas adjustment on the O₂ sensor and finish the process.

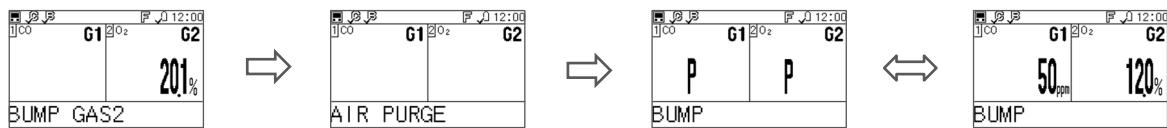


《Example 3: CX-04(CO,O₂); SDM-04(C1): one solenoid valve》

- Cylinder A: CO (50 ppm)
- Cylinder B: O₂ (12.0 %)

1 Set in the same way as 1 to 3 in Example 2.


2 Connect cylinder A to GAS 1 on the product.

3 Set [CYL02] for [GAS1] in the inlet settings.

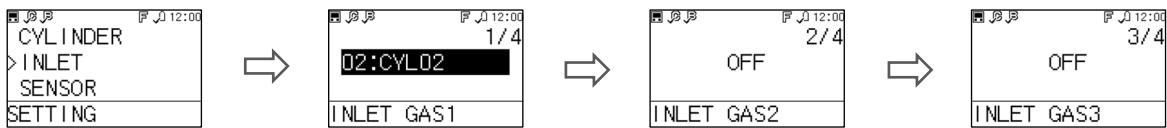


* The GAS 2 and GAS 3 inlets and the base unit will be disabled.

4 Exit the setting screen. Each sensor's assignment results are displayed.

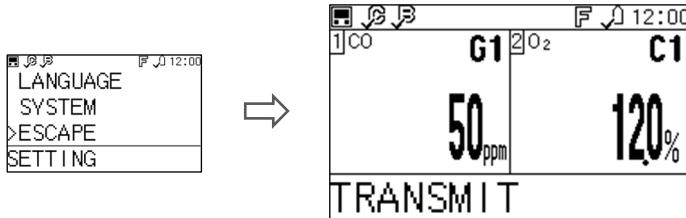


* On products containing one solenoid valve, the cylinder set to [GAS2] will be subject to replacement.


5 Starting the bump test/gas adjustment draws in gas from GAS 1 to perform the bump test/gas adjustment on the CO sensor.

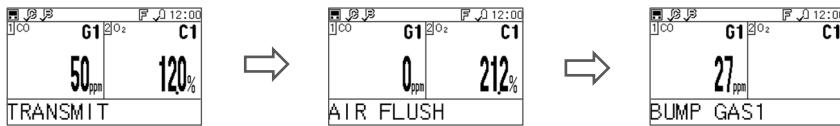

6 When the gas replacement screen appears, detach cylinder A from GAS 1, then connect cylinder B.

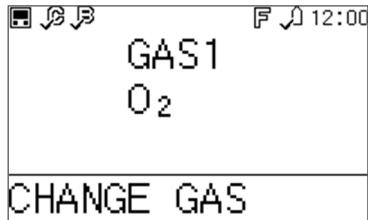

7 Press the EDIT/ENTER button to resume, then draw in gas from GAS 1 to perform the bump test/gas adjustment on the O₂ sensor and finish the process.

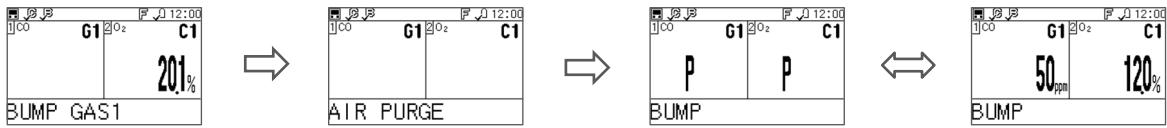

8 Detach cylinder B from GAS 1, then reconnect cylinder A.

4-5. Operations using the product operation buttons

4-5-1. Bump test and gas adjustment procedure

NOTE



- The bump test or gas adjustment can be canceled midway by holding down the BUMP button or CAL button respectively for at least three seconds.
- Canceling during the initial air aspiration (AIR FLUSH) aborts the procedure immediately and the display returns to the main screen. In this case, the canceled procedure is not recorded in the product memory.
- Air aspiration (AIR PURGE) is performed if the procedure is canceled while gas is being drawn. [CANCEL] is displayed while air is being aspirated, and the result screen is displayed once the air aspiration has ended.
- If at least one bump test or gas adjustment has ended, the procedure is performed to the end, and the results are displayed. In this case, the results are also stored in the internal memory.
- The number of gas inlets that can be used on the product varies depending on the number of solenoid valves (one to three) contained.
- On products containing one solenoid valve, only the GAS 1 inlet is available. To introduce more than one type of gas with this product type, the gas connected to the gas inlet on the product must be changed over manually.

Product LED check locations


Lit steadily	Blinking

- 1 Hold down the POWER button on the product for at least one second to turn on the power.


Panel sheet

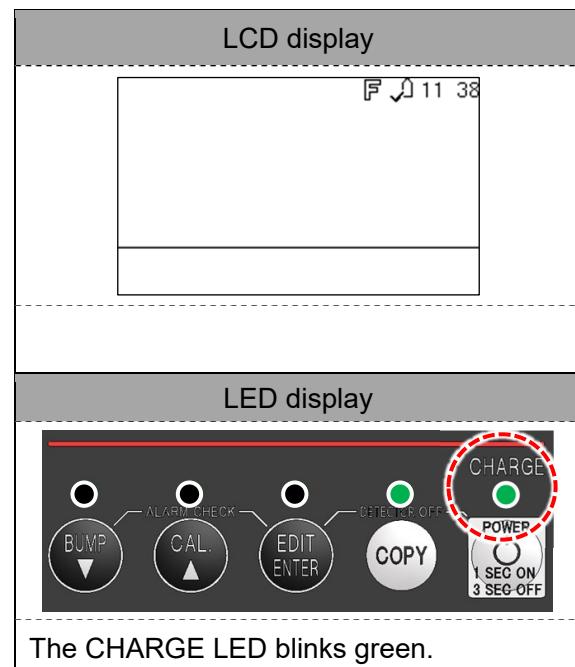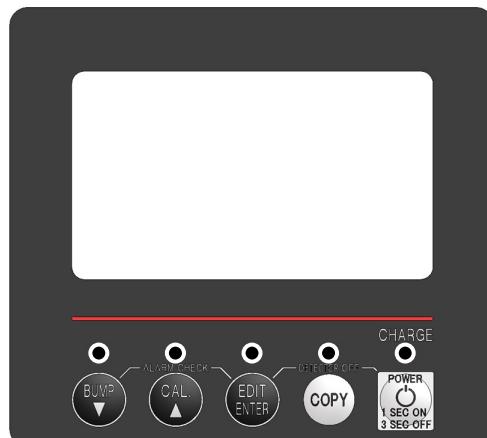

2 Communication starts when a gas monitor (sold separately) with its power turned off is mounted on the product.

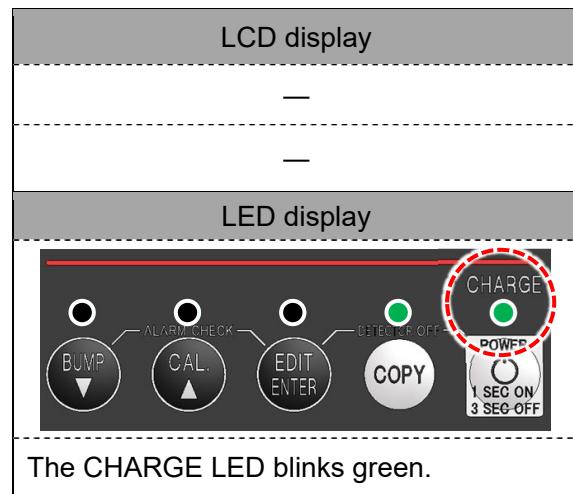

3 Once communication is established, the gas name and calibration gas concentration set on the gas monitor (sold separately) are displayed on the LCD.

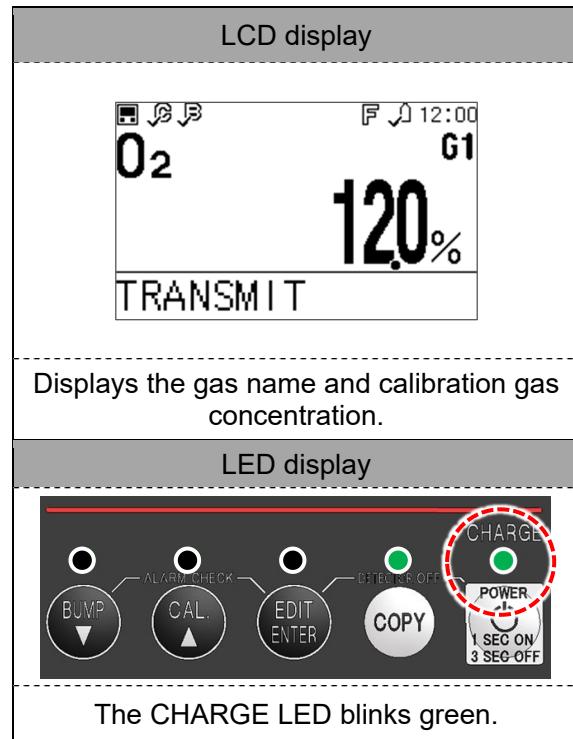


4 Press the BUMP button to start the bump test for all gases.

LCD display



The current concentration is displayed while a bump test is in progress.


LED display

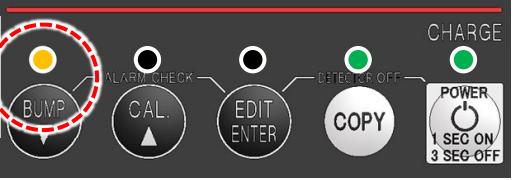

The BUMP LED blinks orange.


5 Press the CAL button to start gas adjustment for all gases.
The current concentration is displayed while gas adjustment is in progress.

LCD display

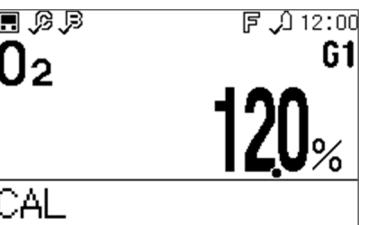

The current concentration is displayed while gas adjustment is in progress.

LED display

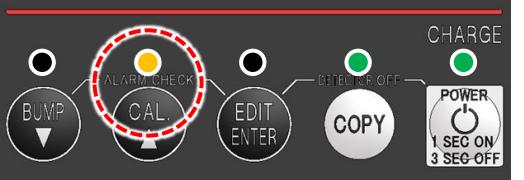


The CAL LED blinks orange.

Common details for the bump test and gas adjustment

6 Air is aspirated for zero adjustment.
Zero adjustment is performed for all sensors simultaneously.

* In the case of gas monitors with an O₂ sensor, air aspiration is extended for 40 seconds, after the gas monitor (sold separately) is connected.

LCD display



LED display






7 The bump test and gas adjustment are performed in the order set in the cylinder settings.



- Adjustment is performed from the gas set for [GAS1].
- To use a gas not set for the inlet, exchange the gas before starting the procedure.

LCD display	—
—	—
LED display	—
—	—


8 The results are displayed.
(Bump test)

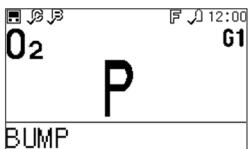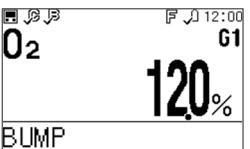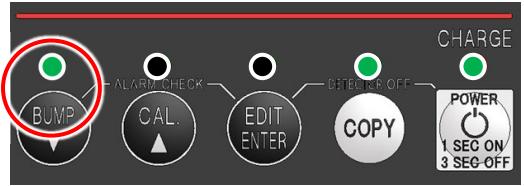Bump test judgment results	—	Bump test result concentration
	↔	
[P] is displayed if successful, and [F] is displayed if failed.	Screens displayed alternately	The results are displayed on the gas monitor (sold separately) screen.
LED display		
		
<p>The BUMP LED lights up green if all bump tests were successful. The BUMP LED lights up red if even one bump test failed.</p>		


9 The results are displayed.
(Gas adjustment)

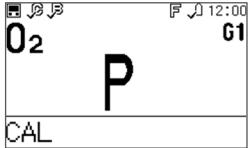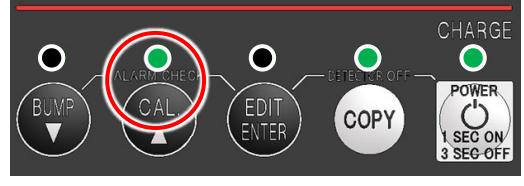Gas adjustment results	—	Gas adjustment result concentration
	↔	
[P] is displayed if successful, and [F] is displayed if failed.	Screens displayed alternately	The results are displayed on the gas monitor (sold separately) screen.
LED display		
		
<p>The CAL LED lights up green if all gas adjustments were successful. The CAL LED lights up red if even one gas adjustment failed.</p>		

10 Press the BUMP button and EDIT/ENTER button simultaneously to start the alarm check.

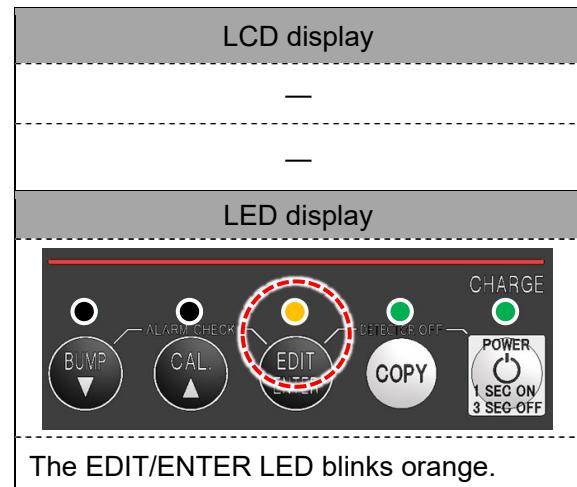

11 Once the alarm check ends, the result screen is displayed, and the LED indication changes from blinking orange.
* The LED lights up green if the alarm check for the alarm lamp and buzzer was successful.
The LED lights up red if the alarm check for both or either of the alarm lamp and buzzer failed.

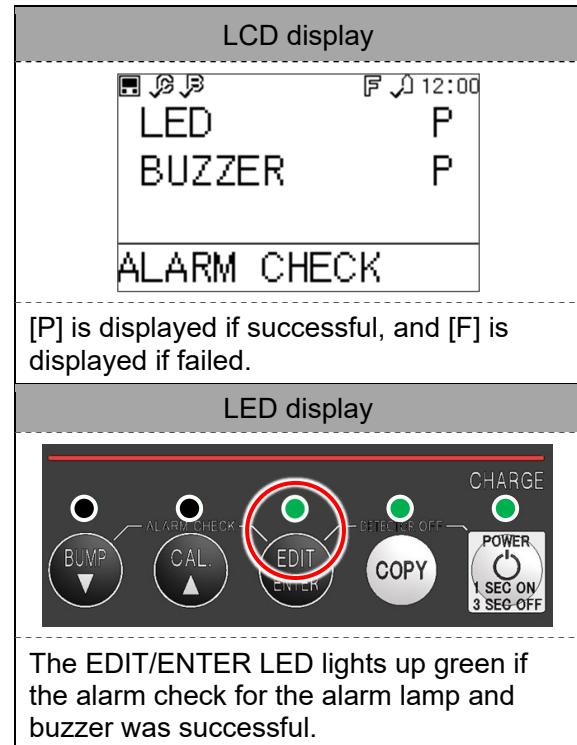

CAUTION

The alarm check may not operate correctly if the product is used in direct sunlight or in noisy locations.

4-5-2. Copying test/adjustment results to a USB flash drive (sold separately)

The results of bump tests, gas adjustment, and alarm checks performed on the product can be saved as files to a USB flash drive (sold separately).


NOTE

- Up to 500 data items can be stored in the product.
- If the product memory becomes full, the oldest data will be overwritten by new data.
- Data is saved as text files (.txt) in the DAT folder and as binary files (.bin).
- The file names begin with “SDM-04”, and consist of the product serial number, suffixed by the date of the last test or gas adjustment performed.
Example: SDM-04 TEST0000003 240111.TXT
→ Data for the last test or gas adjustment performed on January 11, 2024 using the product with serial number TEST0000003
- The COPY LED color varies depending on the amount of memory space available. For details, refer to ‘4-3-3. LED display list’.
- USB flash drives with a built-in hub cannot be used.
- Data cannot be copied unless the USB flash drive (sold separately) has sufficient free space in which to copy the saved data.


Product LED check locations

Lit steadily	Blinking

- 1 Hold down the POWER button on the product for at least one second to turn on the power.

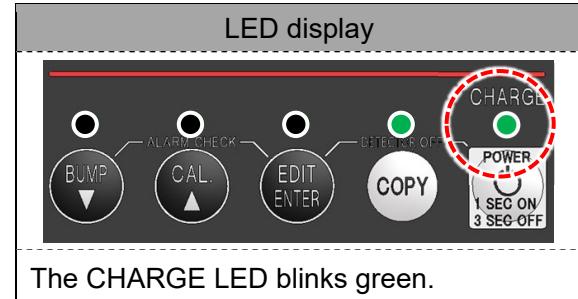


- 2 Insert the USB flash drive (sold separately) into the USB port on the front of the product.

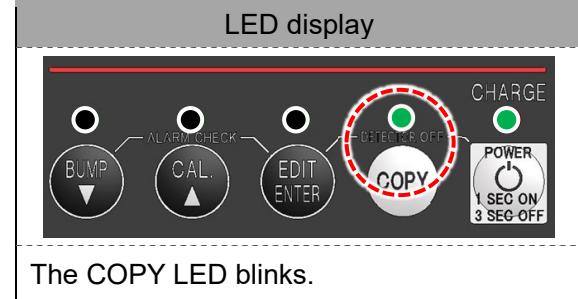

3 Hold down the COPY button on the product until the COPY LED lights up red.

The bump test, gas adjustment, and alarm check data stored in the product is copied to the USB flash drive (sold separately).

Once copying is complete, the COPY LED returns to its previous state.

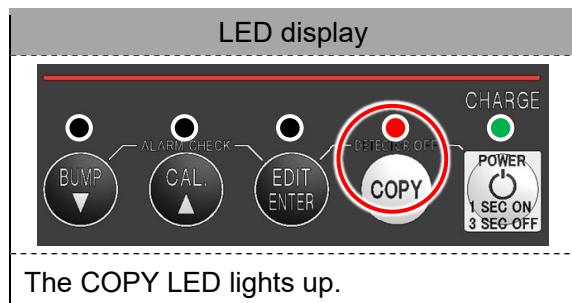

The COPY LED lights up.

NOTE

- Holding down the CAL/▲ button and COPY button together for at least three seconds after turning on the product power in step 1 clears all data inside the product. The COPY LED goes out after the memory has been cleared.

<Example of recorded data>

▪ Bump test
Model : CX-04
Serial No : 267010028RN
Station ID : -----
User ID : -----
SDM Model : SDM-04
SDM Serial No : SDM-04_20231227
Date Time : 2024/03/05 10:48:32
Item : BUMP TEST
Gas Name : CO (ppm) O2(%)
Full Scale : 2000 40.0
Test Gas : 50 12.0
Test Result : 10 12.0
Pass/Fail? : FAIL PASS

- Gas adjustment

Model	:	CX-04
Serial No	:	267010028RN
Station ID	:	-----
User ID	:	-----
SDM Model	:	SDM-04
SDM Serial No	:	SDM-04_20231227
Date Time	:	2024/03/05 10:48:32
Item	:	CALIBRATION
Gas Name	:	CO (ppm) O2(%)
Full Scale	:	2000 40.0
Cal Gas	:	50 12.0
Before Cal	:	55 11.0
After Cal	:	50 12.0
Pass/Fail?	:	PASS PASS

- Alarm check

Model	:	CX-04
Serial No	:	267010028RN
Station ID	:	-----
User ID	:	-----
SDM Model	:	SDM-04
SDM Serial No	:	SDM-04_20231227
Date Time	:	2024/03/05 10:48:32
Item	:	ALARM CHECK
Test Type	:	LED BUZZER
Pass/Fail?	:	PASS PASS


4-5-3. Downloading gas monitor (sold separately) logger data

Logger data saved in a gas monitor (sold separately) can be downloaded to a USB flash drive (sold separately). The downloaded data can then be imported into the PC Controller Program (sold separately).


NOTE

- The data is saved as binary files in the DAT folder.
- The PC Controller Program (sold separately) and a USB cable (Type-A male - Type-B male) (sold separately) are required in order to import downloaded data. For information on how to install the PC Controller Program (sold separately), refer to '4-2-8. Installing the PC Controller Program (sold separately)'.
- The file names are made up of the gas monitor (sold separately) model and the serial number.
Example: OX-04 860010016RK.DAT
→ Logger data for the gas monitor (sold separately) model OX-04 with serial number 860010016RK


- 1 Hold down the POWER button on the product for at least one second to turn on the power.

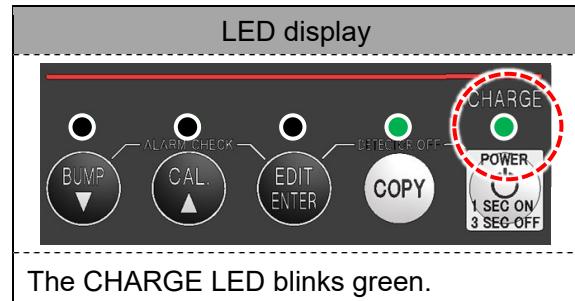


- 2 Communication starts when a gas monitor (sold separately) with its power turned on is mounted on the product.

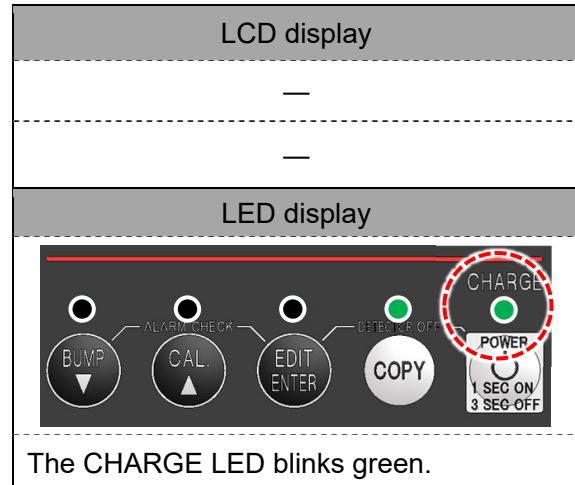

3 Once communication is established, the gas name and calibration gas concentration set on the gas monitor (sold separately) are displayed on the LCD.

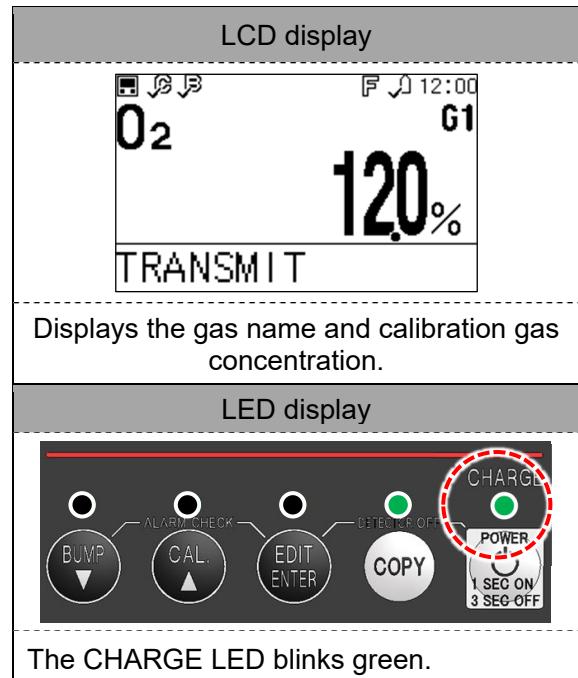


4 Insert the USB flash drive (sold separately) into the USB port on the front of the product.

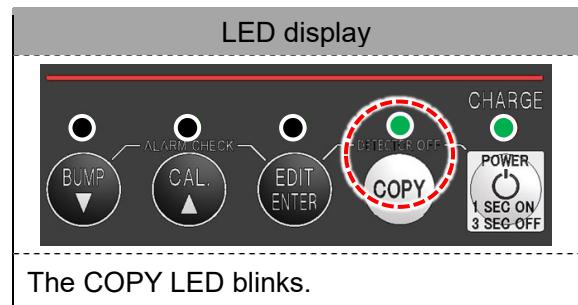


5 Hold down the COPY button on the product until the COPY LED lights up red and then blinks orange.

The product downloads the gas monitor (sold separately) logger data to the USB flash drive (sold separately).

Downloading can be canceled by holding down the COPY button here.

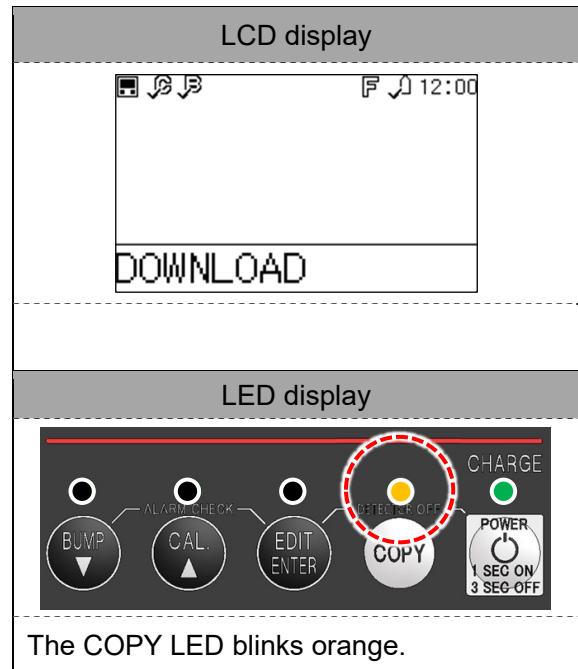

6 Once downloading is complete, the gas monitor (sold separately) display returns to the previous screen, and the COPY LED returns to its previous state.

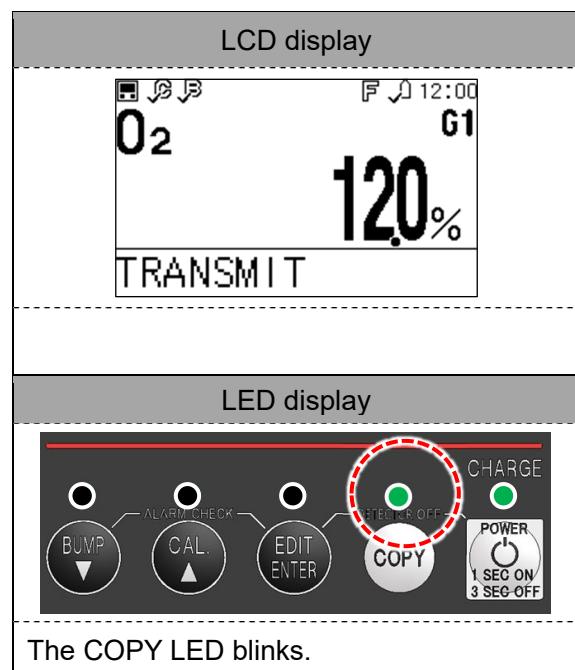

4-5-4. Updating firmware

A USB flash drive (sold separately) can be used to update the product firmware. There are two sets of firmware for the product: one for the base unit and one for the type specific unit. These can be updated at the same time or separately.



CAUTION

If the product power is cut off while the firmware is being updated, the product may not restart.


<USB flash drive (sold separately) preparation>

- ① Create a folder named “update” on the USB flash drive (sold separately).
- ② Copy the obtained firmware file to the “update” folder.


NOTE

- If the firmware has been updated in the past, delete any old firmware files from the “update” folder. If there are multiple product files inside the “update” folder, it is indeterminate whether the latest file or an old file is selected.



- 1 Hold down the POWER button on the product for at least one second to turn on the power.

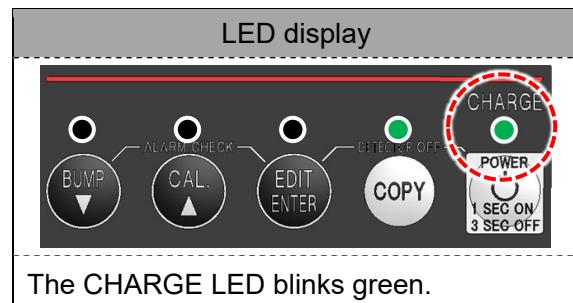


- 2 Insert the USB flash drive (sold separately) into the USB port on the front of the product.

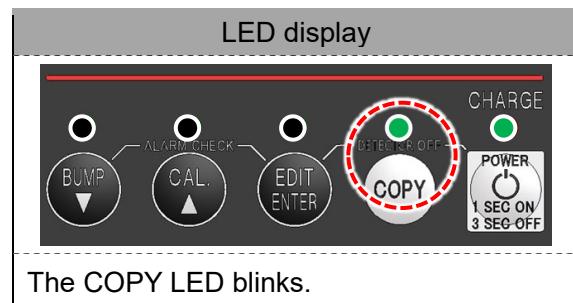


- 3 The product enters [UPDATE].

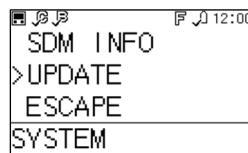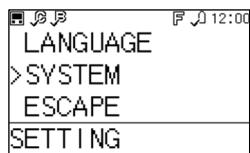


4 The current firmware version is displayed together with the version of the firmware file in the “update” folder. Hold down the BUMP, CAL, and COPY buttons for three seconds to start the update.

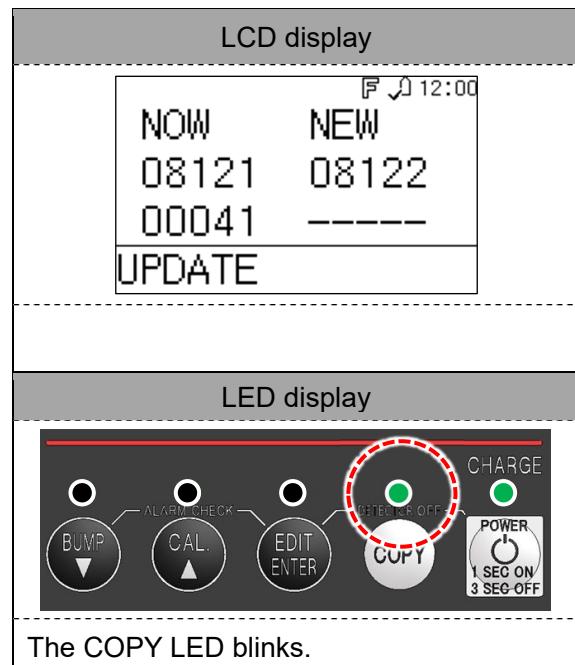


5 Once the update is complete, hold down the POWER button for three seconds to turn off the power for the product.

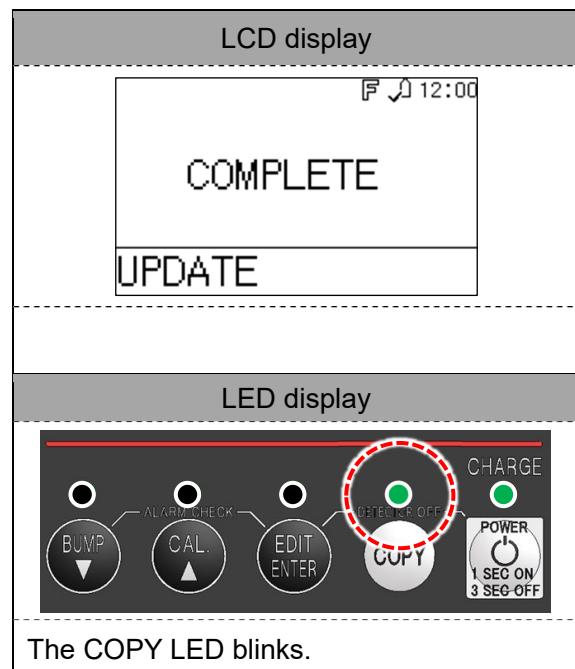

6 <When only the base unit has been updated> Press the POWER button on the product to turn on the power and complete the remaining update process. This takes approximately four seconds, after which the power turns off.

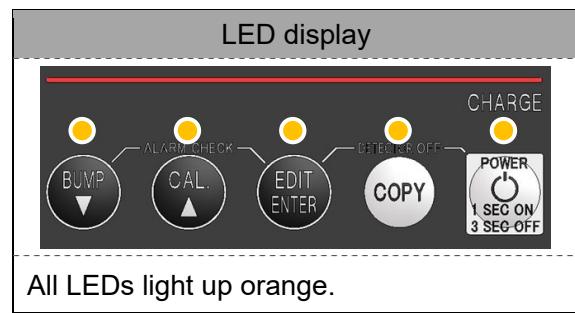

7 Hold down the POWER button on the product for at least one second to turn on the power and operate with the updated firmware.

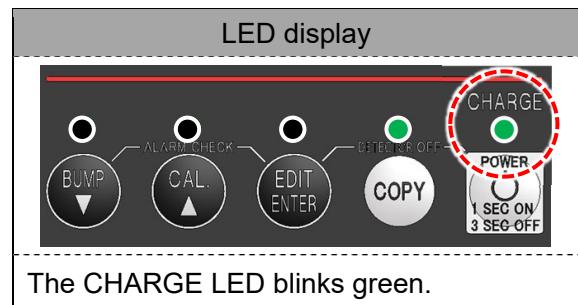

4-6. Operations using the PC Controller Program (sold separately)

4-6-1. Bump test and gas adjustment procedure

Gas adjustment and other operations can be controlled from a PC by connecting the PC to the product. Connecting to a PC allows a calibration certificate to be produced.

The program uses a virtual PC COM port with a USB to UART bridge controller. The USB to UART bridge controller used is the Silicon Laboratories CP2102N.

<Obtaining the driver>

Download and install the CP210x Universal Windows Driver from the Silicon Laboratories website.

<https://www.silabs.com/developer-tools/usb-to-uart-bridge-vcp-drivers?tab=downloads>

NOTE

- The PC Controller Program (sold separately) and a USB cable (Type-A male - Type-B male) (sold separately) are required in order to control the product from a PC. For information on how to install the PC Controller Program (sold separately), refer to '4-2-8. Installing the PC Controller Program (sold separately)'.
- Certain items in the PC Controller Program (sold separately) are password-protected. The password can be changed using [Config] at the top right of the main screen.
Main screen → Right-click on the gas monitor icon → [Edit]: 1939 (default setting)
Main screen → [Config] at top right: ABCDE (default setting)


Product LED check locations

Lit steadily	Blinking


- 1 Hold down the POWER button on the product for at least one second to turn on the power.

PC screen	LCD display
—	— — LED display —
—	The CHARGE LED blinks green.

2 Start up the PC, then connect the product to the PC using the USB cable (sold separately).
 * USB cable (sold separately): Use a Type-A male - Type-B male USB cable.

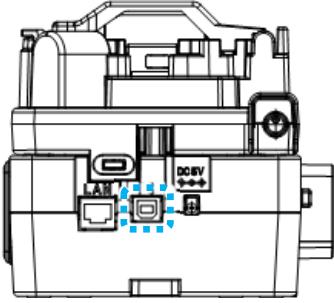
PC screen	LCD display
—	—
—	Cable connector
—	
—	Connect to the PC using the USB cable (sold separately).

3 Double-click the icon on the PC to launch the PC Controller Program.

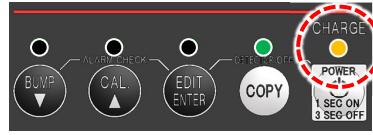PC screen	LCD display
	—
The software launches and docking with the product starts.	LED display  The CHARGE LED blinks orange.



4

Mount the gas monitor (sold separately) with its power turned on on the product.

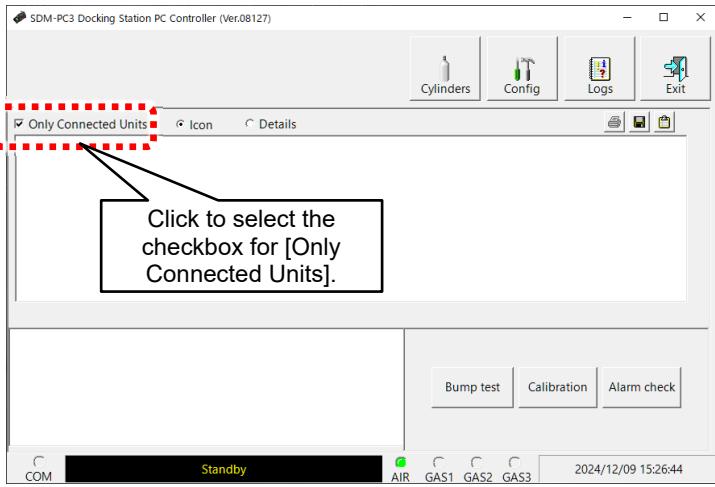PC screen	LCD display
 <p>Check the checkbox for [Only Connected Units] on the screen.</p>	 <p>The BUMP and CAL LEDs both light up orange.</p>

5

The gas monitor (sold separately) starts communication with the product.

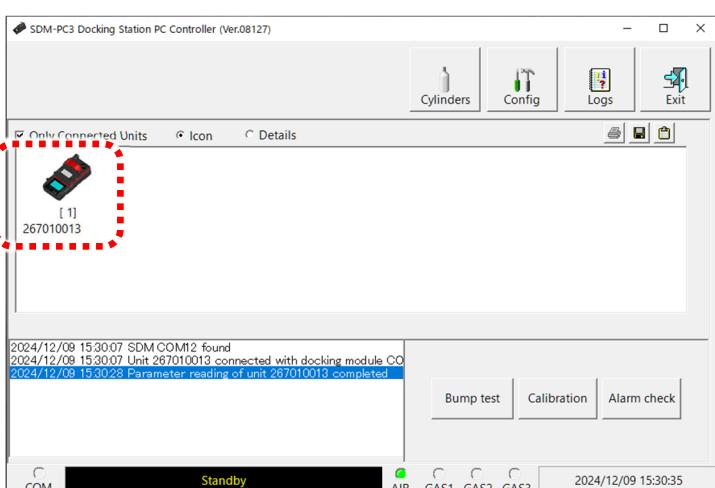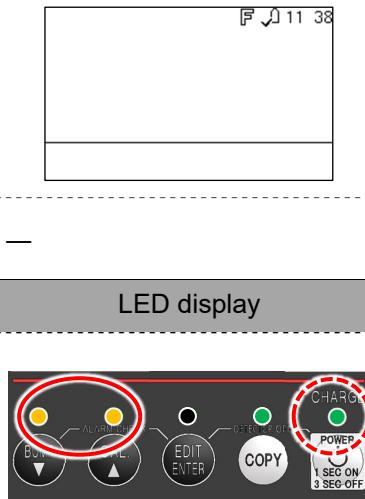PC screen	LCD display
 <p>The icon is displayed for the model connected to the PC.</p>	 <p>The CHARGE LED blinks green. The BUMP and CAL LEDs both light up orange.</p>

6 Once communication is established, the gas name set on the gas monitor (sold separately) is displayed on the LCD.



PC screen	LCD display
<p>The icon is displayed for the model connected to the PC.</p>	<p>Once communication is established, [TRANSMIT] is displayed.</p> <p>LED display</p> <p>The CHARGE LED blinks green. The BUMP and CAL LEDs both blink orange.</p>

7 To register information on the gas cylinders to be used, click [Cylinders] on the PC screen.

PC screen	LCD display
<p>—</p>	<p>—</p> <p>LED display</p> <p>—</p>

8

The cylinder screen is displayed. Enter information on the cylinders to be used and the connection status of the cylinders and inlets.

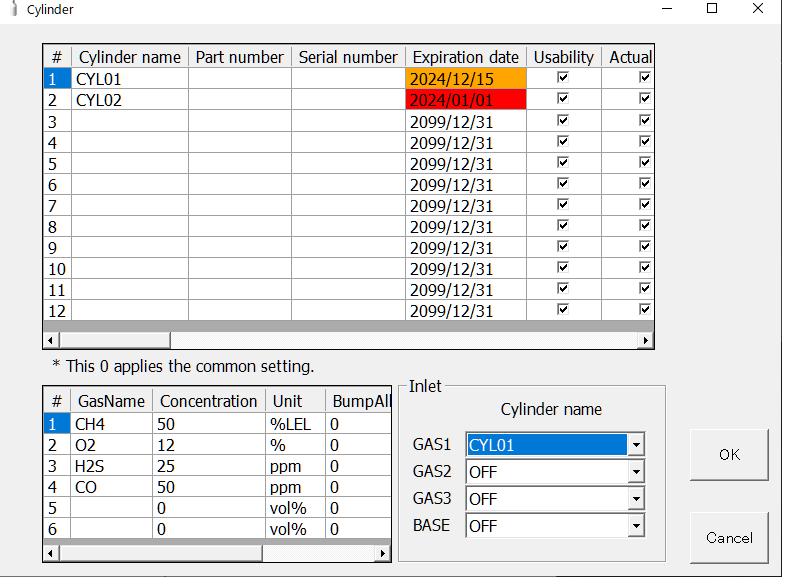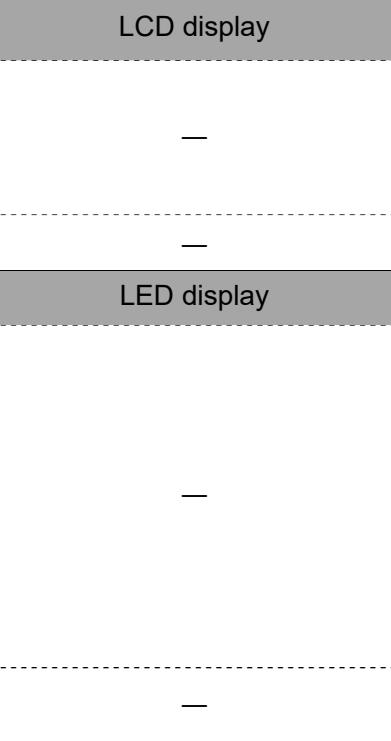PC screen							LCD display	
 <p>The PC screen displays a table of cylinders with columns: #, Cylinder name, Part number, Serial number, Expiration date, Usability, and Actual. The table shows 12 rows, with rows 1 and 2 highlighted in orange and red respectively. A note below the table states: * This 0 applies the common setting. Below the table is a table of inlets with columns: #, GasName, Concentration, Unit, and BumpAll. The Inlet selection dialog is overlaid on the PC screen, showing a list of cylinders: GAS1 (CYL01), GAS2 (OFF), GAS3 (OFF), and BASE (OFF). Buttons for OK and Cancel are visible.</p>							 <p>The LCD display shows a blank screen with a dashed line indicating the cylinder list area. Below the cylinder list area, a grey bar labeled "LED display" is visible.</p>	


[Expiration]: Red: The expiration date has passed.

[Expiration]: Orange: Less than 10 days remain until the expiration date.

[Expiration]: Orange: 10 days or more remain until the expiration date.

9


To perform a bump test, click [BUMP] on the PC screen.

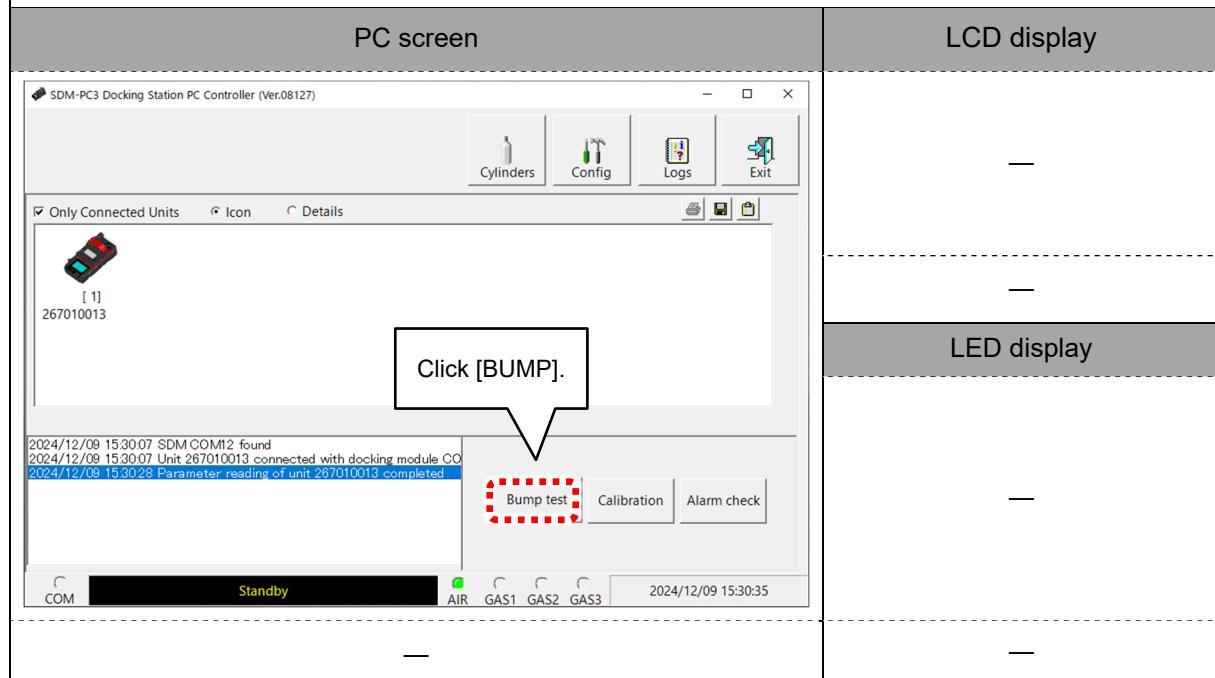


10

The gas order confirmation screen appears.



If other gases are also to be used, select the checkboxes under [GAS2] and [GAS3] as necessary and select the corresponding gases.

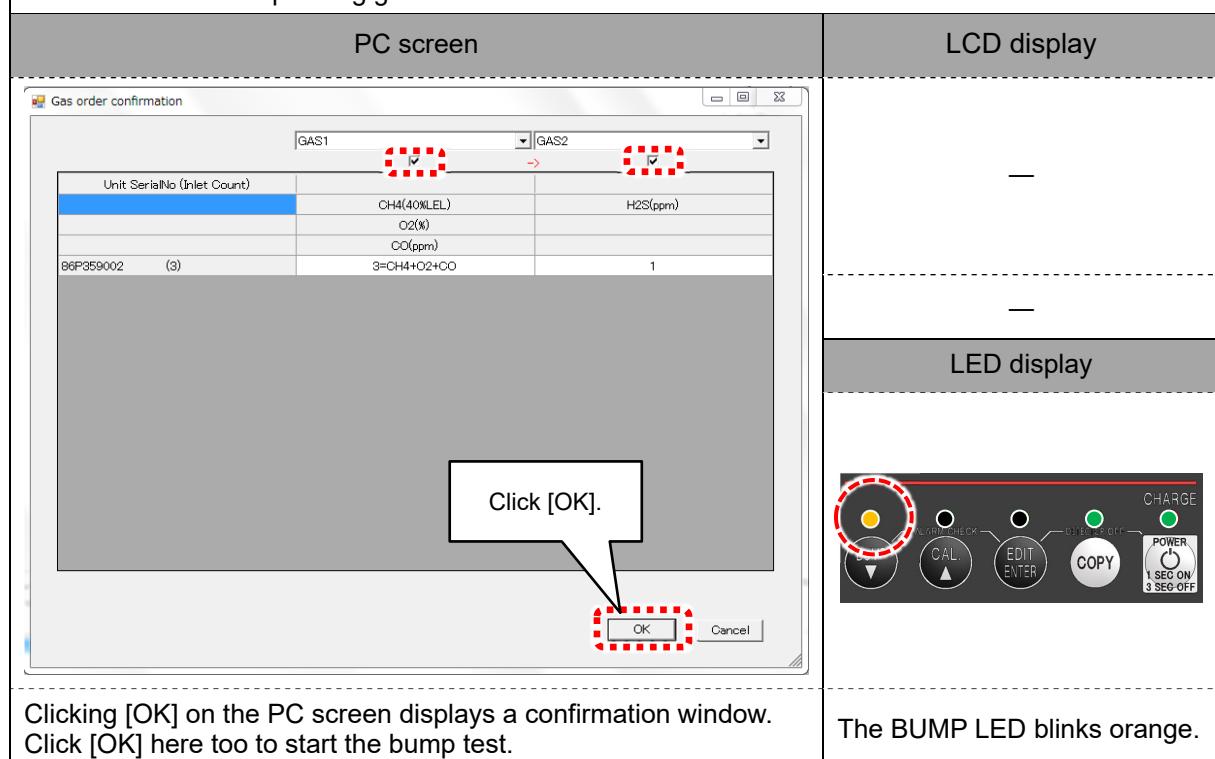



11 To perform gas adjustment, click [Calibration] on the PC screen.

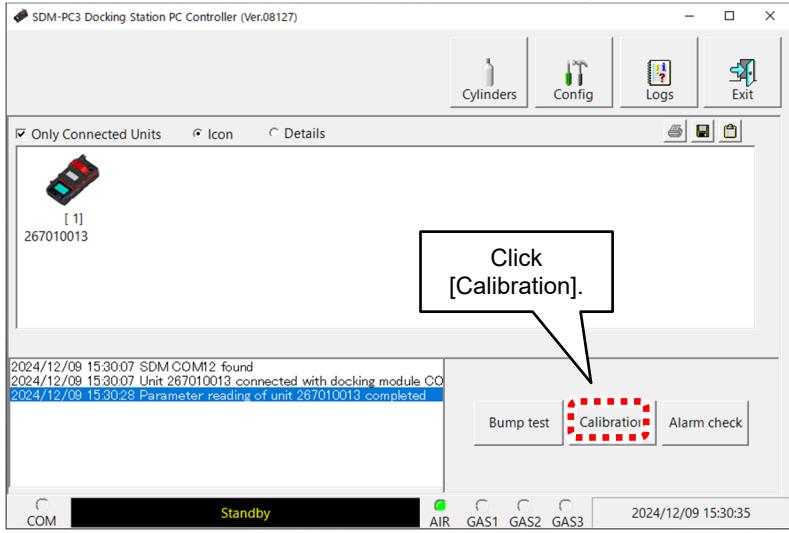PC screen	LCD display
	—
LED display	—

12 The gas order confirmation screen appears. If other gases are also to be used, select the checkboxes under [GAS2] and [GAS3] as necessary and select the corresponding gases.

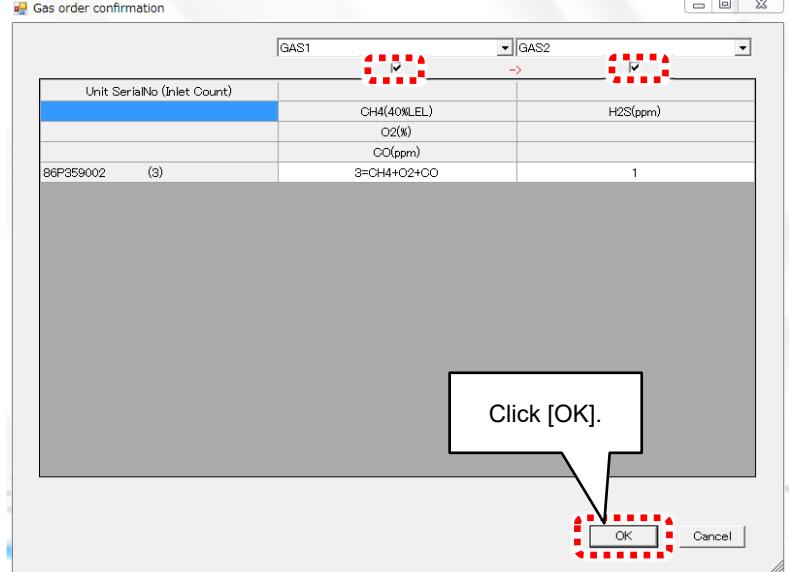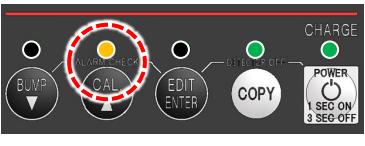PC screen	LCD display
	
Clicking [OK] on the PC screen displays a confirmation window. Click [OK] here too to start gas adjustment.	The CAL LED blinks orange.


13 The results are displayed. (Bump test)

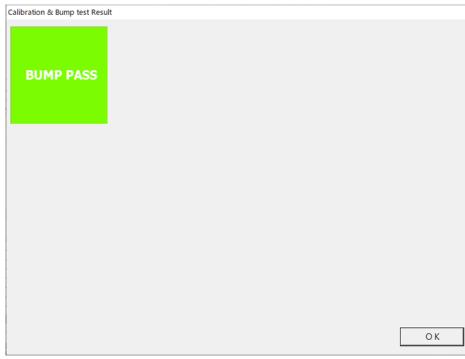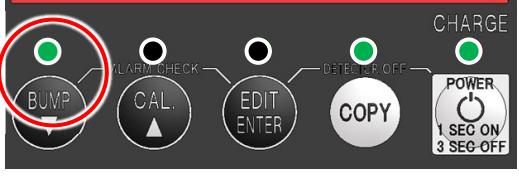PC screen	LCD display
	—
[BUMP PASS] is displayed if all bump tests were successful.	<p>The BUMP LED lights up green if all bump tests were successful. * The LED lights up red if even one bump test failed.</p> 


14 The results are displayed. (Gas adjustment)

PC screen	LCD display
	—
[CAL. PASS] is displayed if all gas adjustments were successful.	<p>The CAL LED lights up green if all gas adjustments were successful. * The LED lights up red if even one gas adjustment failed.</p> 

15 To perform an alarm check, click [Alarm check] to display a confirmation window. Click [OK] here.

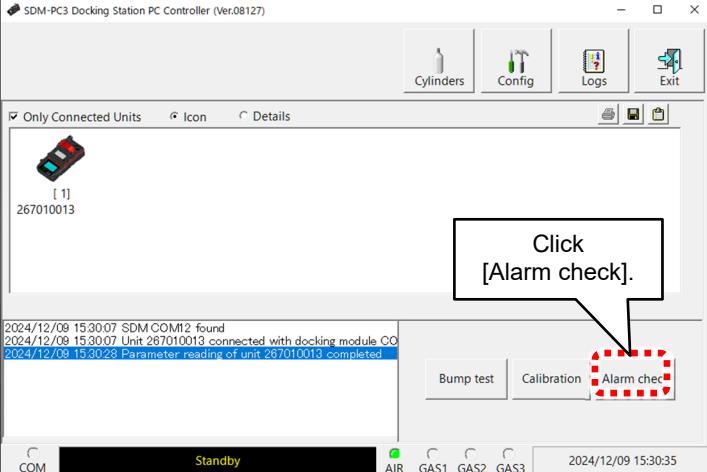PC screen	LCD display
 <p>The alarm check starts.</p>	 <p>The EDIT/ENTER LED blinks orange.</p>

16 Once the alarm check ends, the result screen is displayed, and the product LED changes from blinking orange to green.

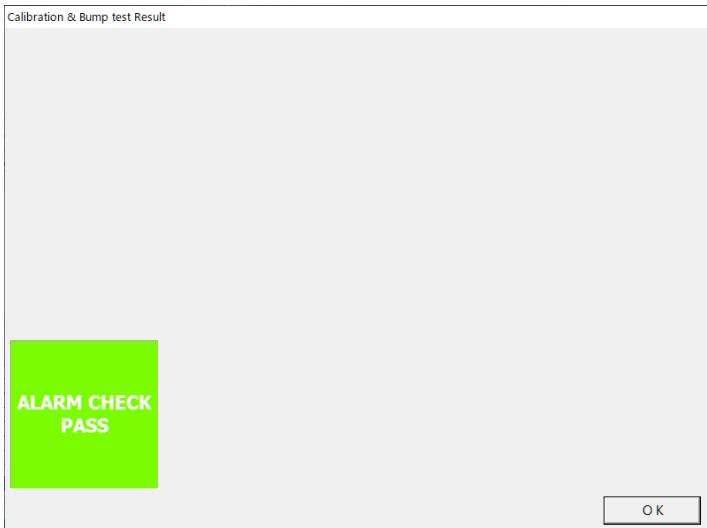
PC screen	LCD display
 <p>[ALARM CHECK PASS] is displayed if the alarm check was successful.</p>	 <p>The alarm lamp flashes in red.</p> <p>The EDIT/ENTER LED lights up green if the alarm check was successful. * The LED lights up red if the alarm check failed.</p>

4-6-2. Creating a calibration certificate


Procedure

PC screen display


- 1 Turn on the product, then connect to the PC.
- 2 Once the PC is connected, click [Logs] on the screen.

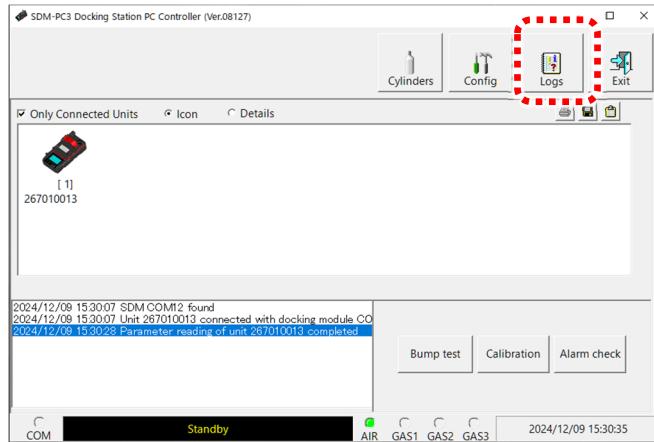


- 3 On the PC screen, click the instrument number for the gas monitor (sold separately) for which a report is to be created.

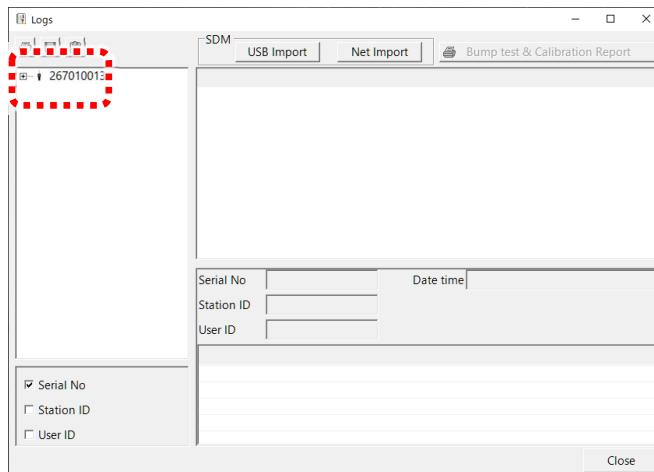


- 4 Click [Calibration] on the PC screen.

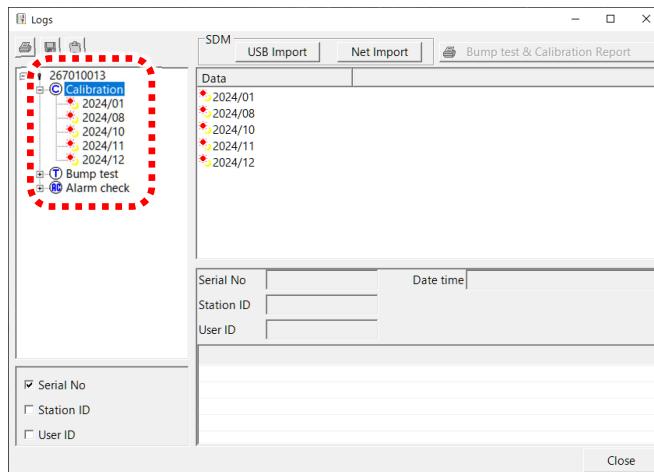


5 Click the date.
Displays the details of operations performed on that date.

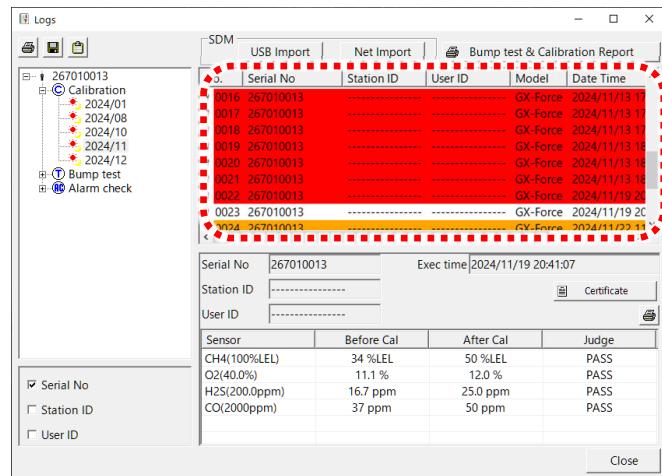

6 Select the operations to be included in the certificate, then click [Certificate].

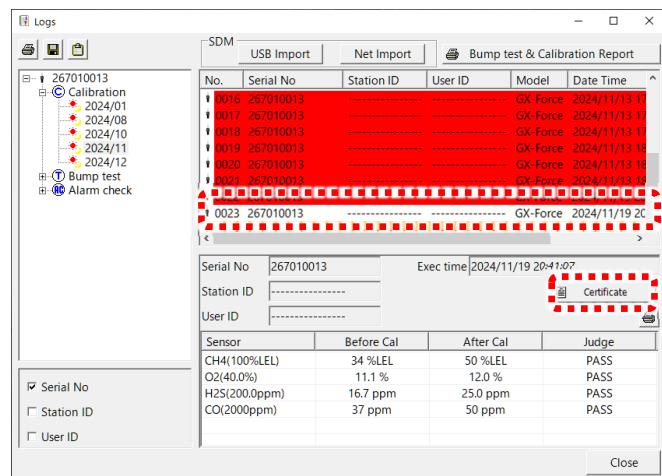

7 Check the details, then select the language (English, Portuguese, or Japanese). Click the printer icon to print using the printer set as [Default] in Windows (default setting).

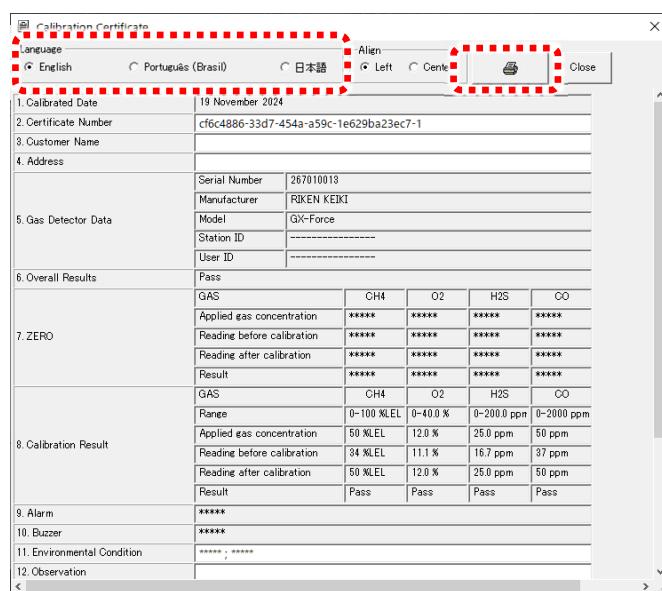

4-7. Turning off the power

NOTE

- The power can be turned off only when the product is not communicating with the gas monitor (sold separately).

- The power for the gas monitor (sold separately) can be turned off as follows:

<When operating the buttons on the product (independently)>

With the main screen or test result screen displayed, hold down the POWER button and EDIT/ENTER button together on the product for three seconds to turn off the power for the gas monitor (sold separately).

The power for the gas monitor (sold separately) also turns off automatically if no buttons are operated for more than 10 minutes with the main screen or test result screen displayed.

<When using the PC Controller Program (sold separately)>

Right-click the gas monitor (sold separately) icon in the PC Controller Program (sold separately), then select [Power off] to turn off the power for the gas monitor (sold separately).

The power for the gas monitor (sold separately) also turns off automatically if no operation is performed on the main screen for one hour.

Hold down the POWER button on the product for three seconds to turn off the power for the product.

5

Maintenance

The product is a precision device.

Maintain and inspect the product at regular intervals to ensure product performance and improve gas leak detection reliability.

5-1. Maintenance intervals and maintenance items

Maintain the following items at regular intervals before use:

- Daily maintenance (Pre-work checks): Perform maintenance before commencing work.
- Regular maintenance: Request maintenance at least once a year to ensure product performance.

Maintenance item	Maintenance details	Daily maintenance	Regular maintenance
Filter check	Check to confirm that the cylindrical filter is not dirty or clogged.	<input type="radio"/>	<input type="radio"/>
Gas	Check to confirm that the calibration gas cans are correctly connected and that they have residual pressure.	<input type="radio"/>	<input type="radio"/>

Maintenance service

RIKEN KEIKI provides services related to regular maintenance, adjustment, and servicing.

Our certified service engineers have expert knowledge of the dedicated tools used for these services, along with expertise in products. We recommend taking advantage of our maintenance service to ensure safe use of the product.

The major maintenance service items are as follows. For more information, contact RIKEN KEIKI.

<Main service details>

Item	Description
Filter check	Checks the cylindrical filter for contamination and clogging. Replacement if dirty or clogged
Product cleaning and repair (Visual inspection)	Checks the product exterior for dirt and cleaning/repairing of visible areas. Replace parts if cracked or damaged.
Product operation check	Checks operation of individual functions using buttons and checking parameters.
Consumable part replacement	Replacing tubes, cylindrical filter, and other consumable parts

5-2. Cleaning instructions

Clean the product if it becomes excessively dirty. Be sure to turn off the power before cleaning, and wipe clean using a cloth. Do not clean using water or organic solvents for cleaning, as these may cause the product to malfunction.



CAUTION

- Do not use water or organic solvents such as alcohol or benzine when wiping the product. These may discolor or damage the surface of the product.

5-3. Parts replacement

5-3-1. Periodic replacement parts

The consumable parts of the product are listed below. Consumable parts should be replaced using the recommended replacement intervals as a guide.

<Recommended replacement parts list>

Name		Part No.	Recommended check interval	Recommended replacement interval	Remarks
①	Tube (Tygon)	1680 0255 10	6 months	3 to 8 years	*
②	Tube (Tygon)	1680 1355 20	6 months	3 to 8 years	*
③	Tube (polyurethane)	1836 9420 10	6 months	3 to 8 years	*
④	Pump unit (RP-12)	4181 0610 30	6 months	1 to 2 years	*
⑤	Cylindrical filter (CF-8369)	4383 0690 90	6 months	6 months to 1 year	
⑥	Tube (polyurethane)	4395 4424 80	6 months	3 to 8 years	
⑦	Rubber seal	4395 4743 00	6 months	3 to 6 years	*
⑧	Capillary tube	4395 4797 40	6 months	3 to 8 years	*

* A functional check by a qualified service engineer is required after replacement. To ensure safety and the stable operation of the product, request checking by a qualified service engineer. Contact RIKEN KEIKI to request checking.

NOTE

The above replacement intervals are guidelines only. Replacement intervals may vary depending on actual operating conditions. These intervals do not constitute warranty periods. Replacement intervals may vary depending on the results of regular maintenance.


5-3-2. Replacing the cylindrical filter (dust filter)

The cylindrical filter may become dirty and clogged with continued use.

Replace the filter if it appears especially dirty.

Also replace the filter if water has been sucked in or the flow rate drops.

When replacing the filter, replace both the filter and the tube if you notice any abnormalities in the tube, including deformation, discoloration, or cracking.

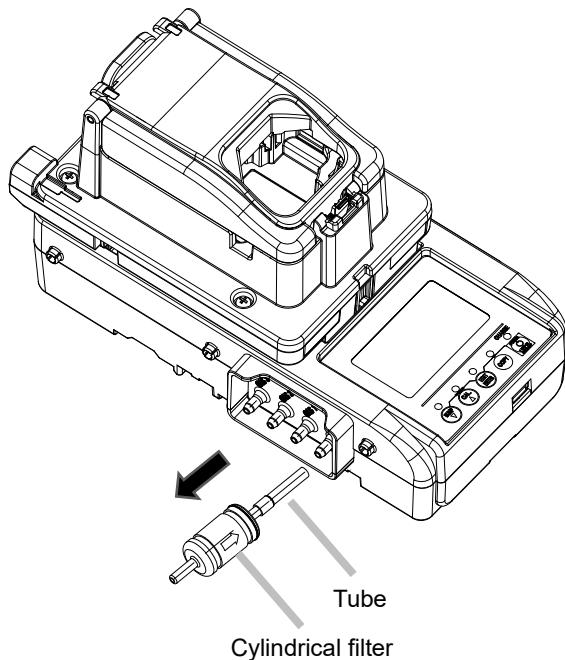

Remove the cylindrical filter attached to the AIR inlet on the side of the product, then attach a new filter aligning the direction of the engraved arrow.

5-4. Portable gas monitor maintenance

For information on the portable gas monitor operating instructions and handling precautions, refer to the 04 Series Portable Gas Monitor Operating Manual (PT0E-189).

6

Storage and Disposal

6-1. Procedures for storage or when not in use for extended periods

The product must be stored in the following environment:

- At normal temperature and humidity in a location not exposed to direct sunlight
- In a location free of gases, solvents, and vapors

Store the product in its shipping carton if this has been retained.

If the shipping carton is not available, store away from dust and dirt.

6-2. Product disposal

Dispose of the product as industrial waste (incombustible) in accordance with local regulations.

6-3. Disposing of gas cylinders

Dispose of the gas cylinders as industrial waste (incombustible) in accordance with local regulations.

Troubleshooting

This troubleshooting chapter does not cover the causes of all possible product malfunctions. It provides brief explanations to assist in determining the causes of common problems. If you encounter symptoms not addressed here or if problems persist even after taking corrective action, contact RIKEN KEIKI.

Symptom <Display>	Cause	Action
The power cannot be turned on.	The AC power supply is not correctly connected or the AC power supply voltage is below the stipulated rating.	Check the AC power supply socket connection. Check to confirm that the AC adapter is correctly connected to the product. If no problem is identified, contact RIKEN KEIKI.
	The POWER button was held down for too short or too long a time.	To turn on the power, hold down the POWER button until [SDM-04] appears on the LCD, then release the button.
Abnormal operation	Effects of sudden static electricity noise, etc.	Turn off the power, then turn it back on again.
Fresh air adjustment is not possible.	Fresh air is not being supplied around the product.	Provide fresh air.
	The sensor sensitivity has degraded.	Contact RIKEN KEIKI to request sensor replacement.
Low flow rate alarm indication	Water or oil has been aspirated into the interior.	Check the gas sampling tube to confirm it is not damaged and that no oil or water has been sucked in.
	The filter is clogged.	Check the filter mounting condition and whether it is clogged or twisted.
	The pump is deteriorated.	Contact RIKEN KEIKI to request pump replacement.
	Stored for extended periods out of use (six months or more).	If a low flow rate error is displayed, turn off the power, then turn it back on again (restart). If the problem persists even after repeating this process several times, contact RIKEN KEIKI to request pump replacement.
	Outside operating temperature range	If used outside the operating temperature range, the pump may not operate correctly, causing a low flow rate alarm. Check the usage environment and check the operation again.

Symptom <Display>	Cause	Action
Gas adjustment is not possible. Adjustment error	The calibration gas is not connected correctly to the gas inlet. The gas outlet is blocked.	Check to confirm that the filter is fitted correctly. Check to confirm that the gas outlet piping is not blocked. If no problem is identified, contact RIKEN KEIKI.
Alarm check failed	An abnormality occurred in the detector alarm display.	Perform the alarm check in a quiet location. Also remove the gas monitor from the product, then check the alarm operation of the detector on its own. If no problem is identified, contact RIKEN KEIKI.
	Effects of external light	It may not be possible to correctly detect illumination of the gas monitor alarm lamp due to the effects of external light such as strong sunlight. Check the ambient conditions.
	Ambient noise	It may not be possible to correctly detect the gas monitor buzzer due to the effects of ambient noise. If a calibration station other than this unit (SDM-04 Series) is connected and the alarm sound is checked at the same time, the alarm sound may not be detected normally. Check the ambient conditions.
	04 series protector cover is not installed correctly.	If the 04 series protect cover is not installed correctly, the alarm lamps may not be detected correctly.

<System abnormality>

Fault No.	Cause	Action
E000	• Product (base unit) internal ROM abnormality • Effects of abnormal noise	Contact RIKEN KEIKI.
E010	• Product (base unit) internal RAM abnormality • Effects of abnormal noise	Contact RIKEN KEIKI.
E021	• Product (base unit) internal FLASH abnormality • Effects of abnormal noise	Contact RIKEN KEIKI.
E041	• Product internal communication abnormality • Effects of abnormal noise	Restart the product. If the problem persists, contact RIKEN KEIKI.
E042	• The base unit is incompatible with the type specific unit after updating the firmware.	Update the base unit firmware.
E043	• Product internal solenoid valve failure	Contact RIKEN KEIKI.
E044		
E050	• Product internal clock abnormality • Effects of abnormal noise	Set the date and time. If this symptom occurs frequently, the internal clock battery must be replaced. Contact RIKEN KEIKI.
E062	• A gas monitor (sold separately) not compatible with the product is connected.	Connect a gas monitor (sold separately) compatible with the product.

E070	• Writing to USB flash drive (sold separately) failed.	Reinsert the USB flash drive (sold separately), then try again.
	• Insufficient USB flash drive (sold separately) memory capacity	Increase the free space on the USB flash drive (sold separately) if it is less than 1 MB.
E082	• Product internal LAN function abnormality	Contact RIKEN KEIKI.
E085	• Product internal temperature and humidity sensor abnormality	Contact RIKEN KEIKI.
E100	• Product (type specific unit) internal ROM abnormality • Effects of abnormal noise	Contact RIKEN KEIKI.
E110	• Product (type specific unit) internal RAM abnormality • Effects of abnormal noise	Contact RIKEN KEIKI.
E120	• Product (type specific unit) internal FLASH abnormality • Effects of abnormal noise	Contact RIKEN KEIKI.

Product Specifications

8-1. Specifications list

Model		SDM-04(C1)	SDM-04(C2)	SDM-04(C3)	SDM-04(C4)	SDM-04(C5)		
Number of inlets	AIR	One	One	One	One	One		
	GAS	One (GAS1)	Two (GAS1, GAS2)	Three (GAS1, GAS2, GAS3)	Two (GAS1, GAS3)	One (GAS3)		
Compatible gas detector		OX-04G, OX-04, CO-04, CO-04(C-), CX-04, HS-04			OX-04G, OX-04, CO-04, CO-04(C-), CX-04, HS-04			
		SC-04(SO ₂), SC-04(NO ₂), SC-04(HCN), SC-04(PH ₃), SC-04(NH ₃)						
Display		LCD digital (full dot)						
Display languages		Japanese, English, Korean, Chinese (Simplified, Traditional), Vietnamese, German, French, Spanish, Portuguese, Italian, Polish, Czech, Slovak, Romanian, Turkish, Russian						
Status display		LED (Green, orange, red /Steady light, blinking)						
Interface		USB (for USB flash device, PC communication), LAN						
PC communication		Wired connection (USB cable, LAN cable)						
Maximum data storage capacity		Up to 500 items (bump test, gas adjustment, alarm check)						
Input power supply		Main unit input: 5.2 V DC Accessory AC adapter input: 100 to 240 V AC, 50/60 Hz						
Memory capacity		1 MB						
Operating temperature range**		0 to +40 °C (no sudden changes)						
Operating humidity range		0 to 95 %RH (no condensation)						
External dimensions		Approx. 130 mm (W) × 150mm (H) × 272 mm (D) (excluding projections)						
Weight		Approx. 1.1 kg						

*When SO₂, NO₂, HCN, PH₃, or NH₃ is used for the bump test and calibration, gas must be aspirated from the gas inlet GAS3.

Therefore, gas monitors SC-04 (SO₂), SC-04 (NO₂), SC-04 (HCN), SC-04 (PH₃), and SC-04 (NH₃) cannot be used with SDM-04(C1) and SDM-04(C2). Be sure to use SDM-04(C3), SDM-04(C4) or SDM-04(C5) with GAS3 enabled.

**When SO₂, NO₂, or NH₃ is used for the bump test and calibration: +10 to 40 °C (no sudden changes)

8-2. Accessory list

Accessories

Part name	Part No.
Cylindrical filter	4383 0690 90
Tube (approx. 40 mm)	4395 4424 80
AC adapter	2594 1759 80
Connecting fixture (set of 2)	4395 9166 40

Optional accessories

Part name	Part No.
Connecting fixture (set of 2)	4395 9166 40
Wall mounting fixture (set of 2)	4395 9165 70
Exhaust tube (2 m)	4395 4442 10
Exhaust tube (5 m)	4395 4444 60
AV jack cap (for LAN connector)	0800 0941 50
AU plug	2594 1434 20
EU plug	2594 1435 00
UK plug	2594 1436 70
USB flash drive	2594 1084 30
USB cable	2440 3321 10
LAN cable (shielded)	2440 3330 20
PC Controller Program (SW-SDM-PC3(EX))	9812 0110 50
Noise reduction cover	4395 4835 90

Revision history

Issue	Revision	Issue date
0	First issue	January 27, 2025



EU-Declaration of Conformity

Document No. 320CE24124



We, RIKEN KEIKI Co., Ltd. 2-7-6, Azusawa, Itabashi-ku, Tokyo, 174-8744, Japan declare under our sole responsibility that the following product conforms to all the relevant provisions.

Product Name Bump and Gas Calibration station
Model SDM-Force, SDM-GW3, SDM-04

Council Directives	Applicable Standards
EMC Directive (2014/30/EU)	EN 61000-6-4:2007+A1:2011 EN 61000-6-2:2005/AC:2005
RE Directive (2014/53/EU)	EN 301 489-1 V2.2.3 EN 301 489-17 V3.2.4 EN 300 328 V2.2.2 EN 62479:2010
BATTERY Regulation ((EU)2023/1542)	-
RoHS Directive (2011/65/EU) ^[1]	EN IEC 63000:2018

^[1]Including substances added by Commission Delegated Directive (EU) 2015/863

Place: Tokyo, Japan

Date: Jan. 27, 2025

Takakura Toshiyuki
General manager
Quality Control Center